



Color TV

Directions for Use



Important!
Return your
Warranty
Registration Card
within 10 days.
See why inside.

Need help? Call us!

Philips representatives are ready to help you with any questions about your new product. We can guide you through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!

**CALL US BEFORE YOU CONSIDER
RETURNING THE PRODUCT.**

1-800-531-0039

or

**Visit us on the web at
www.philips.com**

Let's make things better.



PHILIPS

Return your **Warranty Registration** card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.



Congratulations on your purchase, and welcome to the "family!"

PHILIPS

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS product.

Sincerely,

Lawrence J. Blanford
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

Know these
safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS Visit our World Wide Web Site at <http://www.philips.com>

IMPORTANT SAFETY INSTRUCTIONS


Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
22. **Battery Usage CAUTION** - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, with + and - aligned as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

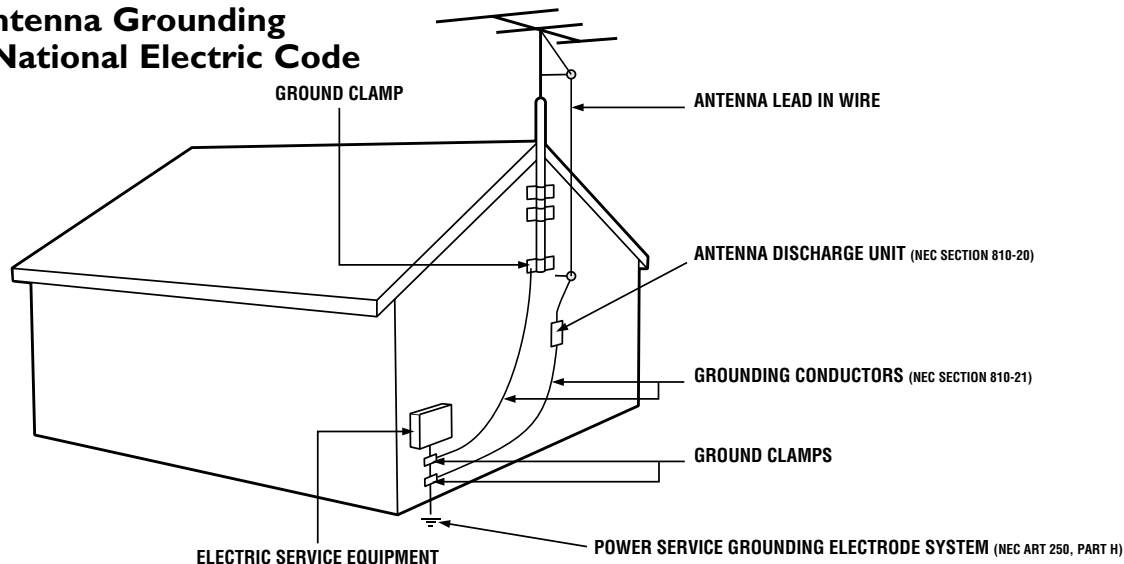

CONTENTS

INTRODUCTION

| | |
|---------------------------------------|-----|
| Welcome/Registration of Your TV | 2 |
| Safety/Precautions | 2-3 |
| Features | 5 |



INSTALL MENU CONTROLS

| | |
|---|----|
| How to use the Language Control | 6 |
| How to use the Tuner Mode Control | 7 |
| How to use the AutoProgram Control | 8 |
| How to Add or Delete Channels (Channel Edit) | 9 |
| How to use the Name Control (Channel Label) | 10 |
| How to see the TV Clock using the AutoChron™ Control .. | 11 |



PICTURE MENU CONTROLS

| | |
|---|----|
| Adjusting the Brightness Control | 12 |
| Adjusting the Color Control | 12 |
| Adjusting the Picture Control | 12 |
| Adjusting the Sharpness Control | 12 |
| Adjusting the Tint Control | 12 |
| How to set the Color Temp Control | 12 |
| How to use the Digital Options Control | 12 |
| How to set the Dyn(amic) Contrast Control | 12 |



SOUND MENU CONTROLS

| | |
|---|----|
| Adjusting the Treble Control | 13 |
| Adjusting the Bass Control | 13 |
| Adjusting the Balance Control | 13 |
| How to use the AVL control | 14 |
| How to use the Incr.(edible) Surround Control | 15 |
| How to set the Stereo Control | 16 |
| How to set the TV to receive Secondary Audio Programming, also known as the SAP Control | 16 |
| How to set the Audio Out Control | 17 |
| How to turn the TV speakers on or off using the Speaker Control | 18 |



FEATURE MENU CONTROLS

| | |
|--|----|
| How to use the Timer controls: | |
| Setting the TV Clock using the Time Control | 19 |
| Setting a time for the TV to turn itself on using the Start Time Control | 20 |
| Setting a time for the TV to turn itself off using the Stop Time Control | 21 |
| Setting the TV to start on a specific channel using the Channel Control | 22 |
| How to activate the controls using the Activate Control .. | 23 |
| How to view the time using the Display Control | 24 |
| How to activate the Active Control™ | 25 |

How to use the AutoLock™ Controls:

| | |
|---|----|
| Understanding the AutoLock™ Feature | 26 |
| Setting up an AutoLock™ Access Code | 27 |
| How to Block Channels | 28 |
| Blocking programming based on Movie Ratings | 29 |
| Blocking programming based on TV Ratings | 30 |
| AutoLock™ Blocking Options - Blocking Control | 31 |
| AutoLock™ Blocking Options - No Rating Control | 32 |
| How to review the AutoLock™ Control Status | 33 |
| How to use the Closed Captioning Control | 34 |
| How to change the screen (size) format using the Format Control | 35 |
| How to use the Rotation Control | 36 |
| How to use the Blue Mute Control | 37 |



REMOTE CONTROL RELATED FEATURES

| | |
|--|-------|
| How to set the Sleep Timer Control | 38 |
| How to Use the Freeze Control | 39 |
| Using the AutoPicture™ Control | 40 |
| Using the AutoSound™ Control | 41 |
| Using the Surf Control (and Alternate Channel) | 42 |
| Using the Remote Control with accessory devices | |
| Direct Access Method | 43 |
| Code-Entry Method | 44 |
| Search Method | 45 |
| Direct-Entry Code list for accessory devices | 46-47 |
| Accessory Specific Remote Control Buttons | 48 |



PIP (PICTURE-IN-PICTURE)

| | |
|---|----|
| Selecting the PIP Signal Source | 49 |
| PIP Features (Remote Control Buttons) | 50 |
| Window Size and Double Window PIP | 51 |
| Adjusting the PIP Color and Tint | 52 |




GENERAL INFORMATION

| | |
|---------------------------------|-------|
| Troubleshooting | 53 |
| Care and Cleaning | 54 |
| Glossary of terms | 55 |
| Index | 56 |
| Factory Service Locations | 57-58 |
| Notes | 59 |
| Limited Warranty | 60 |

QUICK USE AND SETUP GUIDE

Refer to the simple **Quick Use and Setup Guide** (supplied with your TV) for details on the following:

- Basic TV connections
- Advanced TV connections
- Basic TV operation
- Basic Remote Control operation
- Remote Control Button Descriptions

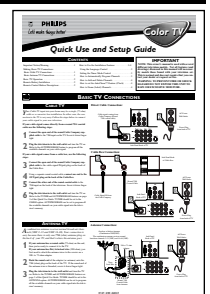

FEATURES

Active Control™ continuously measures and corrects all incoming signals to help provide the best picture quality. This feature monitors and corrects both the sharpness control and noise reduction control.

Audio/Video Jack Panel allows direct connections with VCRs, DVDs, or other devices, providing quality TV picture and sound playback.

Audio Volume Leveler (AVL) Control keeps the TV sound at an even level. Peaks and valleys that occur during program changes or commercial breaks are reduced, making for a more consistent, comfortable sound.

AutoChron™ automatically sets the right time of day and maintains it with digital precision through brownouts, power failures, and even Daylight Savings Time adjustments.

AutoLock™ allows you to block the viewing of certain channels or programs with certain ratings if you do not want your children to view inappropriate materials.

Auto Programming scans (when activated) for all available channels from regular antenna or cable signals and stores only active broadcast stations in the TV's memory.

AutoPicture™ allows you to change the picture settings (color, tint, contrast, etc.) for various types of programming, such as sports, movies, multimedia (games), or weak signals with the push of one button.

AutoSound™ allows you to select from three factory-set controls and a personal control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls (Voice, Music, and Theatre) enable you to tailor the TV sound so as to enhance the particular programming you are watching.

Channel Edit allows you to add or delete channels from the list stored in the TV's memory. Channel Edit makes it easy to limit or expand the number of channels that are available to you when you press the Channel (+) or (-) buttons on your remote control.

Closed Captioning allows the viewer to read TV program dialogue or voice conversations as onscreen text.

Dynamic Contrast helps to sharpen the picture quality by improving the contrast between the darkest and brightest parts of the picture.

Eye Fidelity (also known as Digital Options) give a choice of two different scanning technics – Progressive Scan or Interlaced. Progressive Scan doubles the number of visible lines per field by displaying all picture frame lines at once, eliminating any picture flicker. The Interlaced mode provides a double vertical display scan, which reduces annoying motion sweeps. The Interlaced mode will also smooth out the jagged lines sometimes seen on the edges of curved or angled surfaces.

Infrared Remote Control works your TV and other remote-controlled devices, such as VCRs, DVD players, cable converters, and satellite receivers.

Onscreen Menu shows helpful messages and instructions for setting TV feature controls (can be viewed in English, French, or Spanish).

Sleep Timer automatically turns the TV OFF after a set amount of time that you choose.

Standard Broadcast (VHF/UHF) or Cable TV (CATV) channel capability allows for viewing by antenna or cable.

Stereo capability, including a built-in audio amplifier and twin-speaker system, allows for the reception of TV programs broadcast in stereo sound.

Surf Button allows you to easily switch among only the channels that are of interest to you (the ones that you have programmed into the TV's Surf control through the onscreen menu).

Timer allows you to set your TV to turn itself ON and OFF once or daily like an alarm clock.

Items Included with This TV

As you unpack your TV, please note that this *Directions for Use* manual contains safety-tip information and **Factory Service Center locations, as well as a Warranty Registration Card, remote control, and batteries for use with the remote control.**

Please take a few minutes to complete your registration card. The serial number for the TV is on the rear of the set. Refer to the back of this manual for instructions in the cleaning and care of the TV.

END-OF-LIFE DISPOSAL

Your new television and its packing contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and minimize the amounts that need to be properly disposed.

Your product also uses batteries that should not be thrown away when depleted, but should be handed in and disposed of as small chemical waste.

When you replace your existing equipment, please find out about the local regulations regarding disposal of your old television, batteries, and packing materials.



As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.

Active Control, APAC, AutoPicture, AutoSound, AutoChron, and Incredible Surround are trademarks of Philips Consumer Electronics Company. Copyright 2001 Philips Consumer Electronics.

*Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.




HOW TO USE THE LANGUAGE CONTROL

For or Spanish- and French-speaking TV owners, an onscreen LANGUAGE option is present. The LANGUAGE control enables you to set the TV's onscreen menu to be shown in either English, Spanish, or French.

- 1 Press the MENU button** on the remote control to show the onscreen menu.
- 2 Press the CURSOR DOWN button** repeatedly until INSTALL is highlighted.
- 3 Press the CURSOR RIGHT button** to shift the menu to the left and highlight LANGUAGE.
- 4 Press the CURSOR RIGHT button** to highlight the LANGUAGE control options.
- 5 Press the CURSOR UP or CURSOR DOWN button** to select ENGLISH, ESPAÑOL (Spanish), or FRANCAIS (French).
- 6 Press the STATUS/EXIT button** to clear the menu from the screen.

HELPFUL HINT

Remember, the LANGUAGE control makes only the TV's onscreen MENU items appear in English, Spanish, or French text. It does not change the other onscreen text features, such as Closed Captioning (CC), with TV shows.

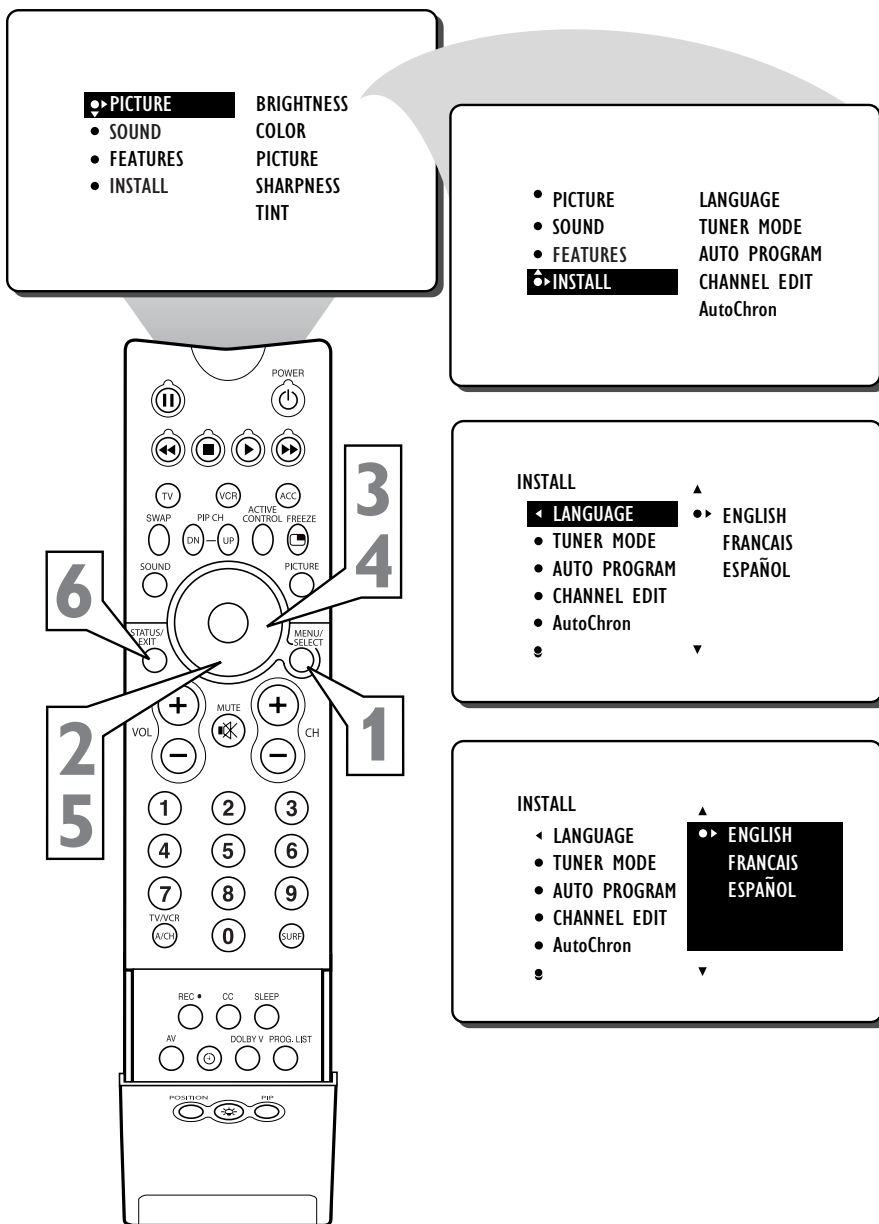


HOW TO USE THE TUNER MODE CONTROL



The **TUNER MODE** feature allows you to change the TV's signal input to **CABLE**, **ANTENNA**, or **AUTO** mode. It's important for the TV to know if you want to receive channels from a cable TV signal or a normal antenna signal.

NOTE: The **AUTO** mode setting helps the TV determine the type of signal or channels being received when **AUTO PROGRAM** is activated.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left.
- 4** Press the **CURSOR DOWN** button once to highlight **TUNER**.
- 5** Press the **CURSOR RIGHT** button to highlight the tuner options.
- 6** With the **TUNER MODE** control set to **AUTO**, Auto Program (see below) will detect whether or not cable input is present.
If, however, you want to set the **TUNER MODE** to **CABLE** or **ANTENNA**, press the **CURSOR UP** or **CURSOR DOWN** button until either **CABLE** or **ANTENNA** is highlighted.
- 7** Press the **STATUS/EXIT** button to clear the menu from the screen.

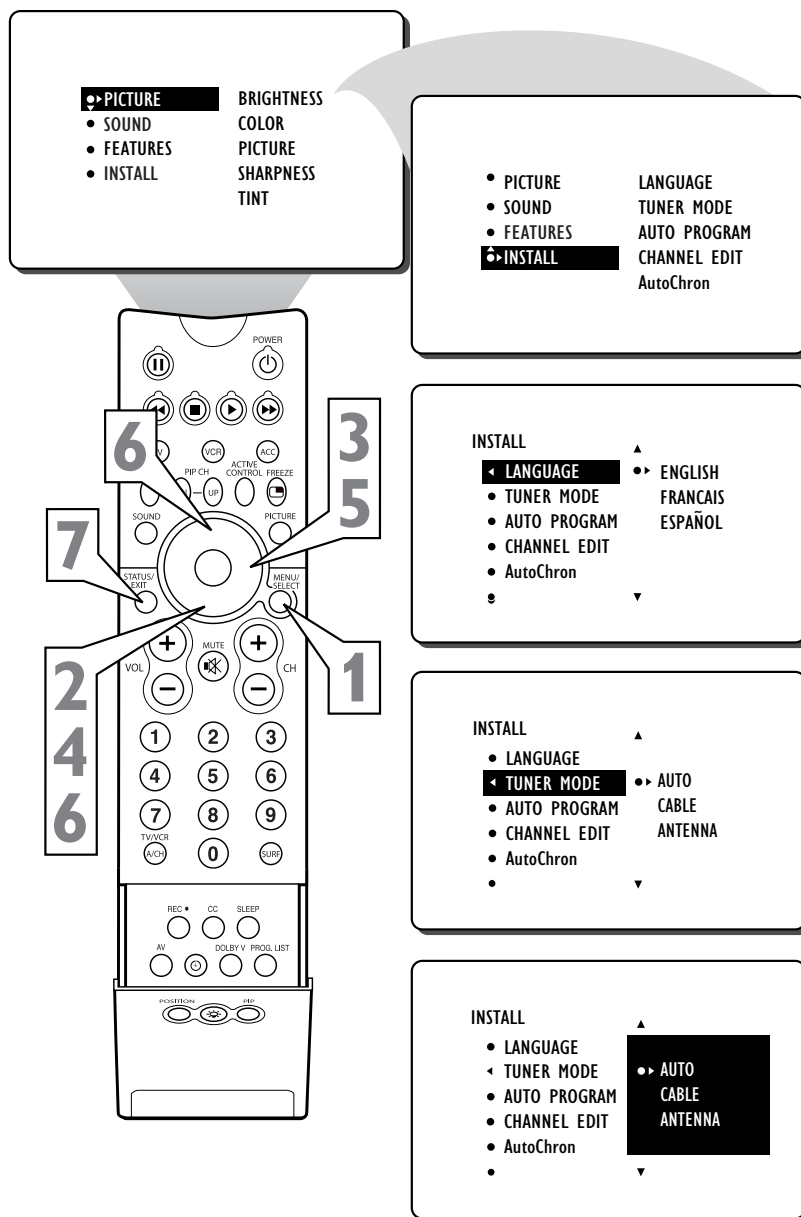

HELPFUL HINT

When **CABLE** is selected, channels 1–125 are available.

When **ANTENNA** is selected, channels 2–69 are available.



HOW TO AUTOMATICALLY PROGRAM CHANNELS


Your TV can automatically set itself for local area (or cable TV) channels. This makes it easy for you to select only the TV stations in your area by pressing the CHANNEL (+) or (-) button.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4 Press the **CURSOR DOWN** button repeatedly until the **AUTO PROGRAM** control is highlighted.
- 5 Press the **CURSOR RIGHT** button to start the Auto Program scanning of channels.
- 6 Press the **STATUS/EXIT** button to clear the menu from the screen.

HELPFUL HINT

After you've run Auto Program, check out the results. Press the CHANNEL (+) or (-) button and see which channels you can select.

Remember, an antenna or cable TV signal must first be connected to your TV (see instructions for making connections on page 1 of this guide).

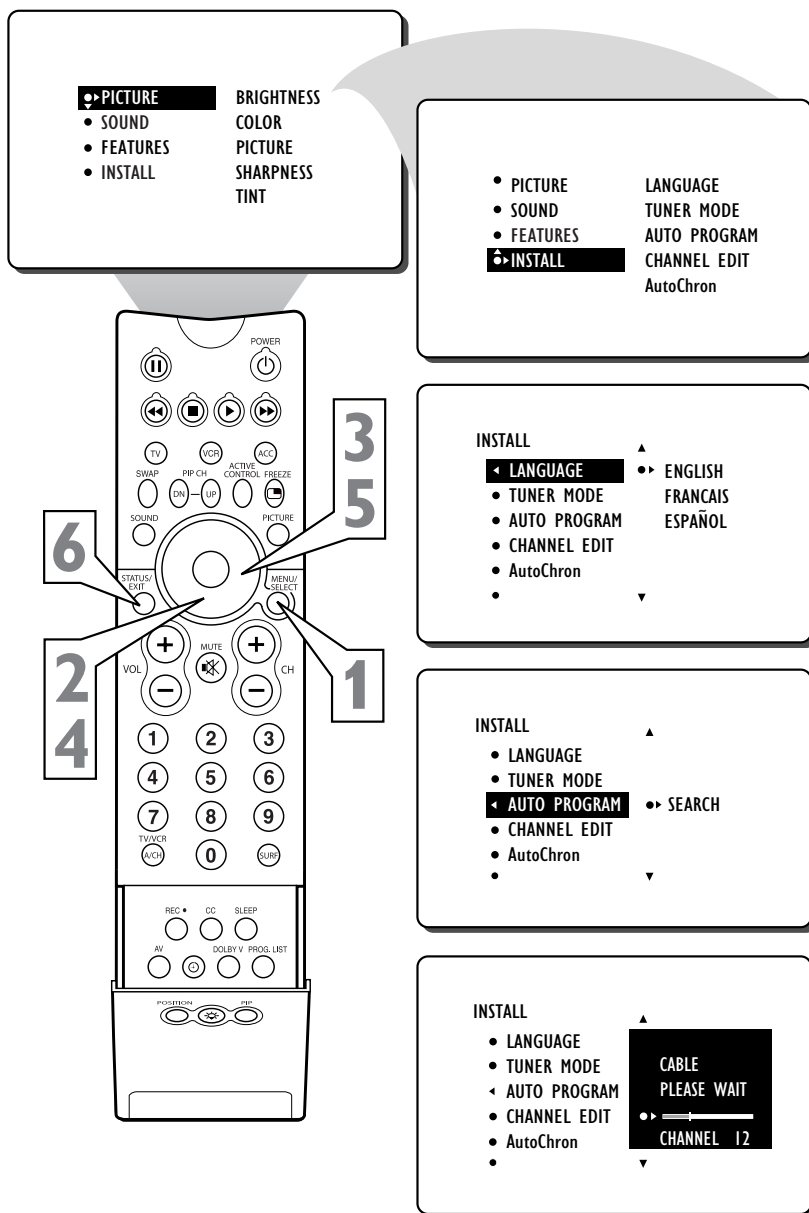

HOW TO ADD OR DELETE CHANNELS




CHANNEL EDIT makes it easy for you to add or delete channels from the list of channels stored in the TV's memory.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4** Press the **CURSOR DOWN** button repeatedly until the **CHANNEL EDIT** control is highlighted.
- 5** Press the **CURSOR RIGHT** button to access the **CHANNEL EDIT** menu.
- 6** Press the **CURSOR UP** or **CURSOR DOWN** button to scroll through the list of available channels. Or press the number buttons on your remote control to select a specific channel (for example, press 0 and then 2 to select channel 2).
- 7** With the channel you want to edit selected, press the **CURSOR RIGHT** button to mark the channel as **SKIPPED**. The channel you've marked **SKIPPED** will not appear when you are changing from channel to channel while watching TV.

NOTE: When you want to add a channel that has been marked **SKIPPED**, press the **CURSOR UP** or **CURSOR DOWN** button to highlight the channel; then press the **CURSOR RIGHT** button to remove the word **SKIPPED**.

HELPFUL HINT

The channels available for you to edit are the ones that the **AUTO PROGRAM** feature found through a search of your TV antenna or cable TV signals. Channels not found during the search are marked **SKIPPED**.

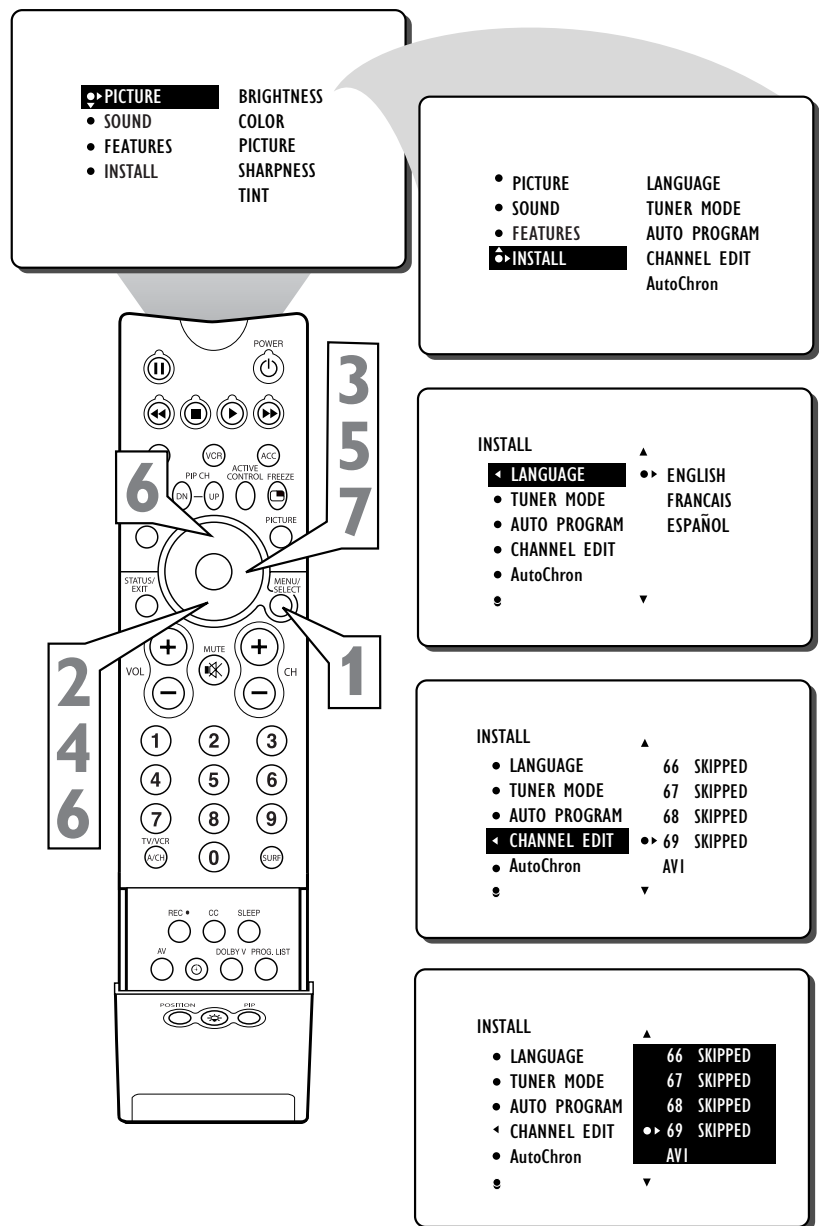




How to AUTOMATICALLY PROGRAM CHANNELS

The channel NAME feature allows you to list the “call” letters of your favorite stations beside their channel numbers when they appear on the screen. The TV has in memory a list of the 50 most popular channel names (for example, ABC, NBC, FOX, etc.). You also can enter a custom name (up to five characters).

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4** Press the **CURSOR DOWN** button repeatedly until the **NAME** control is highlighted.
- 5** Press the **CURSOR RIGHT** button to highlight the **NAME** options area.
- 6** Press the **CURSOR RIGHT** button again; then press the **CURSOR UP** or **CURSOR DOWN** button to scroll through a list of options for the first character (A through Z, 0 through 9). Press the **CURSOR RIGHT** button and repeat for the second, third, fourth, and fifth characters.
- 7** After you have selected a name for the channel, press the **MENU** button to save the name in the TV’s memory.
- 8** Press the **STATUS/EXIT** button to clear the menu from the screen.

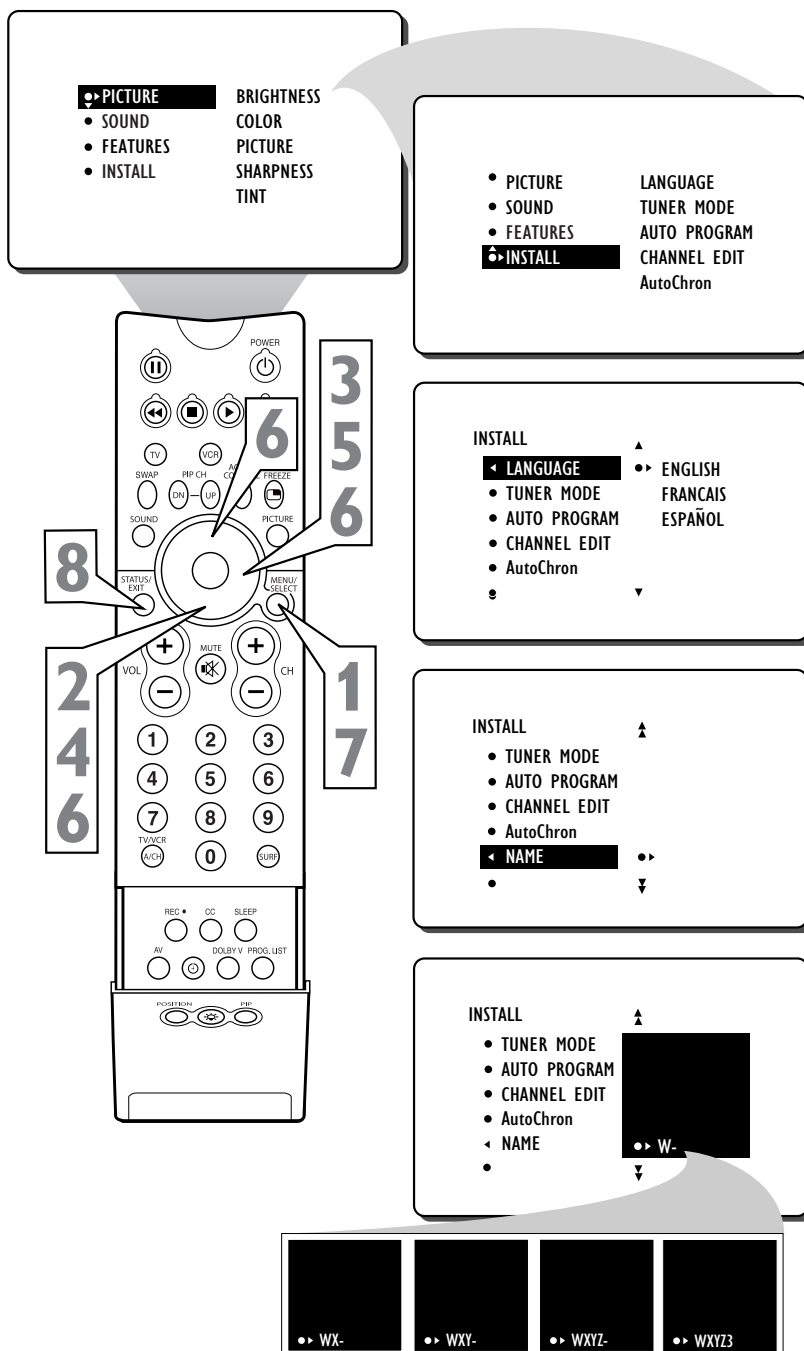

HELPFUL HINT

The five characters that the channel NAME feature allows you to input can be letters, a dash character, or the numbers 0 through 9.


How to SET THE CLOCK WITH AUTOCHRON™



AutoChron™ can automatically set the TV's onscreen clock. Because the time is received from a broadcast signal, you must be sure that a cable TV or antenna signal is present before you attempt to use the AutoChron™ feature.

- 1** Press the **MENU** button on the remote to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4** Press the **CURSOR DOWN** button until the AutoChron control is highlighted.
- 5** Press the **CURSOR RIGHT** button to start the AutoChron™ feature. Then just follow the onscreen instructions to set the clock.
- 6** Press the **CURSOR RIGHT** button to select **AUTO**. Within a few seconds, a menu for choosing your time zone will appear.
- 7** Press the **CURSOR UP** or **CURSOR DOWN** button to highlight your correct time zone.
- 8** With your correct time zone highlighted, press the **CURSOR RIGHT** button. Within a few seconds, you will be given the option to choose whether you want to select Daylight Savings Time.
- 9** Press the **CURSOR UP** or **CURSOR DOWN** button to navigate through the YES and NO selection list; then with the item you want to select highlighted, press the **CURSOR RIGHT** button. Follow the onscreen instructions (shown below) to set the AutoChron™ time either automatically or manually.

Note: When turned ON, the AutoChron™ feature can affect the start up of your television. When the power button is pressed and the AutoChron™ feature is set to the **AUTO** position, the TV will scan the channels for a PBS channel to set the clock automatically. It may take **SEVERAL** seconds before the TV powers itself ON.

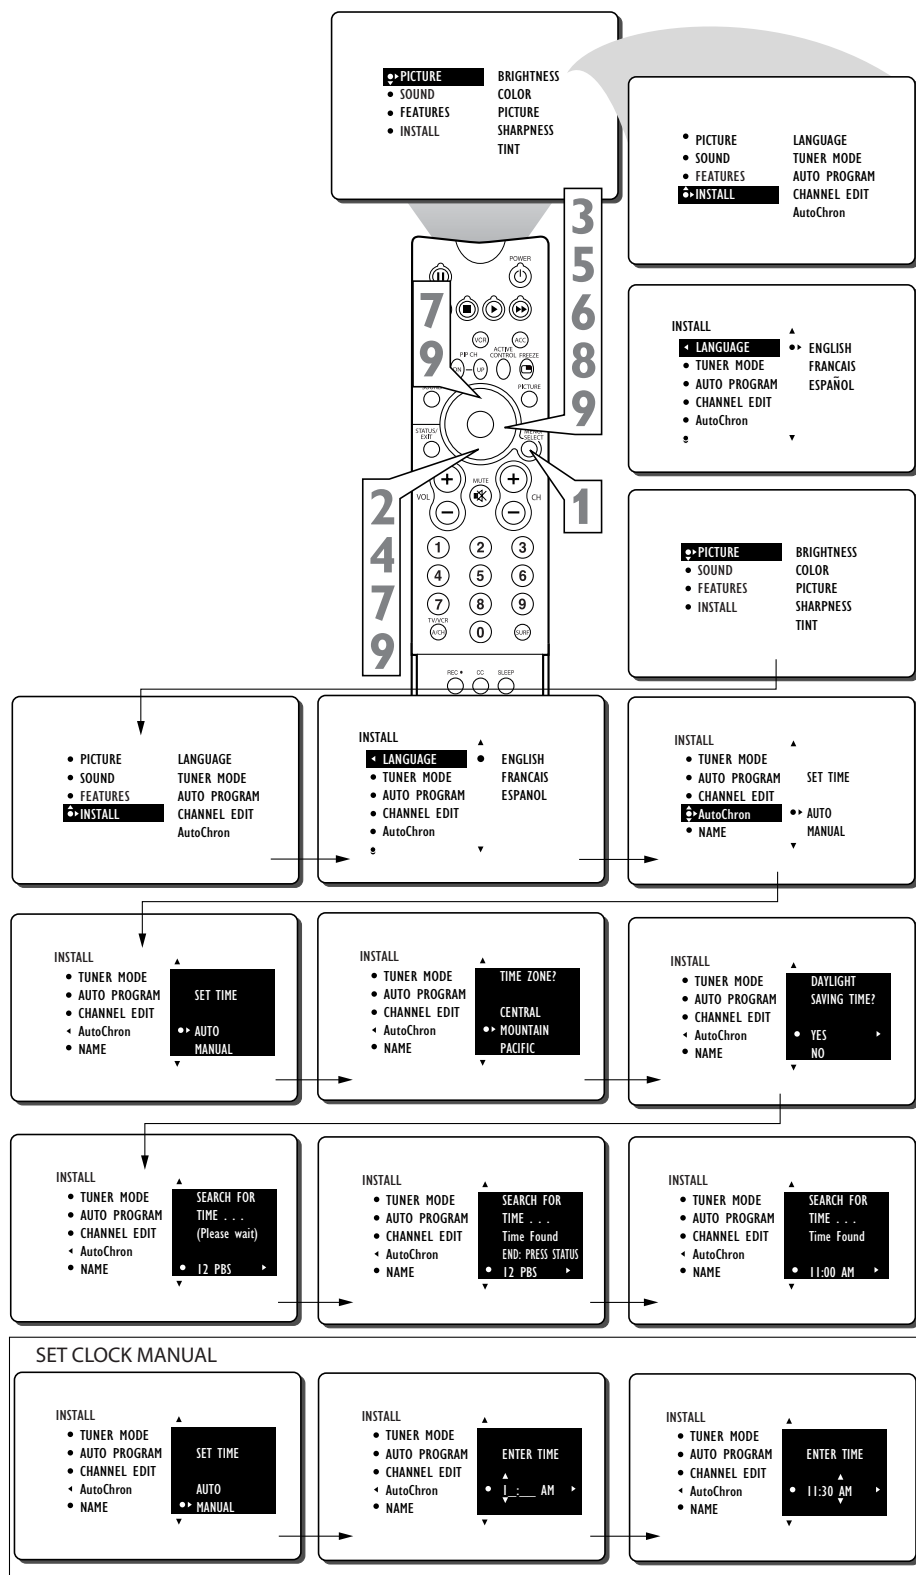



ADJUSTING THE PICTURE CONTROLS

To adjust your TV picture controls, select a channel and follow these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu. PICTURE will be highlighted.
- 2** Press the **CURSOR RIGHT** button and the menu will shift to the left. BRIGHTNESS will be highlighted and an adjustment bar will be shown to the right.
- 3** Use the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the BRIGHTNESS level of the picture.
- 4** After adjusting the BRIGHTNESS control, press the **CURSOR DOWN** button to select another picture adjustment: COLOR, PICTURE, SHARPNESS, TINT, COLOR TEMP, DIGITAL OPTIONS, or DYN(amic) CONTRAST. Press the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the selected control.

NOTE: The menu will show only five items at a time, so you will need to continue scrolling with the CURSOR DOWN button to adjust the COLOR TEMP, DIGITAL OPTIONS, or DYN(amic) CONTRAST.

- 5** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

NOTE: The SHARPNESS and TINT Controls will not be available when tuned to the AV4 Inputs (AV4 Channel) and CVI Inputs (CVI Channel).

BRIGHTNESS – adds or subtracts light from the darkest part of the picture.

COLOR – adds or eliminates color.

PICTURE – improves the detail of the lightest parts of the picture.

SHARPNESS – improves the detail in the picture.

TINT – adjusts the picture to obtain natural skin tones.

COLOR TEMP offers NORMAL, COOL, or WARM picture preferences.

NORMAL – keeps whites, white.

COOL – makes whites, bluish.


WARM – makes whites, reddish.

DIGITAL OPTIONS – Progress Scan or Interlaced 1050i Mode

PROGRESSIVE SCAN – doubles the number of picture lines, eliminating line flicker and providing a jitter-free picture.

INTERLACED 1050i – improves the appearance of onscreen motion. It also helps smooth out jagged lines that are sometimes seen on curved and angled surfaces in the picture.

DYNAMIC CONTRAST – sharpen the picture quality by making dark portions of the picture darker and light portions of the picture more noticeable. Choose MINIMUM, MEDIUM, or MAXIMUM.

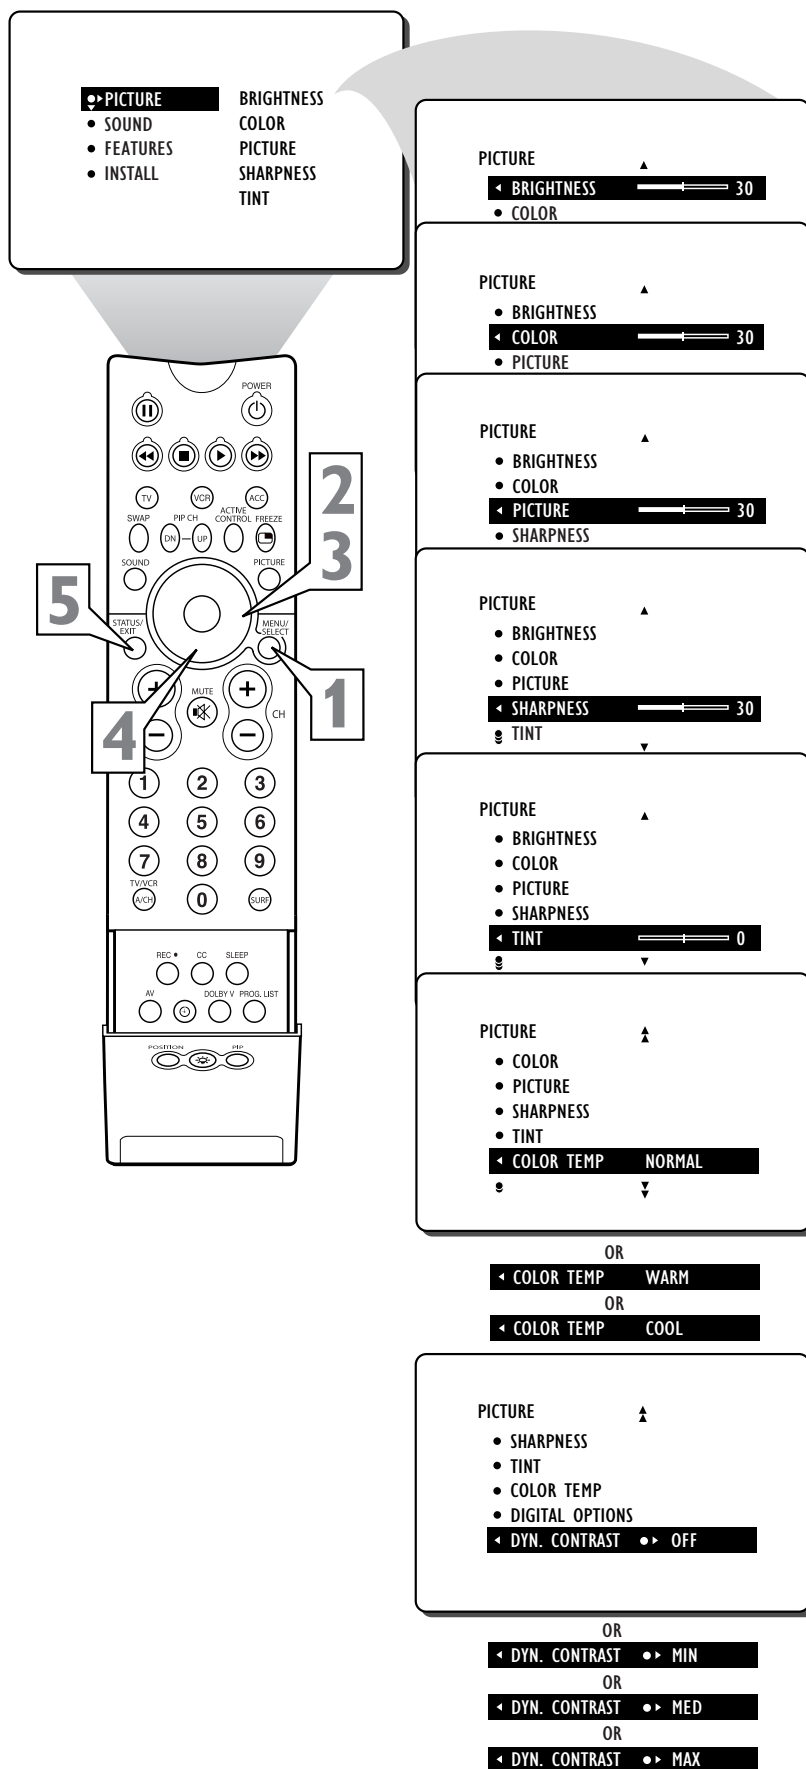


ADJUSTING THE TREBLE, BASS, AND BALANCE CONTROLS



*Besides the normal volume level control, your TV also has individual sound-adjustment controls. The **TREBLE** (high frequency), **BASS** (low frequency), and **Speaker BALANCE** may all be used to adjust the sound playback of TV programs.*

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4** Use the **CURSOR RIGHT** or **CURSOR LEFT** button to adjust the **TREBLE** (high frequency) level of the television's sound.
- 5** After adjusting the **TREBLE** control, press the **CURSOR DOWN** button to select another sound adjustment: **BASS** or **BALANCE**.
- 6** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to adjust the selected control.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

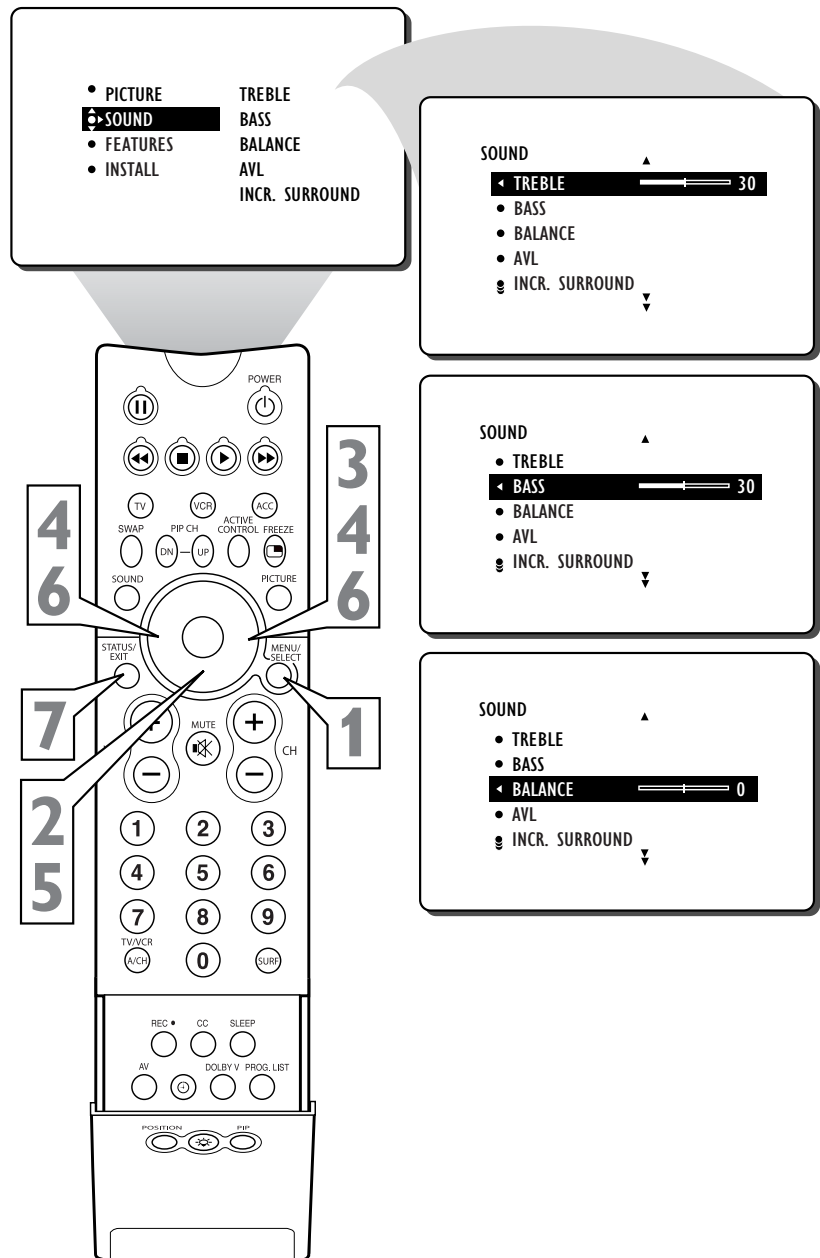

HELPFUL HINT


Remember, when the bar scale is centered, speaker **BALANCE** is centered between the TV's left and right side speakers.



HOW TO USE THE AVL CONTROL

In most cases, the volume levels coming from broadcast programming or commercials are never the same. With the AVL (Audio Volume Leveler) control turned ON, you can have the TV level out sound that is being heard. This makes for a more consistent sound by reducing the peaks and valleys that occur during program changes or commercial breaks. To turn the AVL ON, follow these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight SOUND.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. TREBLE will be highlighted and an adjustment bar will be shown to the right.
- 4** Press the **CURSOR DOWN** button repeatedly until AVL is highlighted.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to toggle AVL ON or OFF.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

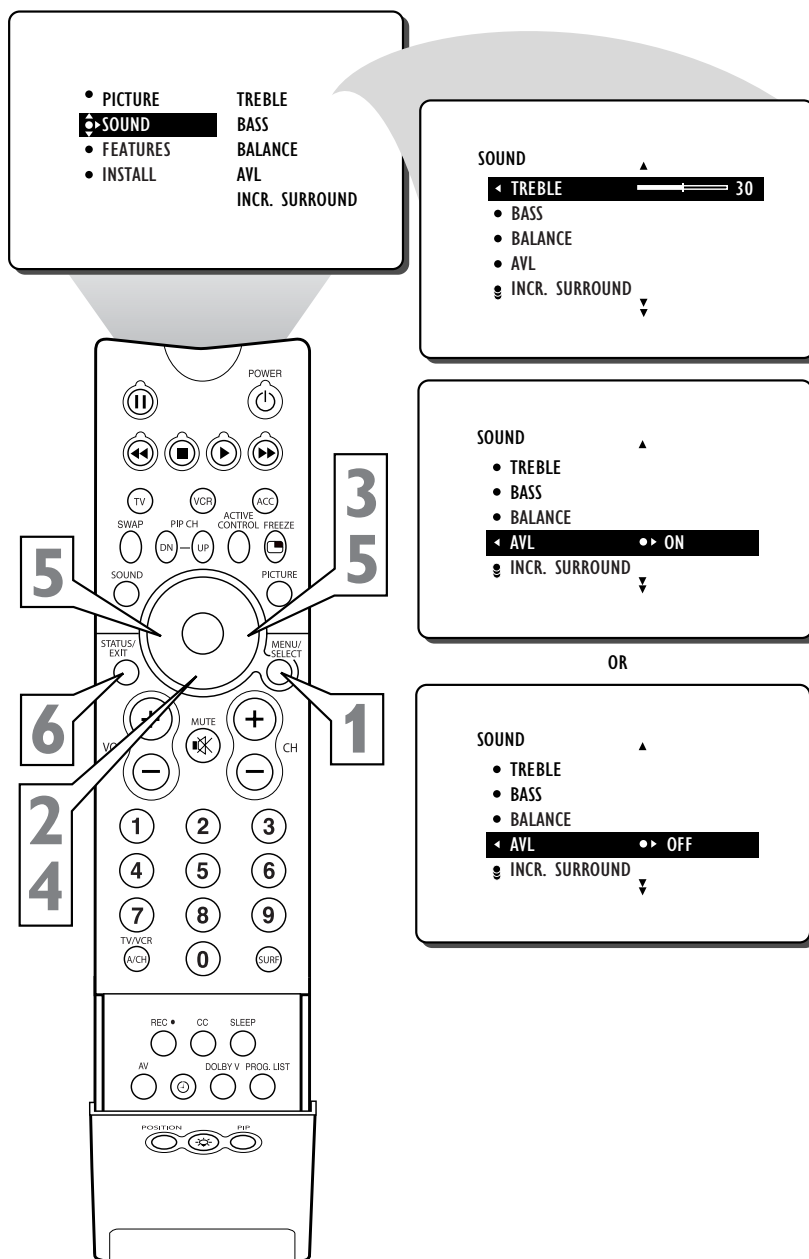

HOW TO USE THE INCREDIBLE SURROUND CONTROL



The Incredible Surround feature adds greater depth and dimension to both monaural (MONO) and stereo TV sound. With the control set to INCR. SURROUND (Incredible Surround), the TV's speakers can add even wider sound separation to normal broadcasts.


- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight SOUND.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. TREBLE will be highlighted and an adjustment bar will be shown to the right.
- 4** Press the **CURSOR DOWN** button repeatedly until INCR. SURROUND is highlighted. (Incredible Surround)
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to toggle the INCR. SURROUND control settings.
 If signal is **Stereo**: Select STEREO, INCR. SURROUND, or DOLBY* VIRTUAL.
 If signal is **MONO**: Select MONO, or SPATIAL.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.
- 7** You can also change the INCR. SURROUND onscreen menu control settings by pressing the **DOLBY V** button on the remote control.

HELPFUL HINT

SPATIAL – widens the sound, simulating a broader, fuller sound.

INCR. SURROUND – widens the sound, simulating a broader, fuller sound.

DOLBY* VIRTUAL (with Virtual Dolby Surround signals) simulates the surround-sound experience from two speakers using Dolby Pro Logic* providing the listener with the sensation of being surrounded by additional speakers.

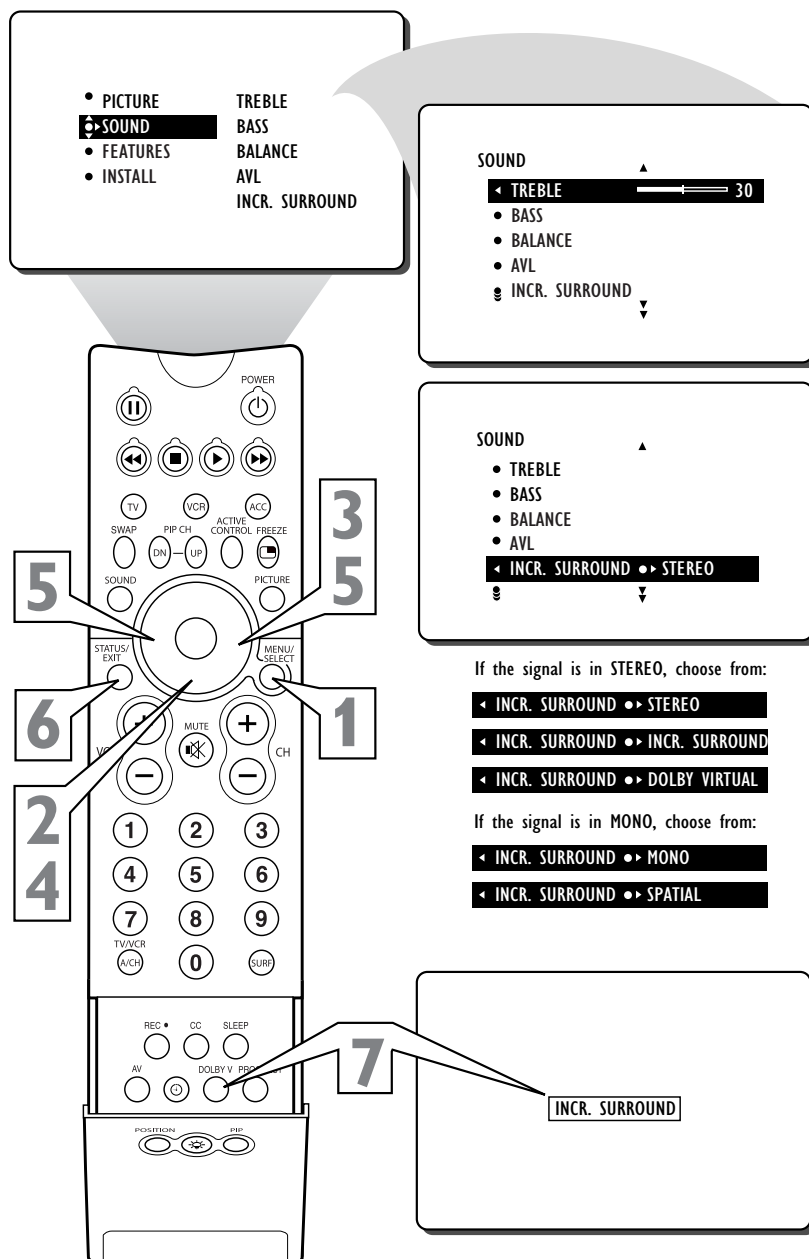

*Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.




HOW TO SET THE STEREO CONTROL

You can receive broadcast stereo TV programs. The TV has both an amplifier and twin speakers through which the stereo sound can be heard.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4** Press the **CURSOR DOWN** button repeatedly until **STEREO** is highlighted.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to select **STEREO** or **MONO**.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT


Remember, if stereo is not present on a selected show and the TV is placed in the **STEREO** mode, the sound coming from the set will remain monaural.

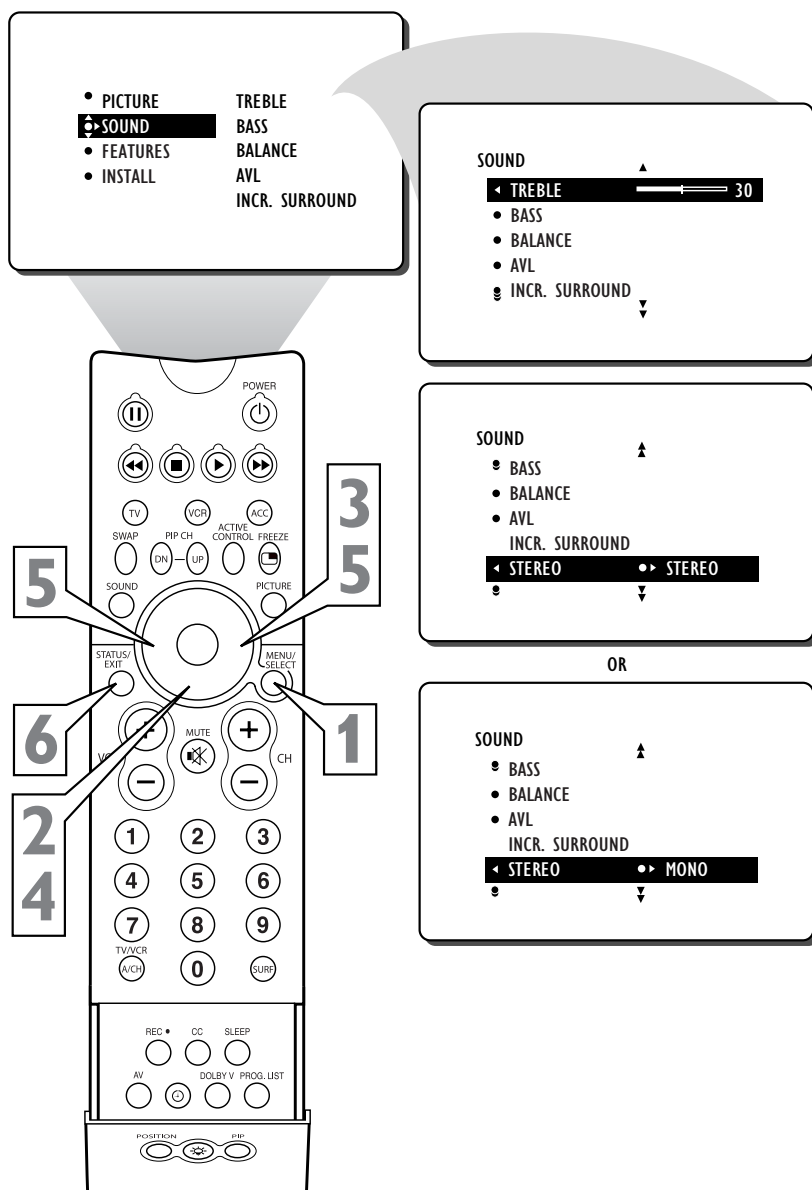

SAP-SECONDARY AUDIO PROGRAM

An SAP is an additional part of the stereo broadcast system. Sent as a third audio channel, an SAP can be heard apart from the current TV program sound. TV stations are free to use SAP for any number of purposes.

If an SAP signal is not present with a selected program, the SAP option cannot be selected. Also, if SAP is selected on a channel (with SAP) and you select another channel, when you return to the original channel, SAP will be OFF. You will have to reselect the SAP feature.

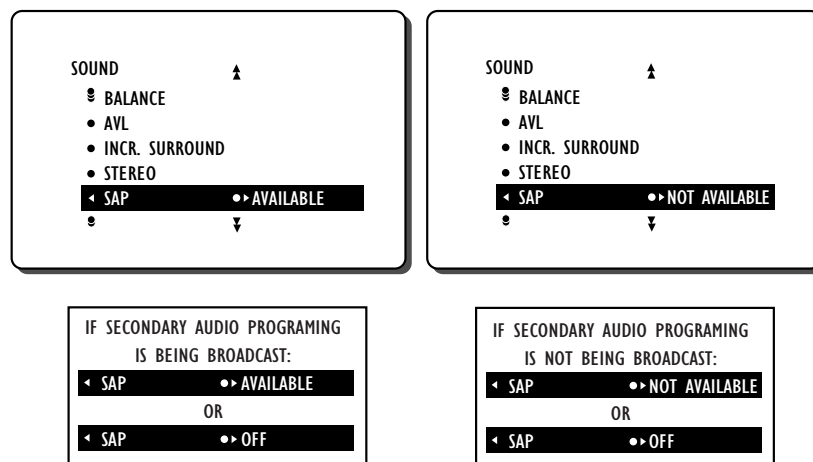


How to Use the AUDIO OUT CONTROL



If you have connected the TV's AUDIO OUTPUT jacks to the AUDIO INPUT jacks on a stereo receiver (see page 12 for connection instructions), set AUDIO OUT to either VARIABLE or FIXED to determine whether you adjust the volume at the stereo or at the TV. If you select VARIABLE, change the volume at the TV using the TV's remote control. If you select FIXED, adjust the volume at the stereo using the stereo's controls. To select FIXED or VARIABLE, follow these steps.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4 Press the **CURSOR DOWN** button repeatedly until **AUDIO OUT** is highlighted.
- 5 Press the **CURSOR RIGHT** or **CURSOR LEFT** button to select **FIXED** or **VARIABLE**.
- 6 Press the **STATUS/EXIT** button to remove the menu from the screen.

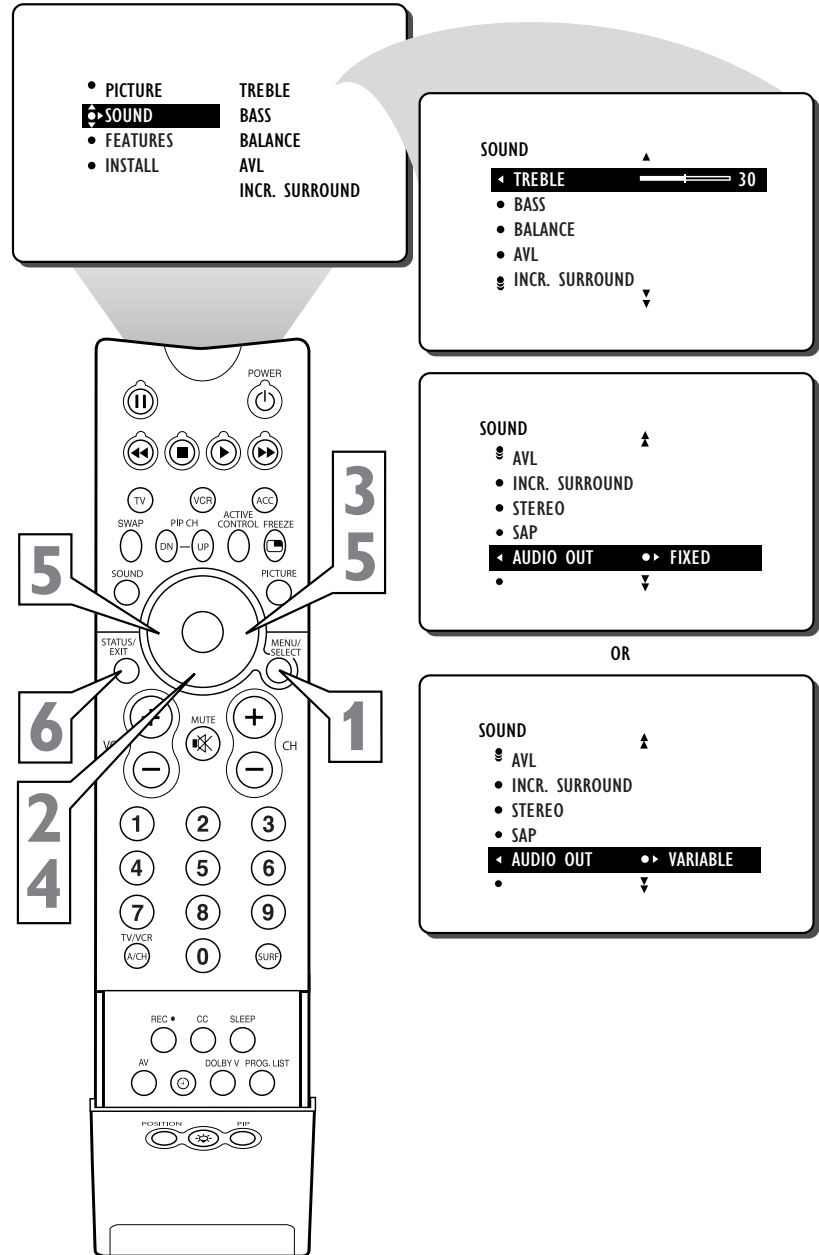

HELPFUL HINT

FIXED – If **FIXED** is selected, the sound coming from the TV and being heard through an external audio system is not adjustable with the television's volume controls. The volume would have to be adjusted at the audio system.

VARIABLE – If **VARIABLE** is selected, the sound coming from the TV and being heard through an external audio system can be adjusted at the TV using the Volume + or – buttons on the television or remote control.

Remember, the connection instructions for an external audio system is located on page 13.




HOW TO TURN THE TV SPEAKERS ON OR OFF

Using the TV's Audio (Monitor) Output jacks and TV Speaker ON/OFF control an external audio system can be used to hear the sound coming from the TV. The Speaker Control will allow you to turn the television's speakers off so the TV sound would only be heard through the audio system. Please refer to page 13 for the proper connections needed to hookup an external audio system.


- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4 Press the **CURSOR DOWN** button repeatedly until **SPEAKERS** is highlighted.
- 5 Press the **CURSOR RIGHT** or **CURSOR LEFT** button to turn the television's speakers ON or OFF.
- 6 Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

Be sure to first connect an external audio system to the television's Monitor Output (audio) jacks.

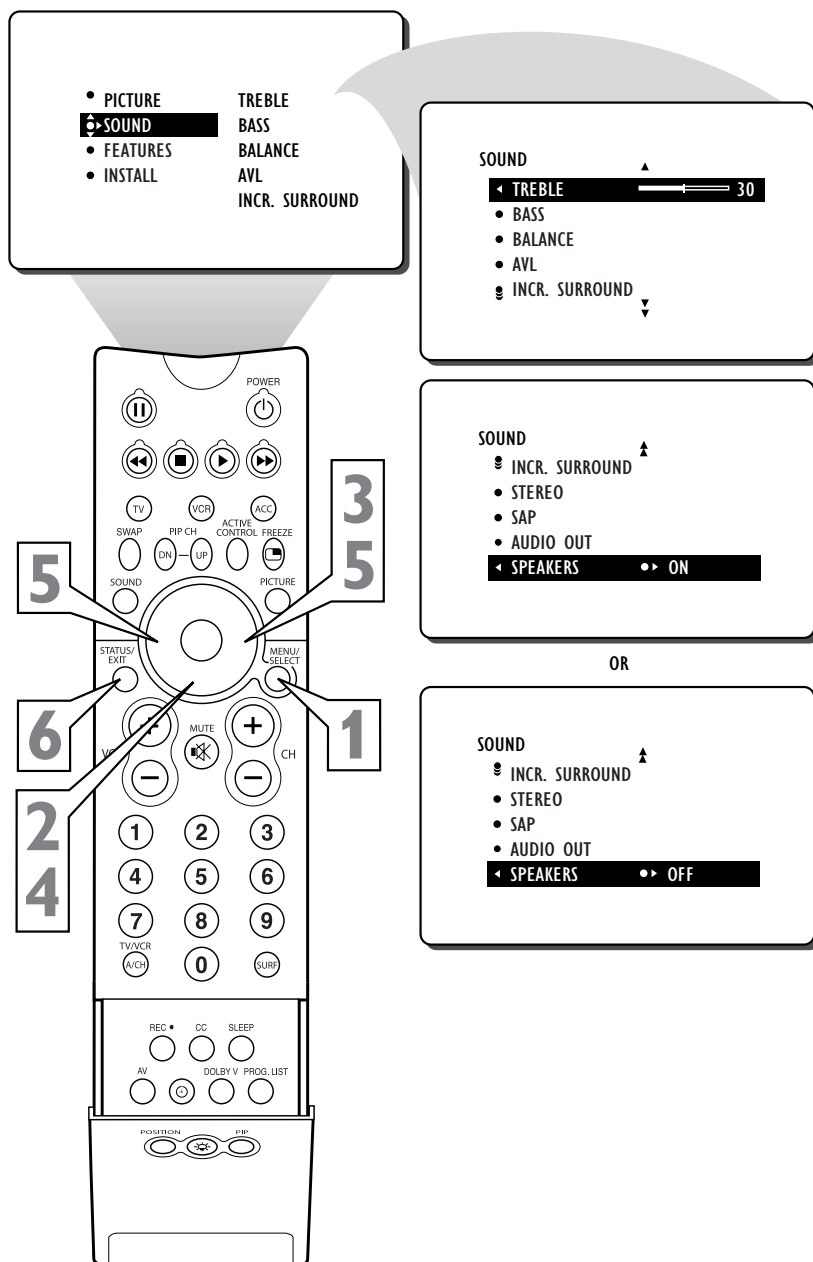

If the **SPEAKERS** Control is turned OFF and no external audio system is connected, there will be no sound heard at the TV.

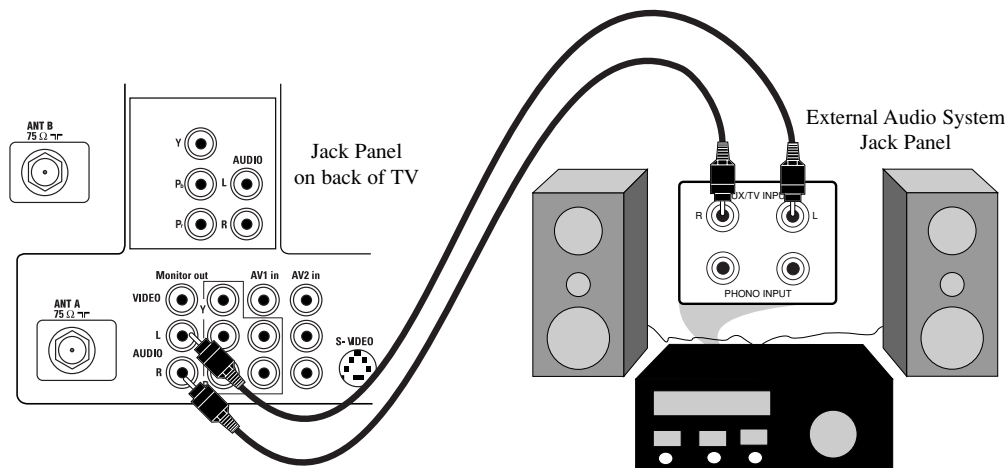


SETTING THE TV CLOCK USING THE TIMER CONTROL



Your television comes with an on-screen clock. During normal operation, the clock appears on the screen when the **STATUS/EXIT** button is pressed or if the **TIMER DISPLAY** control is turned **ON**.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left and highlight the **TIME** control.
- 5** Press the **CURSOR RIGHT** button again to highlight the time indicator area.
- 6** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to select the position or digit you wish to enter.
- 7** Press the **CURSOR UP** or **CURSOR DOWN** button to select the digits for the time. Or press the **NUMBERED** buttons to enter the correct time.
- 8** Press the **CURSOR RIGHT** button to move to the **AM** or **PM** position.
- 9** Press the **CURSOR UP** or **DOWN** button to set **AM** or **PM**.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

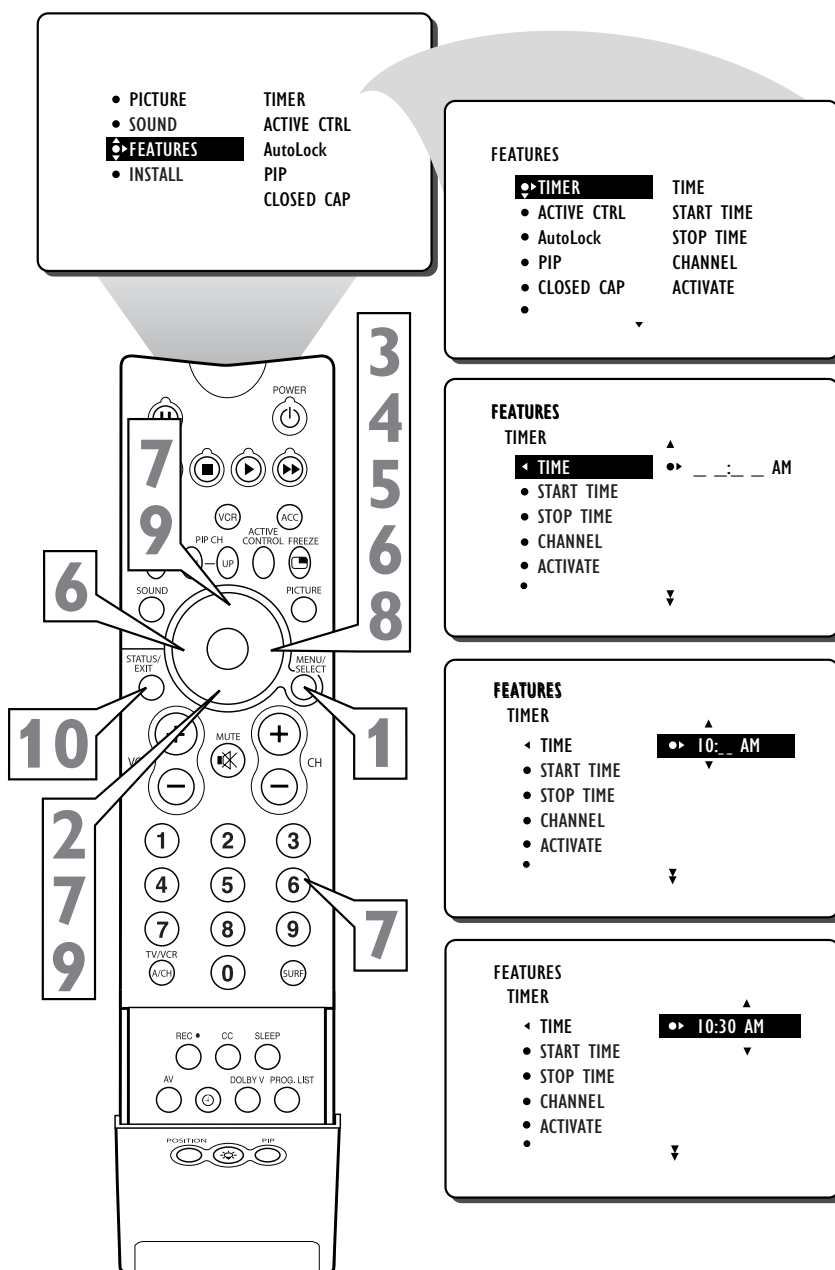


NOTE: The **TIMER** Controls can also be accessed by pressing the **CLOCK** button on the remote control. See lower diagram on this page.

HELPFUL HINT

Remember, be sure to press **0** first and then the hour number for single-digit entries.

The TV's clock settings may be lost when the TV is unplugged (or when AC power to the set is interrupted).

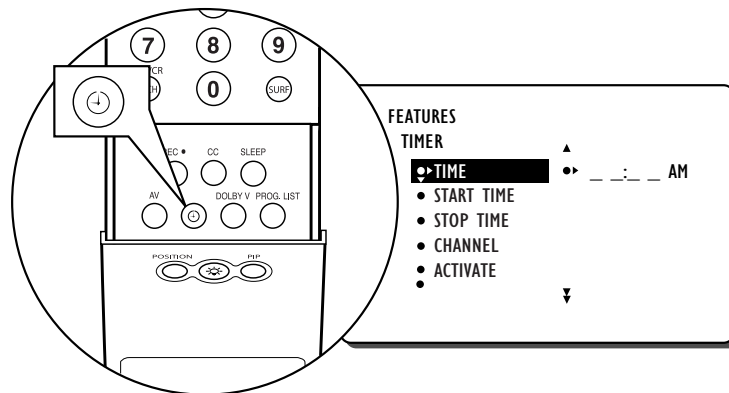




SETTING THE TV TO TURN ITSELF ON USING THE START TIME CONTROL

Just as you would an alarm clock, you can set the TV to turn itself ON once or at the same time every day. Follow these steps to set the Start Time.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight FEATURES.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **START TIME** control.
- 6** Press the **CURSOR RIGHT** button again to highlight the time indicator area.
- 7** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to move among the positions where the time is input.
- 8** Press the **CURSOR UP** or **CURSOR DOWN** button to select the digits for the time. Or press the **NUMBERED** buttons to enter the time you want the television to turn itself on.
- 9** Press the **CURSOR RIGHT** button to move to the AM or PM position.
- 10** Press the **CURSOR UP** or **DOWN** button to set AM or PM.

NOTE: The **ACTIVATE** Control (page 23) must be set to **ONCE** or **DAILY** for the **START TIME** Control to take effect.

- 11** Press the **STATUS/EXIT** button to remove the menu from the screen.

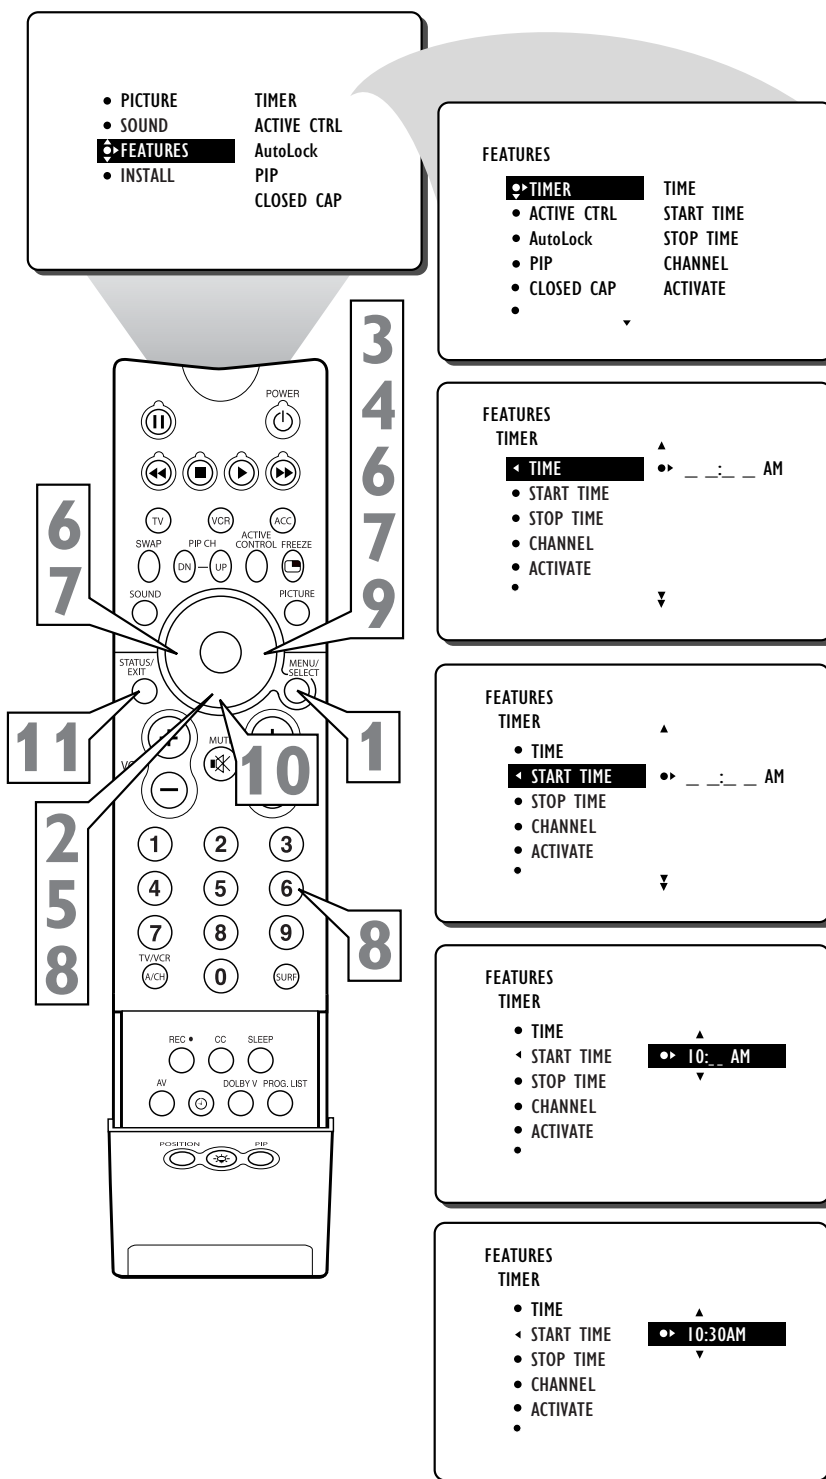

HELPFUL HINT

Remember, be sure to press **0** first and then the hour number for single-digit entries.

The **ACTIVATE** Control must be set to **ONCE** or **DAILY** for the television to shut itself off at the specified time. See page 23 for more details about the **ACTIVATE** Control.

SETTING THE TV TO TURN ITSELF OFF USING THE STOP TIME CONTROL




The following steps will guide you in setting the TV to turn itself OFF at a specific time.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
 - 2 Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
 - 3 Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
 - 4 With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
 - 5 Press the **CURSOR DOWN** button to highlight the **STOP TIME** control.
 - 6 Press the **CURSOR RIGHT** button again to highlight the time indicator area.
 - 7 Press the **CURSOR RIGHT** or **CURSOR LEFT** button to move among the positions where the time is input.
 - 8 Press the **CURSOR UP** or **CURSOR DOWN** button to select the digits for the time. Or press the **NUMBERED** buttons to enter the time you want the television to turn itself off.
 - 9 Press the **CURSOR RIGHT** button to move to the AM or PM position.
 - 10 Press the **CURSOR UP** or **CURSOR DOWN** button to set AM or PM.
- NOTE:** The **ACTIVATE** Control (page 23) must be set to **ONCE** or **DAILY** for the **STOP TIME** Control to take effect.
- 11 Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

Remember, be sure to press 0 first and then the hour number for single-digit entries.

The **ACTIVATE** Control must be set to **ONCE** or **DAILY** for the television to shut itself off at the specified time. See page 23 for more details about the **ACTIVATE** Control.

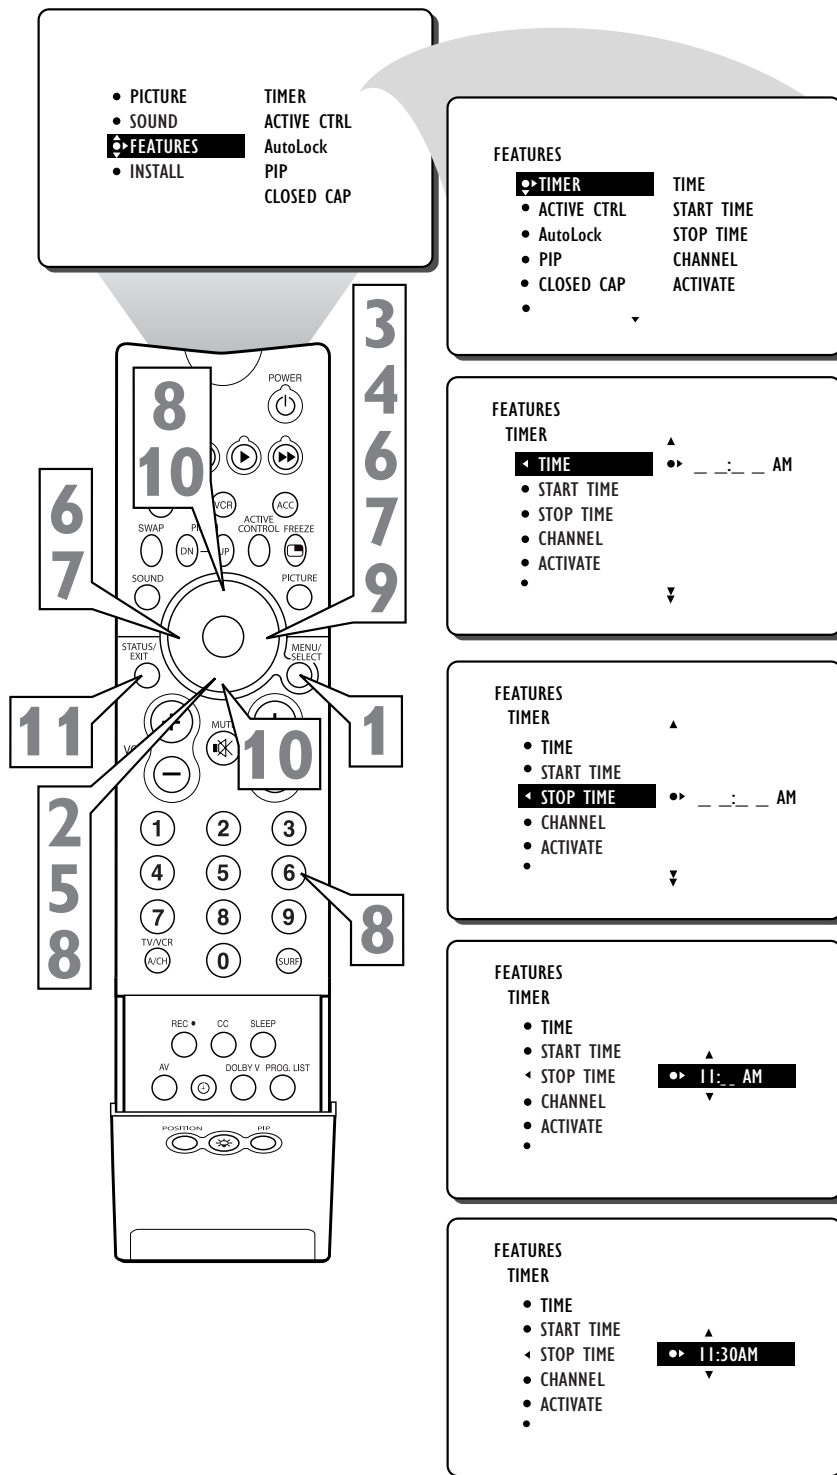



SETTING THE TV TO STARTUP ON A SPECIFIC CHANNEL USING THE CHANNEL CONTROL

You can select a specific channel that the television will tune to when the timer turns the set ON. Follow these steps to select the channel.


- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **CHANNEL** Control.
- 6** Press the **NUMBERED** buttons to enter the desired start-up channel. Or, press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to enter the start-up channel you want.

NOTE: The **ACTIVATE** Control (page 23) must be set to **ONCE** or **DAILY** for this Channel Control to take effect.

- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

The **ACTIVATE** Control must be set to **ONCE** or **DAILY** for the television to shut itself off at the specified time. See page 23 for more details about the **ACTIVATE** Control.

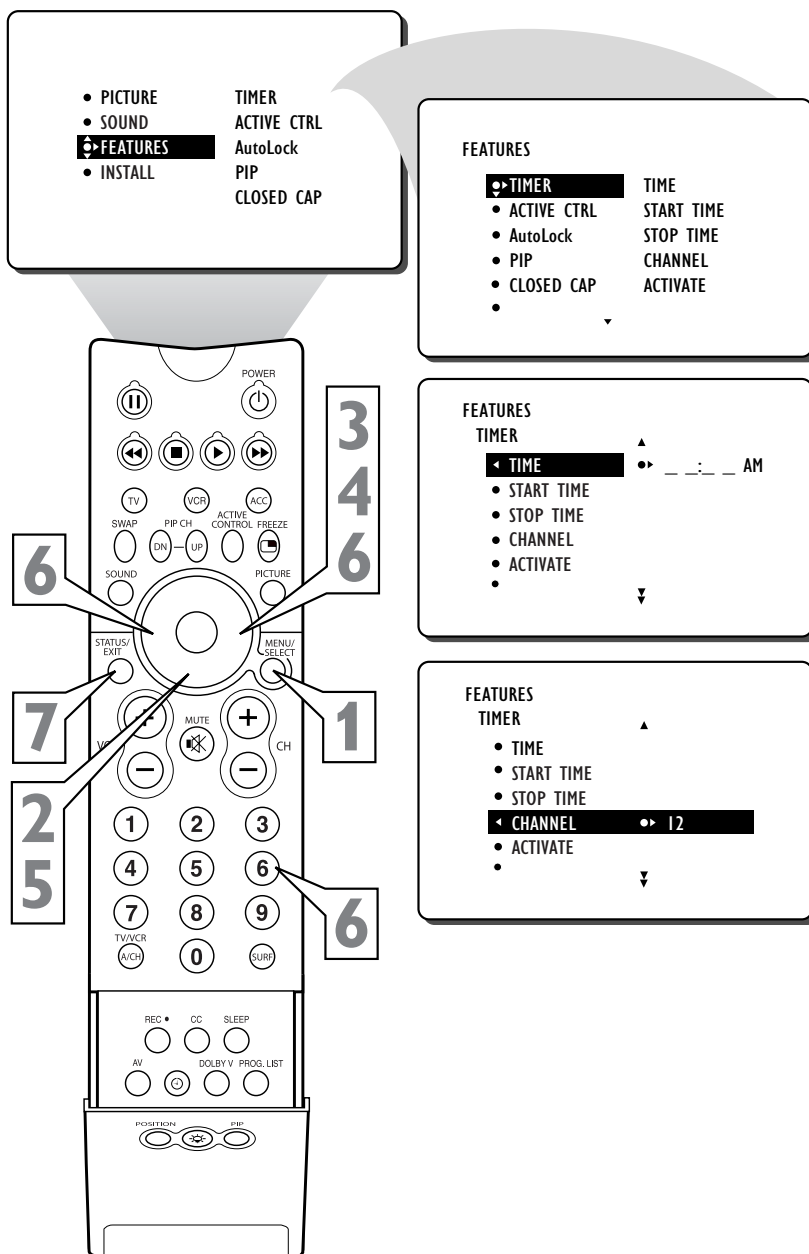

HOW TO ACTIVATE THE TIMER CONTROL USING THE ACTIVATE CONTROL



After you have set the Time, Start Time, Stop Time, and Start Channel, the timer must be set to come on **ONCE** or **DAILY**, or turned **OFF** through the **ACTIVATE** Control.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **ACTIVATE** Control.
- 6** Press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to select **ONCE**, **DAILY** or **OFF**.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.


CHECK IT OUT

With the **ACTIVATE** Control set to **ONCE**, the **START TIME**, **STOP TIME**, and **START CHANNEL** Controls will only be activated one time.

With the **ACTIVATE** Control set to **DAILY**, the **START TIME**, **STOP TIME**, and **START CHANNEL** Controls will be activated every day of the week until it is turned **OFF** or set to **ONCE**.

HELPFUL HINT

Remember, before setting the **TIMER** controls, the TV's clock must be set to the correct time manually (see page 19) or by using the **AutoChron™** feature described on page 11.

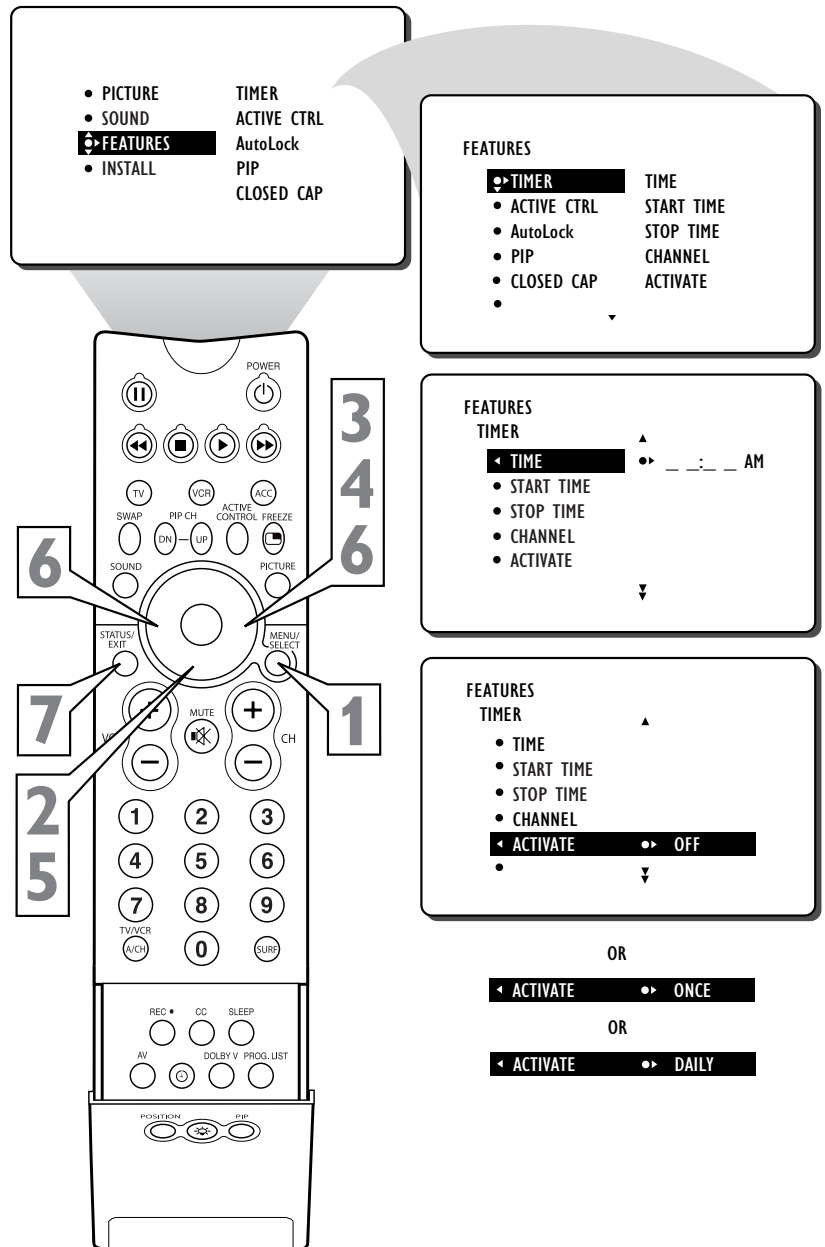




HOW TO VIEW THE TIME USING THE DISPLAY CONTROL

After the TV's clock has been set, you can use your TV as a clock. The **TIMER DISPLAY** control allows you to permanently display the time in the upper right corner of the screen.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **DISPLAY** Control.
- 6** Press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to select **ON** or **OFF**.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

CHECK IT OUT

If the **TIME** has been set and the **DISPLAY** Control set to **ON**, the current time will appear in the upper right corner of the TV screen while the TV is powered on.

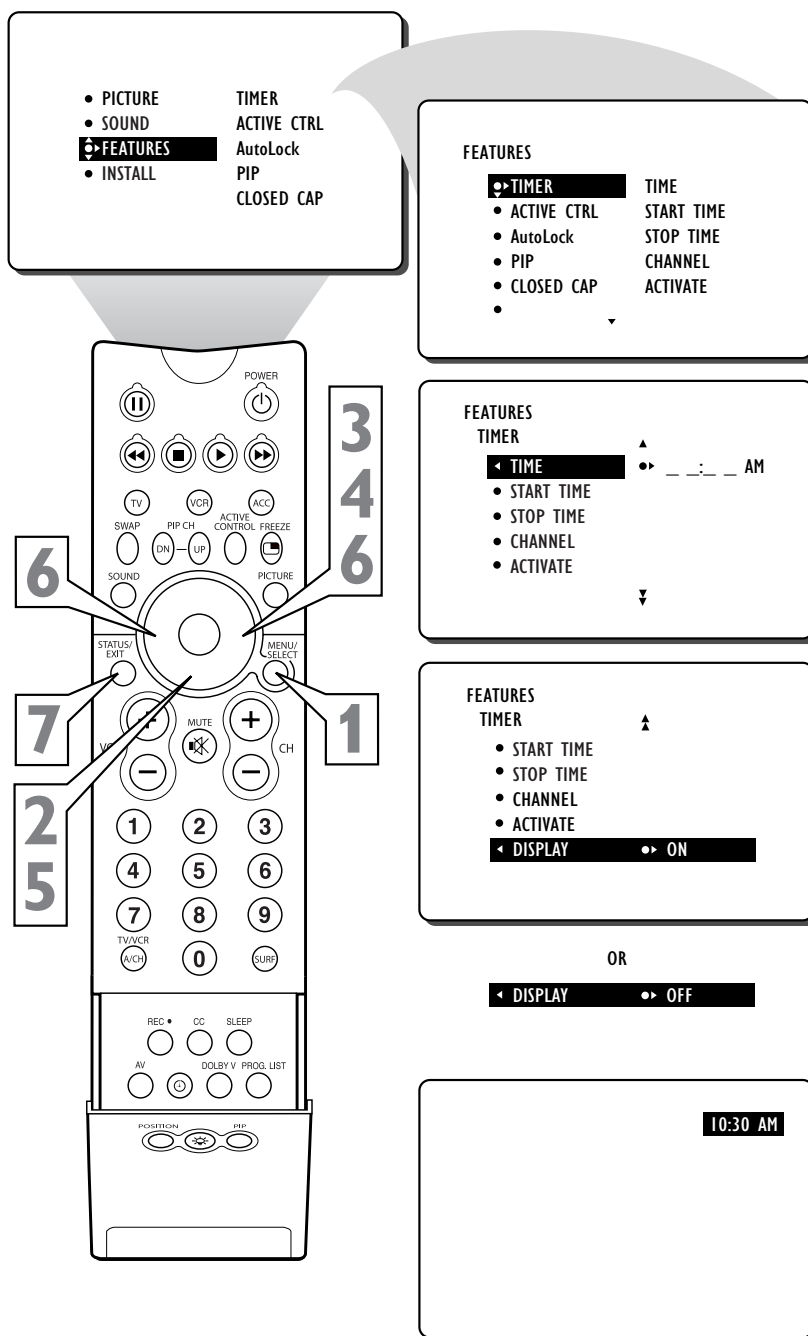

HOW TO USE THE ACTIVE CONTROL



The Active Control monitors and adjusts incoming video signals to help provide the best picture quality.


When you choose to turn the Active Control ON, the picture sharpness and noise reduction are controlled automatically. Active Control adjusts these picture settings continuously and automatically.

NOTE: Active Control is not available for signals connected to the AV4 inputs.

- 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **ACTIVE CTRL** (control) is highlighted.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to toggle the **ACTIVE CONTROL** ON or OFF.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.
- 7** You can also press the **ACTIVE CONTROL** button on the remote control to toggle the **ACTIVE CONTROL** ON or OFF.

CHECK IT OUT

Toggle the **ACTIVE CONTROL ON** with the remote control and a screen display will appear showing the Active Control in work. You will see the sharpness and noise reduction settings changing to provide the best possible picture quality.

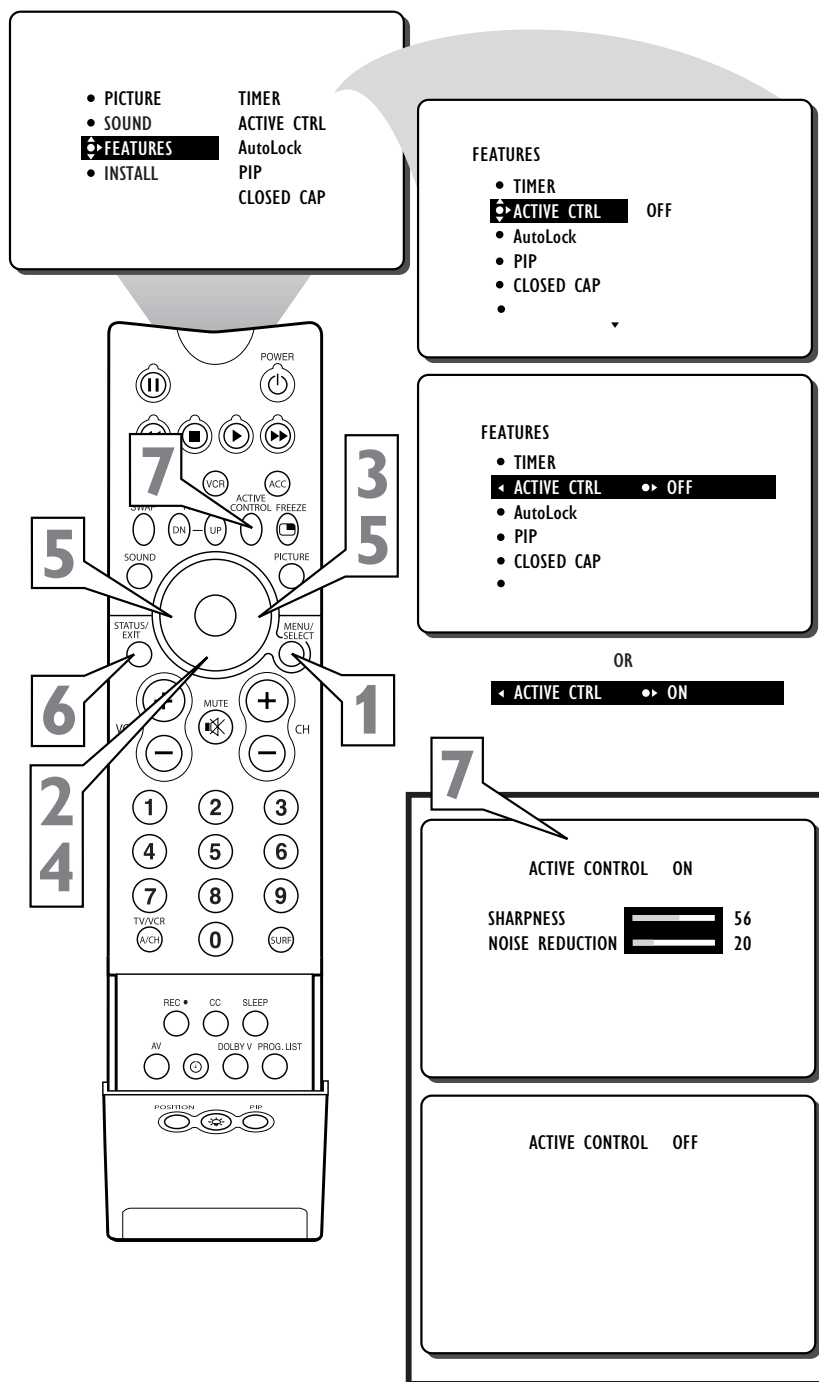



UNDERSTANDING THE AUTOLOCK™ FEATURE

The AutoLock™ feature receives and processes data sent by broadcasters or other program providers that contain program content advisories. When programmed by the viewer, a TV with AutoLock™ can respond to the content advisories and block program content that may be found objectionable (such as offensive language, violence, sexual situations, etc.). This is a great feature to censor the type of programming children may watch.

In the AutoLock™ section, you'll learn how to block channels and programming that is not rated, is unrated, or has no rating. You will also find out how to turn these blocking features ON or OFF. Following are brief explanations of some terms and ratings related to the AutoLock™ feature.



AutoLock™ offers various Blocking Options from which to choose:

BLOCKING: The BLOCKING control is what can be thought of as the "master switch" for AutoLock™. This control affects the settings you have chosen for blocking programs according to movie ratings or TV ratings, or for blocking programs that have no rating or are unrated. When the BLOCKING control is OFF, the blocking or censoring of programs is disabled. When the BLOCKING control is ON, blocking will occur according to the settings you have chosen.

NO RATING: ALL programming with no content advisory data can be blocked if NO RATING is set to ON.

Programming that has No Rating is not encoded with any rating information from the MPAA or the Parental Guidelines. Any programming could fall into this category.

You also can block individual channels or block programming based on ratings of the MPAA and TV broadcasters. (See a description of the ratings on this page.)

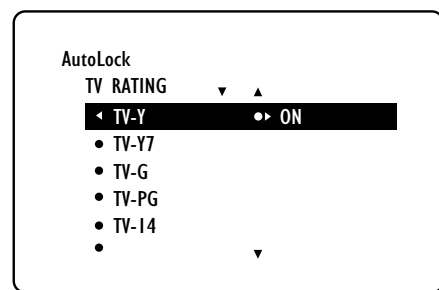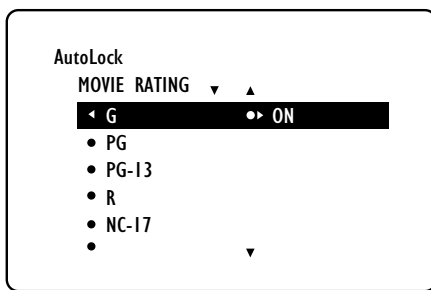

MOVIE RATINGS (MOTION PICTURE ASSOCIATION OF AMERICA)

G: General Audience - All ages admitted. Most parents would find this programming suitable for all ages. This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

PG: Parental Guidance Suggested - This programming contains material that parents may find unsuitable for younger children. It may contain one or more of the following: Moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialogue.

PG-13: Parents Strongly Cautioned - This programming contains material that parents may find unsuitable for children under the age of 13. It contains one or more of the following: violence, sexual situations, coarse language, or suggestive dialogue.

R: Restricted - This programming is specifically designed for adults. Anyone under the age of 17 should view this programming only with an accompanying parent or adult guardian. It contains one or more of the following: intense violence; intense sexual situations; strong, coarse language; or intensely suggestive dialogue.

NC-17: No one under the age of 17 will be admitted. - This type of programming should be viewed by adults only. It contains graphic violence; explicit sex; or crude, indecent language.

X: Adults Only - This type of programming contains one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, very coarse and intensely suggestive language.

TV PARENTAL GUIDELINES (TV BROADCASTERS)

TV-Y: (All children -- This program is designed to be appropriate for all children.) Designed for a very young audience, including children ages 2-6. This type of programming is not expected to frighten younger children.

TV-Y7: (Directed to Older Children -- This program is designed for children ages 7 and above.) It may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. This programming may include mild fantasy and comic violence (FV).

TV-G: (General Audience -- Most parents would find this program suitable for all ages.) This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

TV-PG: (Parental Guidance Suggested -- This program contains material that parents may find unsuitable for younger children.) This type of programming contains one or more of the following: Moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

TV-14: (Parents Strongly Cautioned -- This program contains some material that many parents would find unsuitable for children under 14 years of age.) This type of programming contains one or more of the following: intense violence (V); intense sexual situations (S); strong, coarse language (L); or intensely suggestive dialogue (D).

TV-MA: (Mature Audience Only -- This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) This type of programming contains one or more of the following: graphic violence (V); explicit sexual situations (S); or crude, indecent language (L).

SETTING UP AN AUTOLOCK™ ACCESS CODE




AutoLock™ allows parents to block out or “censor” any channels they think children should not watch. A channel blocked by the AutoLock™ control cannot be viewed until a correct access code is used to unlock the channel for viewing. First, let’s set your AutoLock access code.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button once to highlight the AutoLock control.
- 5** Press the **CURSOR RIGHT** button to highlight **ACCESS CODE**.
- 6** Press **0,7,1,1** on the remote control. **INCORRECT** will appear on the screen.
- 7** Press **0,7,1,1** on the remote control again. **ENTER NEW CODE** will appear on the screen.
- 8** Enter a new four-digit code using the number buttons. **CONFIRM CODE** will appear on the screen.
- 9** Enter your new four-digit code again. **CORRECT** will flash on the screen briefly and the highlight bar goes back to AutoLock.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

Remember that 0711 is the default AutoLock™ code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

NOTE TO PARENTS: It isn’t possible for your child to unblock a channel without knowing your access code or changing it to a new one. If your code has been changed without your knowledge, then you will become aware that blocked channels may have been viewed.

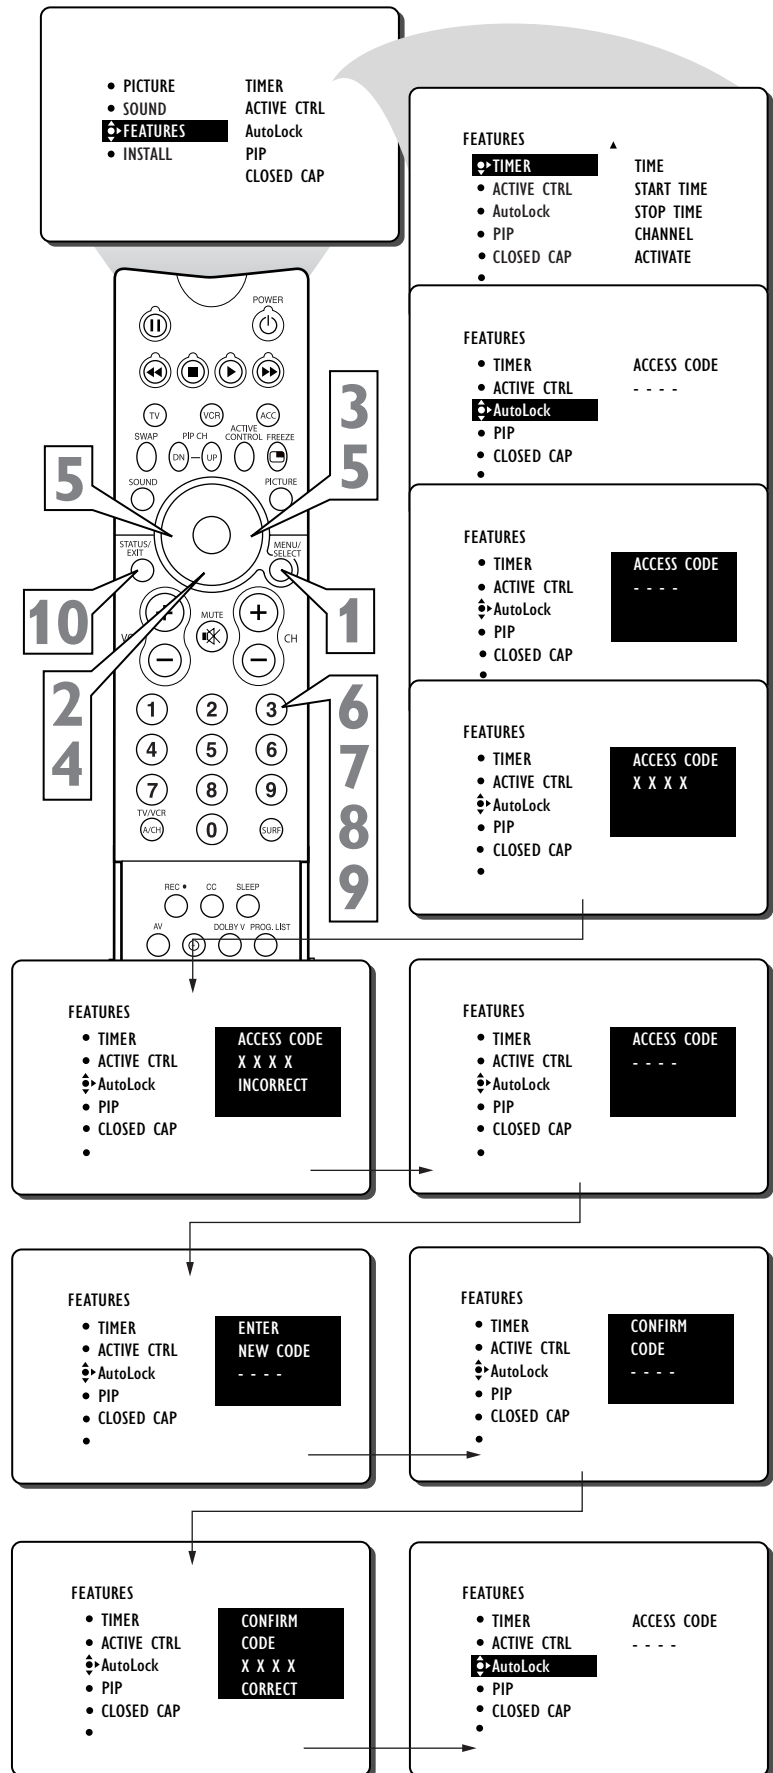



HOW TO BLOCK CHANNEL USING AUTOLOCK™

After your personal access code has been set (see the previous page), you are ready to select the channels or inputs you want to block out or censor.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4 Press the **CURSOR DOWN** button once to highlight the **AutoLock™** control.
- 5 Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6 Enter your four-digit **ACCESS CODE**. **CORRECT** will flash very briefly and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7 Press the **CURSOR RIGHT** button to highlight the TV's available channels.
- 8 Press the **CURSOR UP** or **CURSOR DOWN** button to highlight the channel you want to block. You can also select **ALL** to block all channel at once.
- 9 Press the **CURSOR RIGHT** button to block the channel. A padlock image appears to the right of the channel number, or to unblock any channels that have already been blocked including the selection **ALL**.


Repeat steps 7 and 8 for any channels you want to block from viewing.

- 10 Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

Remember that 0711 is the default AutoLock™ code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

NOTE: You also can block out the use of the A/V external inputs on the rear of the TV. This stops the viewing of VCR, DVD, and other sources that can be shown through the A/V input jacks. Select AV1, CVI, AV2, SIDE (AV3), or AV4; and then select **BLOCK**.

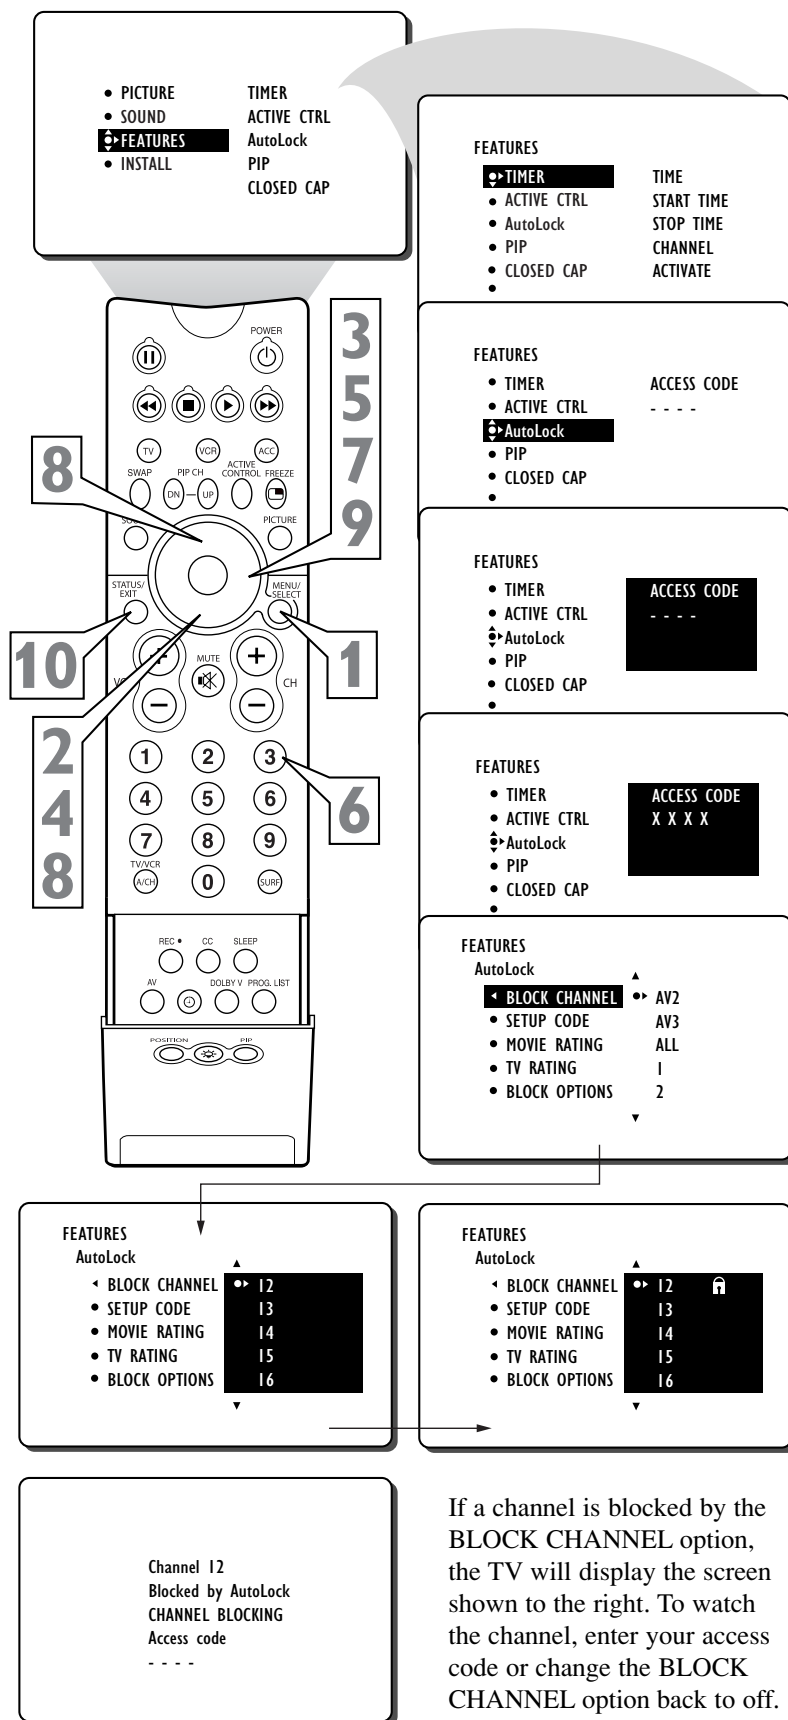

If a channel is blocked by the **BLOCK CHANNEL** option, the TV will display the screen shown to the right. To watch the channel, enter your access code or change the **BLOCK CHANNEL** option back to off.



- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button once to highlight the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6** Enter your four-digit **ACCESS CODE**. *CORRECT* will flash very briefly and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7** Press the **CURSOR DOWN** button repeatedly until **MOVIE RATING** is highlighted.
- 8** Press the **CURSOR RIGHT** button and the Rating menu shifts to the left with *G* highlighted.
- 9** Press the **CURSOR UP** or **CURSOR DOWN** button to highlight each rating you want.
- 0** Press the **CURSOR RIGHT** button to turn the rating **ON** or **OFF**. Turning the rating **ON** will block programs with that rating from being seen.
- 1** Press the **STATUS/EXIT** button to remove the menu from the screen.

When a rating is turned ON, all higher ratings also will be turned on automatically. For example, if the *R* rating is turned on, the *NC-17* and *X* ratings also will be turned on.

All Movie Ratings can be turned ON or OFF. Refer to page 26 for Movie Rating definitions.





HOW TO BLOCK PROGRAMMING BASED ON TV RATINGS

You can select specific TV ratings that you want to censor by following these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button once to highlight the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6** Enter your four-digit **ACCESS CODE**. **CORRECT** will flash very briefly and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7** Press the **CURSOR DOWN** button repeatedly until **TV RATING** is highlighted.
- 8** Press the **CURSOR RIGHT** button and the menu will shift to highlight the **TV RATING** options.
- 9** Press the **CURSOR UP** or **DOWN** button to select a rating.
- 10** Press the **CURSOR RIGHT** or **LEFT** button to turn the block on the rating **ON** or **OFF**.


NOTE: More specific subratings (for violence, sexual content, dialogue, or fantasy violence) are available for TV-Y7, TV-PG, TV-14, and TV-MA. (Refer to page 30 for definitions.)

To access these subratings, with the main rating selected, **press the CURSOR RIGHT button**. Then, repeat steps 9 and 10 to turn the sub-ratings **ON** or **OFF**.

- 11** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

When a rating is turned **ON**, all higher ratings also will be turned on automatically. For example, if the **R** rating is turned on, the **NC-17** and **X** ratings also will be turned on.

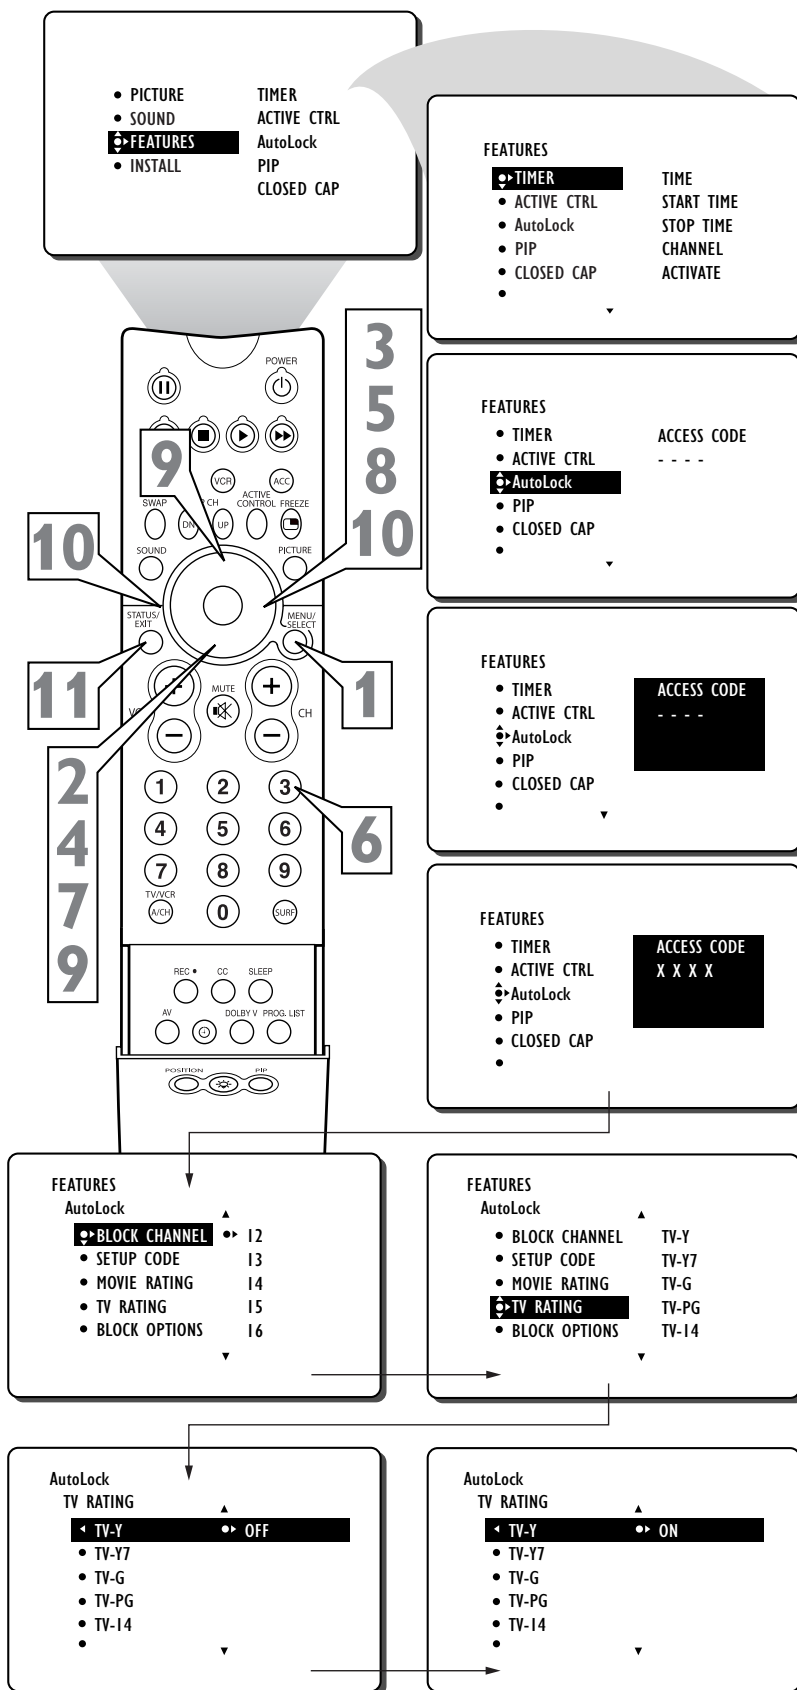

OTHER AutoLock BLOCKING OPTIONS - BLOCKING CONTROL




The **BLOCKING** control is what can be thought of as the “master switch” for AutoLock™. This control affects the settings you have chosen for blocking programs according to movie ratings or TV ratings, or for blocking programs that have no rating or are unrated. When the **BLOCKING** control is **OFF**, the blocking or censoring of programs is disabled. When the **BLOCKING** control is **ON**, blocking will occur according to the settings you have chosen. Follow these steps to toggle **BLOCKING OFF** or **ON**.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button once to highlight the AutoLock control.
- 5** Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6** Enter your four-digit **ACCESS CODE** and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7** Press the **CURSOR DOWN** button repeatedly until **BLOCK OPTIONS** is highlighted.
- 8** Press the **CURSOR RIGHT** button to enter the **BLOCK OPTIONS** menu. **BLOCKING** will be highlighted.
- 9** Press the **CURSOR RIGHT** or **LEFT** button to toggle **BLOCKING ON** or **OFF**.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

Remember, when the **BLOCKING** control is **OFF**, the blocking or censoring of programs is disabled. When the **BLOCKING** control is **ON**, blocking will occur according to the settings you have chosen.

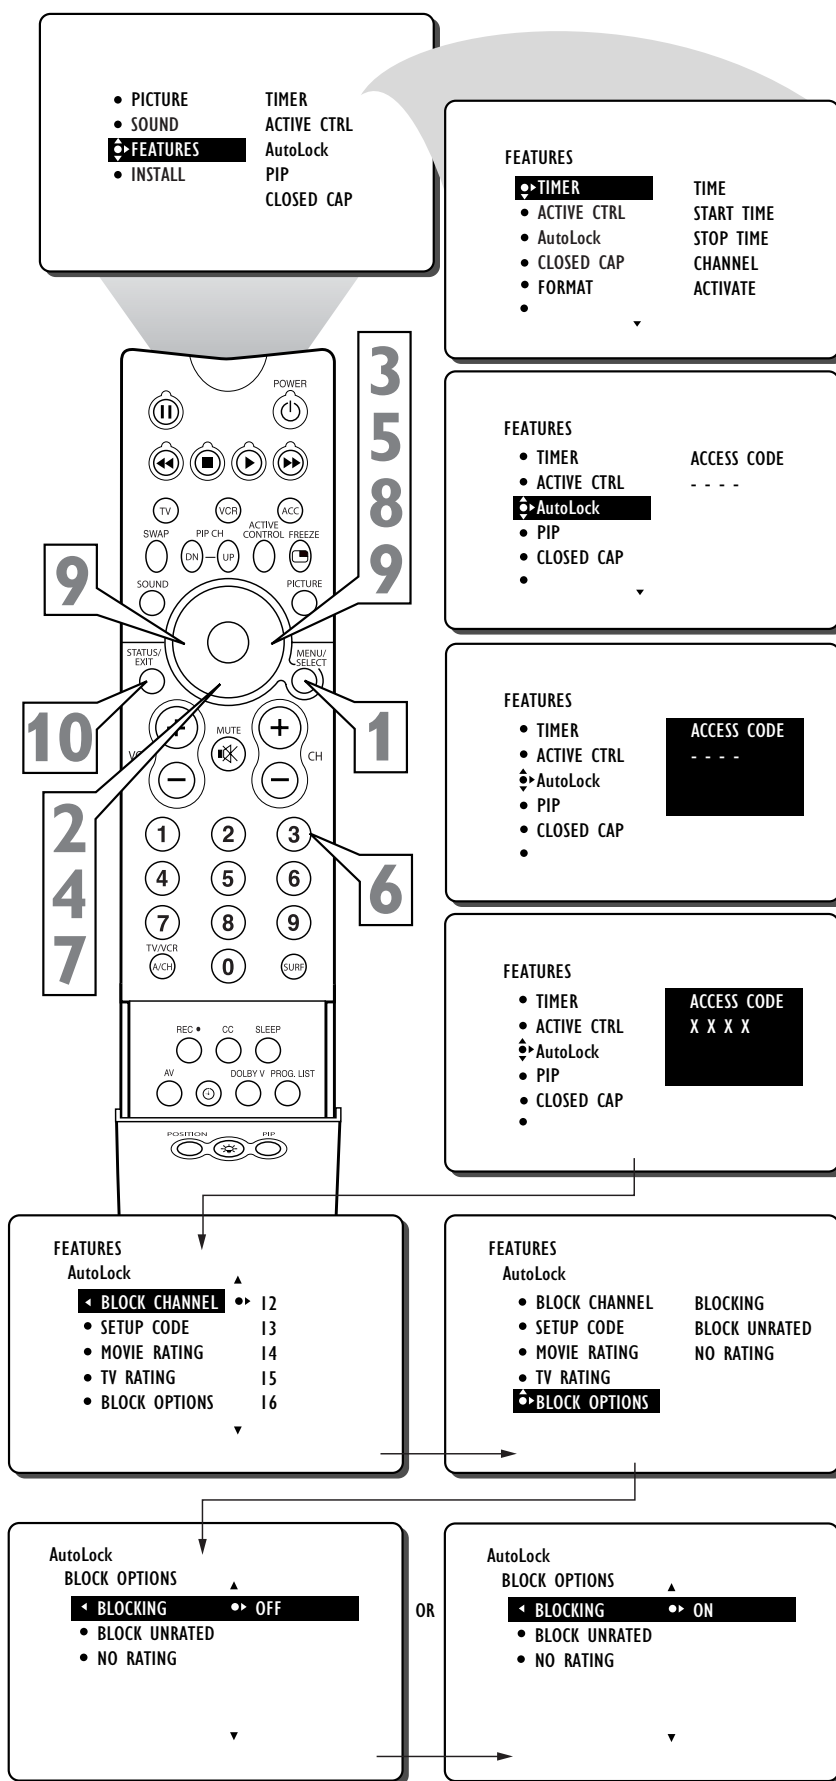




OTHER AUTOLOCK BLOCKING OPTIONS - UNRATED AND NO RATING

Some programming is not encoded with content advisory data by the MPAA (Motion Picture Association of America) or the television broadcasters (see the explanation on page 26). To block unrated or no rating programming, follow these steps.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4 Press the **CURSOR DOWN** button once to highlight the **AutoLock** control.
- 5 Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6 Enter your four-digit **ACCESS CODE** and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7 Press the **CURSOR DOWN** button repeatedly until **BLOCK OPTIONS** is highlighted.
- 8 Press the **CURSOR RIGHT** button to enter the **BLOCK OPTIONS** menu. **BLOCKING** will be highlighted.
- 9 Press the **CURSOR DOWN** button to highlight either the **BLOCK UNRATED** or **NO RATING** option.
- 10 Press the **CURSOR RIGHT** or **LEFT** button to toggle either the **BLOCK UNRATED** or **NO RATING** **ON** or **OFF**.
- 11 Press the **STATUS/EXIT** button to remove the menu from the screen.

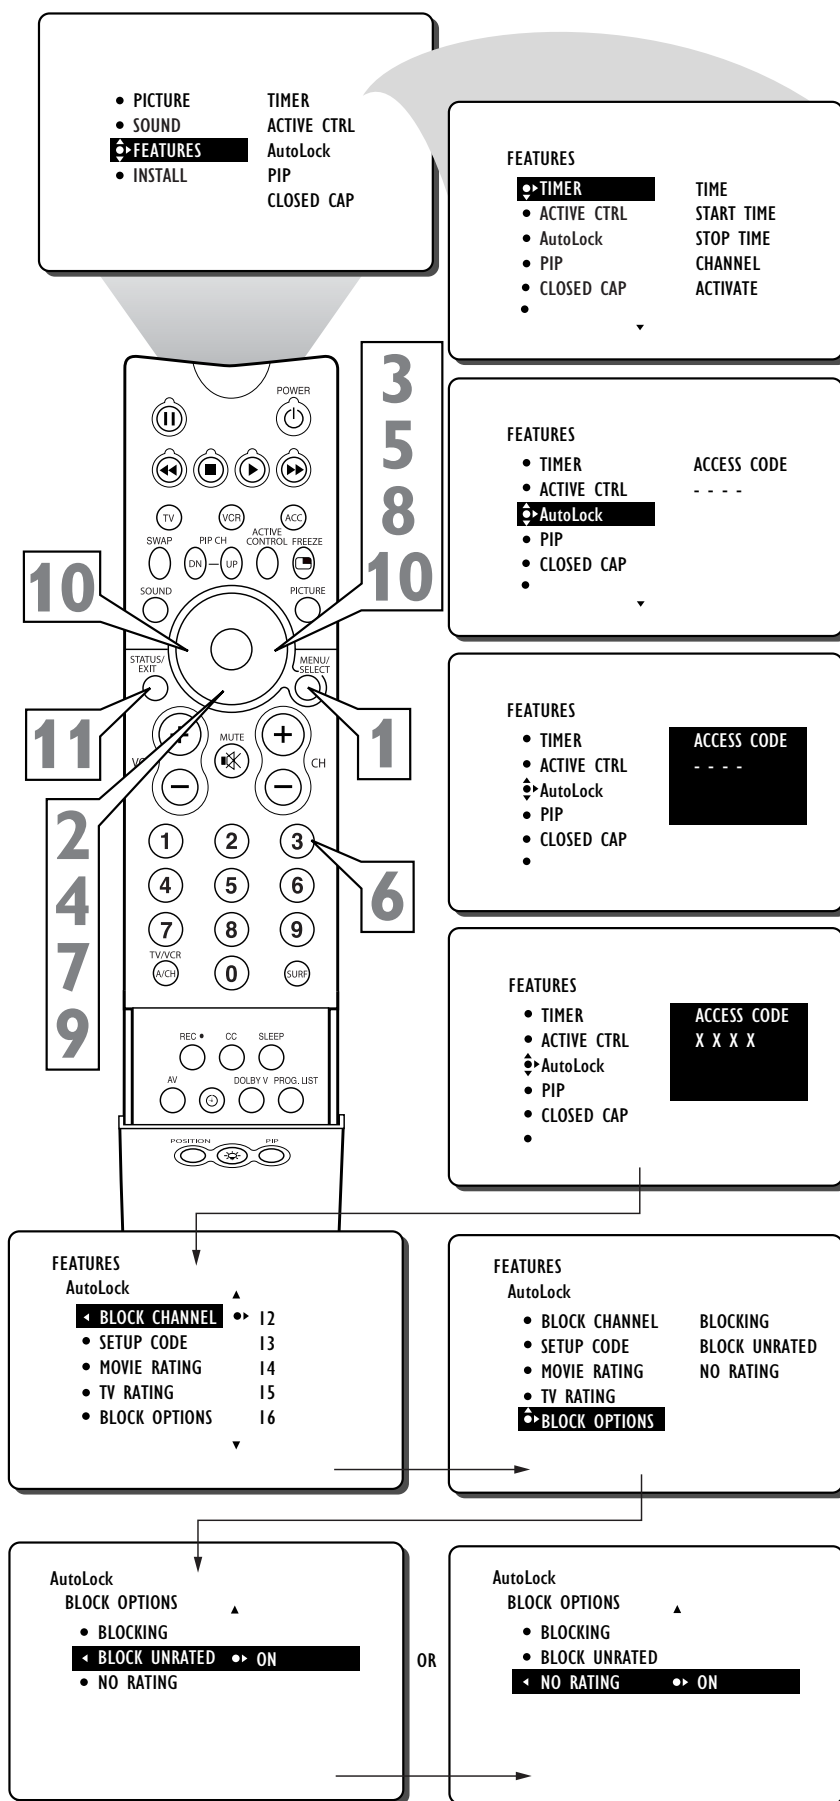

How to Review the AUTOLOCK™ STATUS SCREEN



To remind you which ratings you have blocked and which Block Options you have selected, a review screen is available to review your AutoLock™ settings. To access this screen follow the steps below.



Press the STATUS/EXIT button on your remote control **TWICE**. Your AutoLock™ settings will appear on the screen.

NOTE: If you have blocked specific subratings, such as V for Violence in the TV-PG category, these blocked subratings will not appear in the review. The subratings however, are still blocked according to your selections.


2 After a few seconds, the settings will leave the screen automatically, or you can **press the STATUS/EXIT button** a third time to remove them from the screen.

HELPFUL HINT


The AutoLock™ Status screen will only appear if the BLOCKING option is set to ON. For details, see page 32.

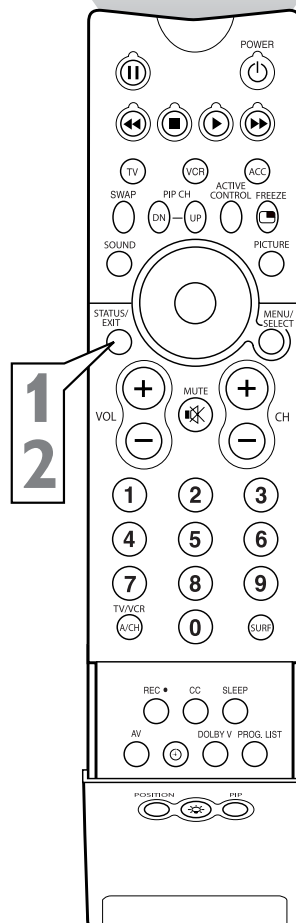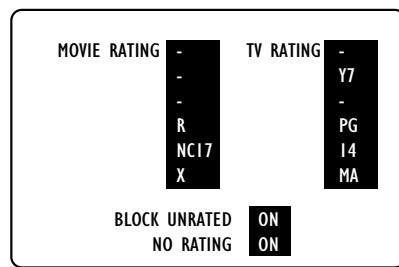

This display will appear after the step 1 above is completed if the AutoLock™ BLOCKING option is set to ON.

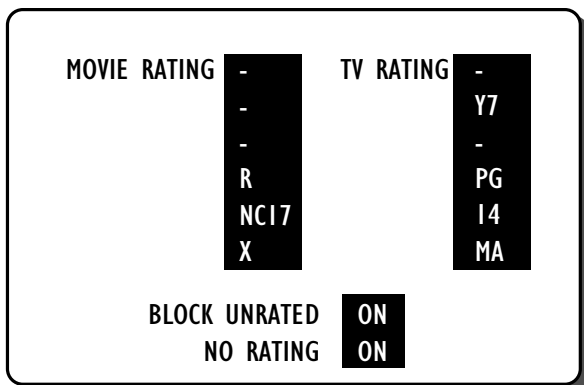

This display will appear after the step 1 above is completed if the AutoLock™ BLOCKING option is set to OFF.

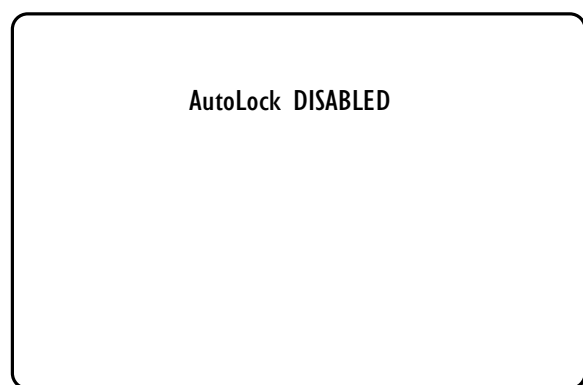



HOW TO USE THE CLOSED CAPTIONING CONTROL


Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses onscreen "text boxes" to show dialogue and conversations while the TV program is in progress.

NOTE: Not all TV programs and product commercials are broadcast with Closed Captioning (CC). Nor are all Closed Captioning MODEs (CAPTION 1-4 or TEXT 1-4) necessarily being used by broadcast stations during the transmission of a program offering Closed Captioning. Refer to your area's TV program listings for the stations and times of shows being broadcast with Closed Captioning.

- 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **CLOSED CAP** control is highlighted.
- 5** Press the **CURSOR RIGHT** button again. The menu will shift to the left and **CAPTION MODE** will be highlighted.
- 6** Press the **CURSOR RIGHT** button to highlight **CAPTION MODEs**.
- 7** Press the **CURSOR UP** or **CURSOR DOWN** button to select a **CAPTION MODE**: CC1, CC2, CC3, CC4, CC MUTE, TXT1, TXT2, TXT3, or TXT4. CC DISPLAY turns text OFF or ON if the TV station broadcasting on the channel is making **CLOSED CAPTIONING** available. With **CC DISPLAY** highlighted, press the **CURSOR RIGHT** button to toggle Closed Captioning ON or OFF.

NOTE: You also can press the **CC** button on the remote control to turn the **CC TEXT** option ON or OFF.

- 8** Press the **STATUS/EXIT** button to remove the menu from the screen.

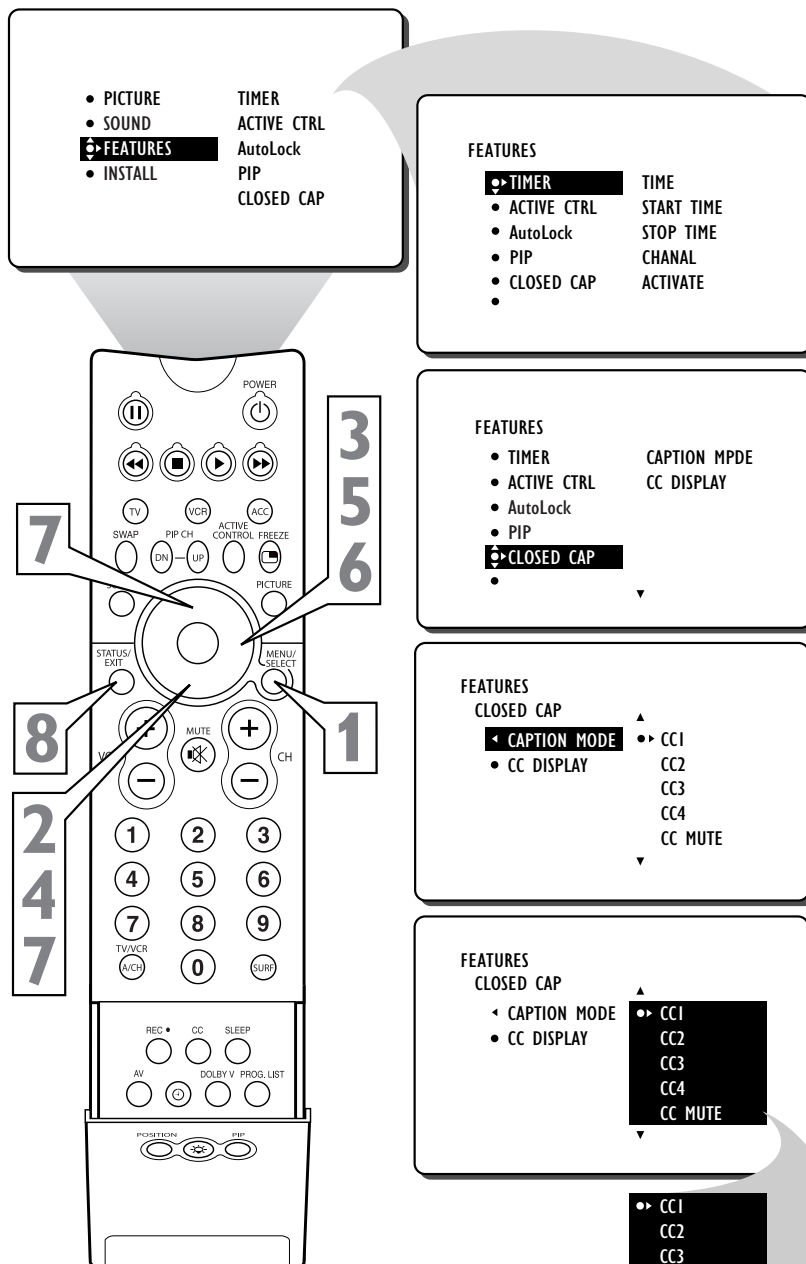

CAPTION Mode Example Display



TEXT Mode Example Display -
The TV screen will be blocked from viewing.



How to Use the SCREEN FORMAT CONTROL




You can change the screen format size to match the type of program you're watching. Select the normal 4:3 aspect ratio or any of the zoom or wide screen aspect ratios.

- 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **FORMAT** control is highlighted.
- 5** Press the **CURSOR RIGHT** button repeatedly to toggle among the six screen format sizes – **AUTO**, **4:3**, **ZOOM 14:9**, **ZOOM 16:9**, **SUBTITLE ZOOM**, **SUPER WIDE** or **WIDE SCREEN**.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.



HELPFUL HINT

When the onscreen menu is not displayed, pressing the **CURSOR RIGHT** or **LEFT** buttons will toggle the screen **FORMAT** options.

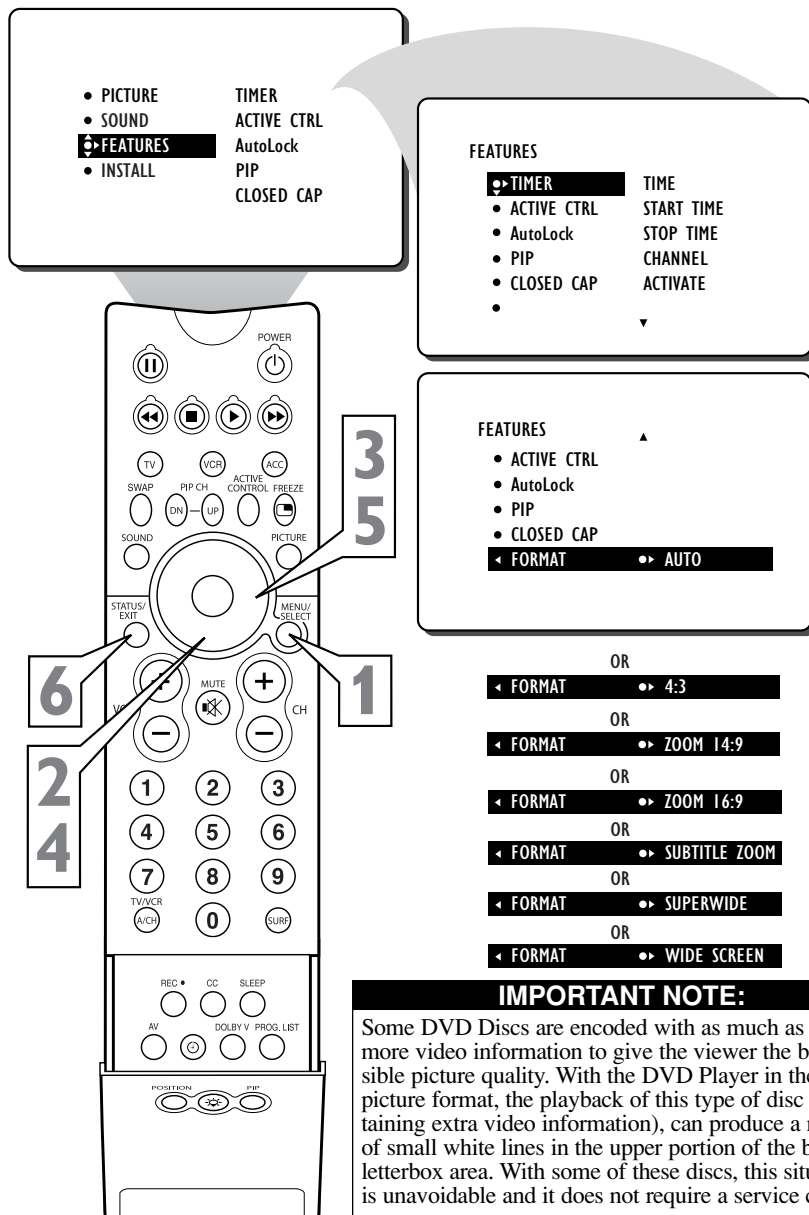

IMPORTANT NOTE:

Some DVD Discs are encoded with as much as 30% more video information to give the viewer the best possible picture quality. With the DVD Player in the 16:9 picture format, the playback of this type of disc (containing extra video information), can produce a number of small white lines in the upper portion of the black letterbox area. With some of these discs, this situation is unavoidable and it does not require a service call.

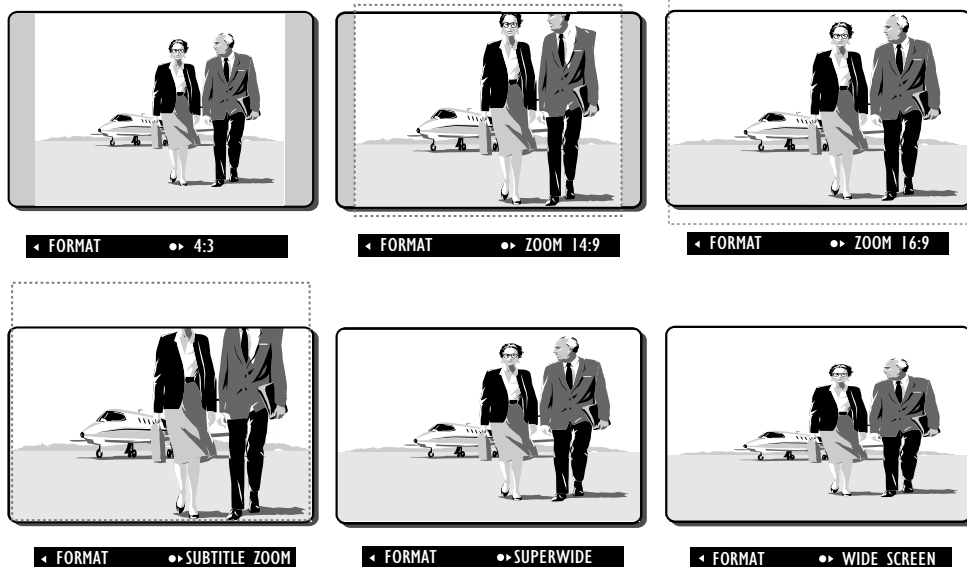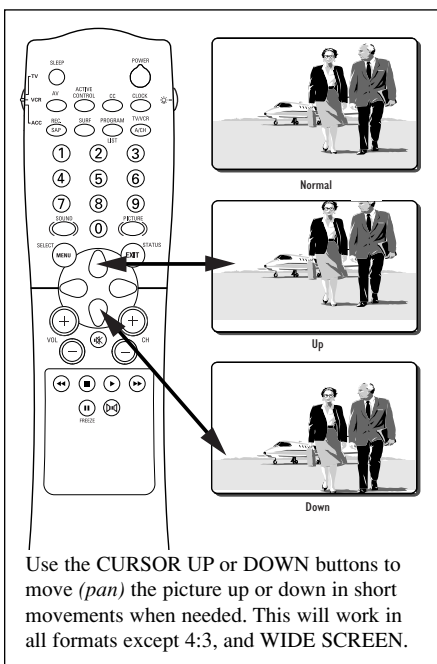




HOW TO USE THE ROTATION CONTROL

In rare cases the video supplied to the TV screen might show slightly tilted one way or another. The Tilt Adjust control will allow you to correct the problem by adjusting the screen in a clockwise or counterclockwise direction.

- 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button until **FEATURES** is highlighted.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **ROTATION** control is highlighted.
- 5** Press the **CURSOR RIGHT** or **LEFT** button to rotate the picture on the screen clockwise or counter clockwise. Please note that the amount of rotation will be very minimal.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.


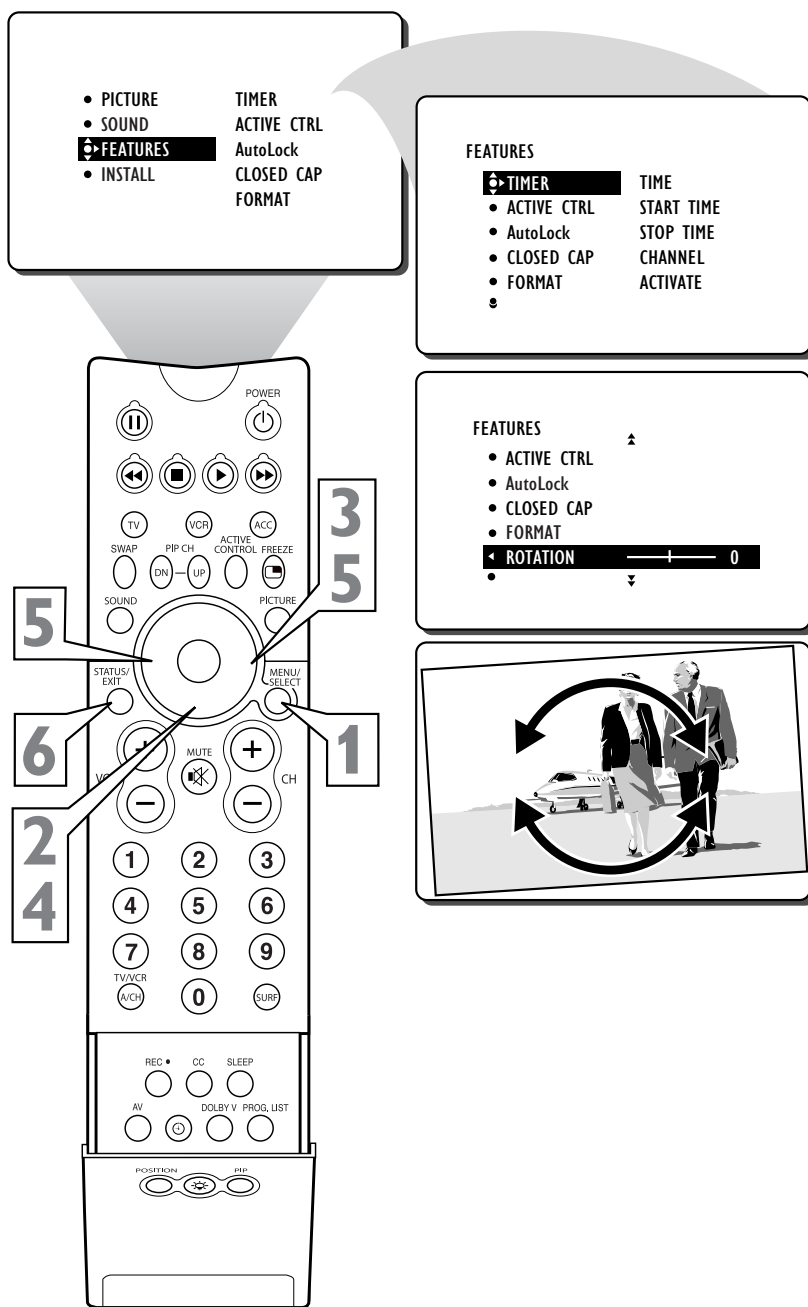


HOW TO SET THE BLUE MUTE CONTROL




Normally, the television would display a “snowy” looking screen with a lot of static sounds when the signal is lost. The Blue Mute control will automatically set the screen to a pleasant blue background when it detects no signal available if turned on.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **BLUE MUTE** control is highlighted.
- 5** Press the **CURSOR RIGHT** or **LEFT** button to toggle the control ON or OFF.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

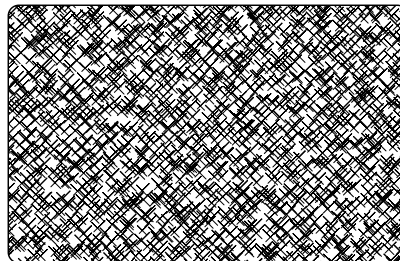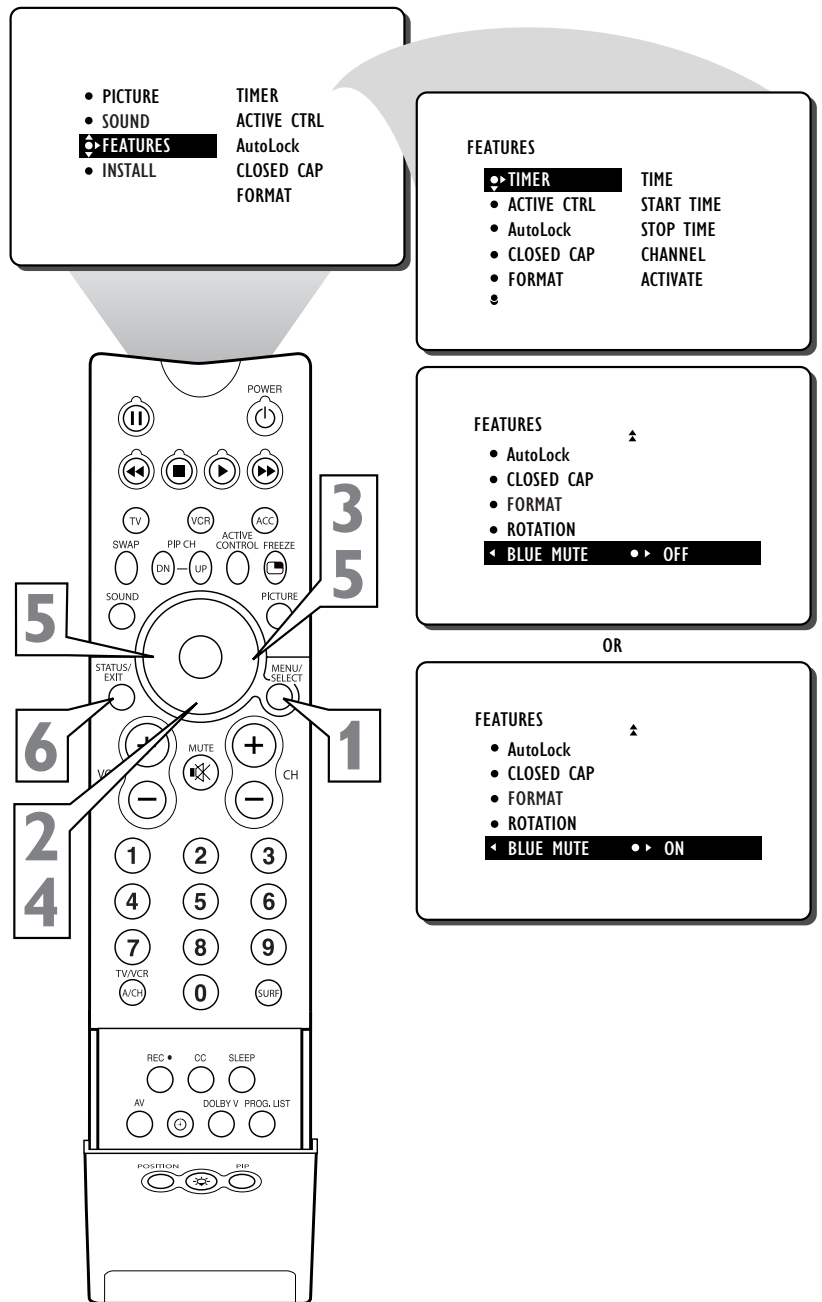

BLUE MUTE OFF
“Snowy” Picture

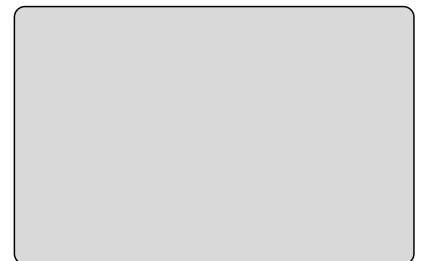

BLUE MUTE ON
Pleasant Blue Screen



HOW TO SET THE SLEEP TIMER CONTROL

Have you ever fallen asleep in front of the TV, only to have it wake you up at two in the morning with a test pattern sound screeching in your ears? Well, your TV can enable you to avoid that discomfort by automatically turning itself off. With the Sleep Timer feature, you can set a timer to automatically switch the TV OFF after a period of time you choose (15-minute increments up to 60 minutes, then 30-minute increments up to 90 minutes, then 60-minute increments up to 240 minutes).

1 Press the SLEEP button on the remote control. The SLEEP timer onscreen display will appear in the upper part of the screen.


2 Within five seconds, press the SLEEP button repeatedly to pick the amount of time (15-minute increments up to 60 minutes, then 30-minute increments up to 90 minutes, then 60-minute increments up to 240 minutes) before the TV will turn itself off.

An onscreen countdown will appear during the last minute before the TV shuts itself off.

HELPFUL HINT

To see how many minutes remain before the TV shuts itself off, press the STATUS/EXIT button.

A Sleep Timer setting can be cancelled by pressing any button during the last minute of the operation.

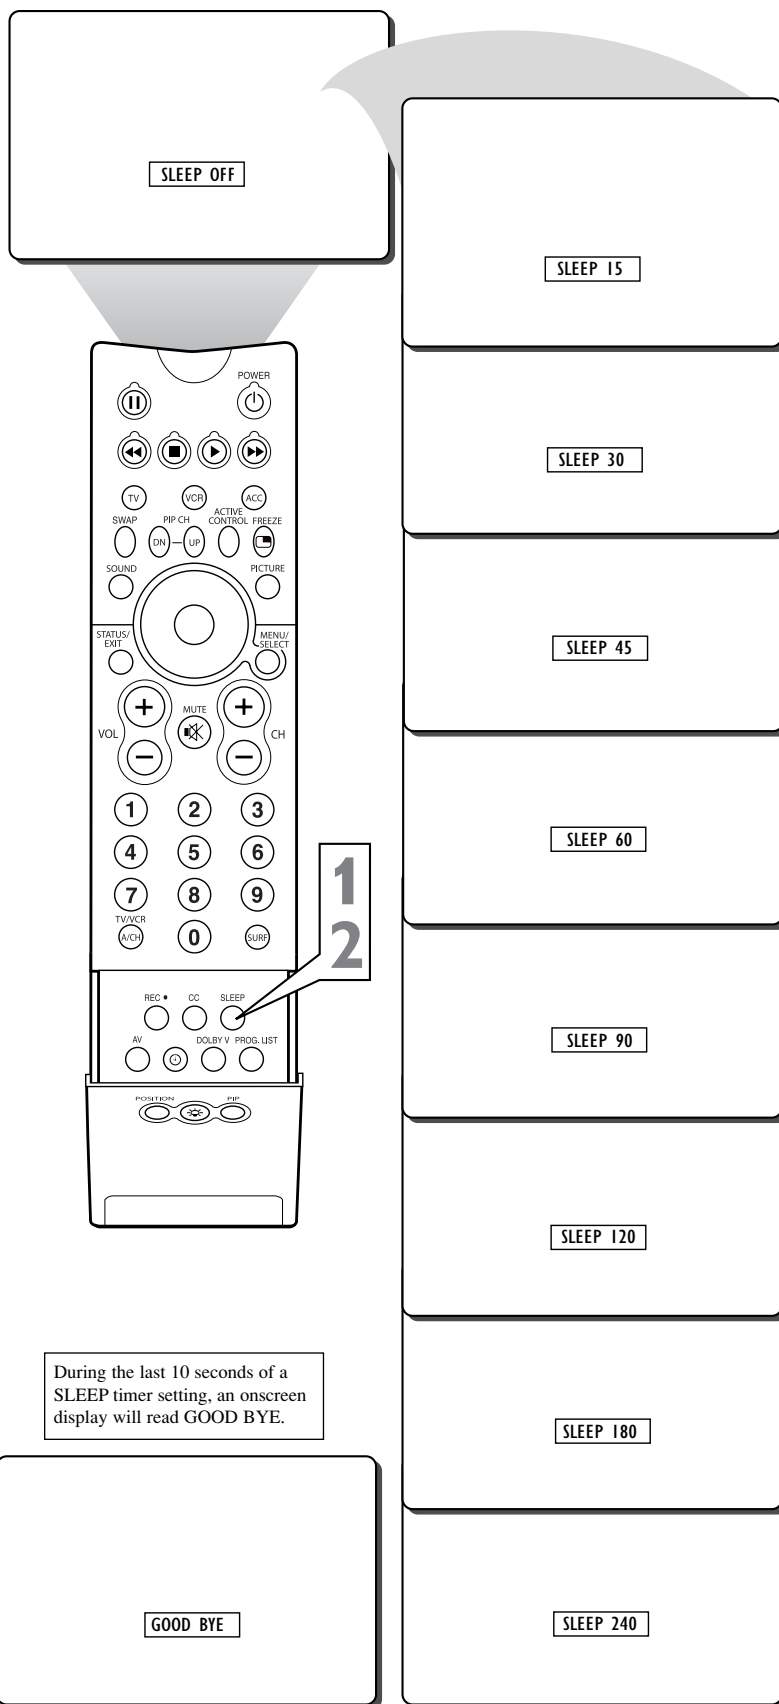

HOW TO USE THE FREEZE CONTROL



Have you ever wished you could freeze the picture on the television broadcast to write down a special telephone number or to capture a needed address? Your television will allow you to do just that with the press of just one button on the remote control.

With a signal on the television screen, simply **press the FREEZE button** on the remote control to stop the picture at any given moment.

The screen will read **“FREEZE ON”** momentarily and the picture frozen on the screen.


2 Press the **FREEZE** button on the remote control again to resume normal viewing.

The screen will read **“FREEZE OFF”** momentarily while the television displays a normal moving picture again.

HELPFUL HINT

After freezing a picture on the screen, when the FREEZE control is turned OFF, the normal signal programming will be shown at it's present time. The signal that was being shown while the picture was frozen will not be viewable.

If the FREEZE button is pressed when the AV4 Inputs (AV4 Channel) is tuned, the screen will read “FREEZE NOT AVAIL.”

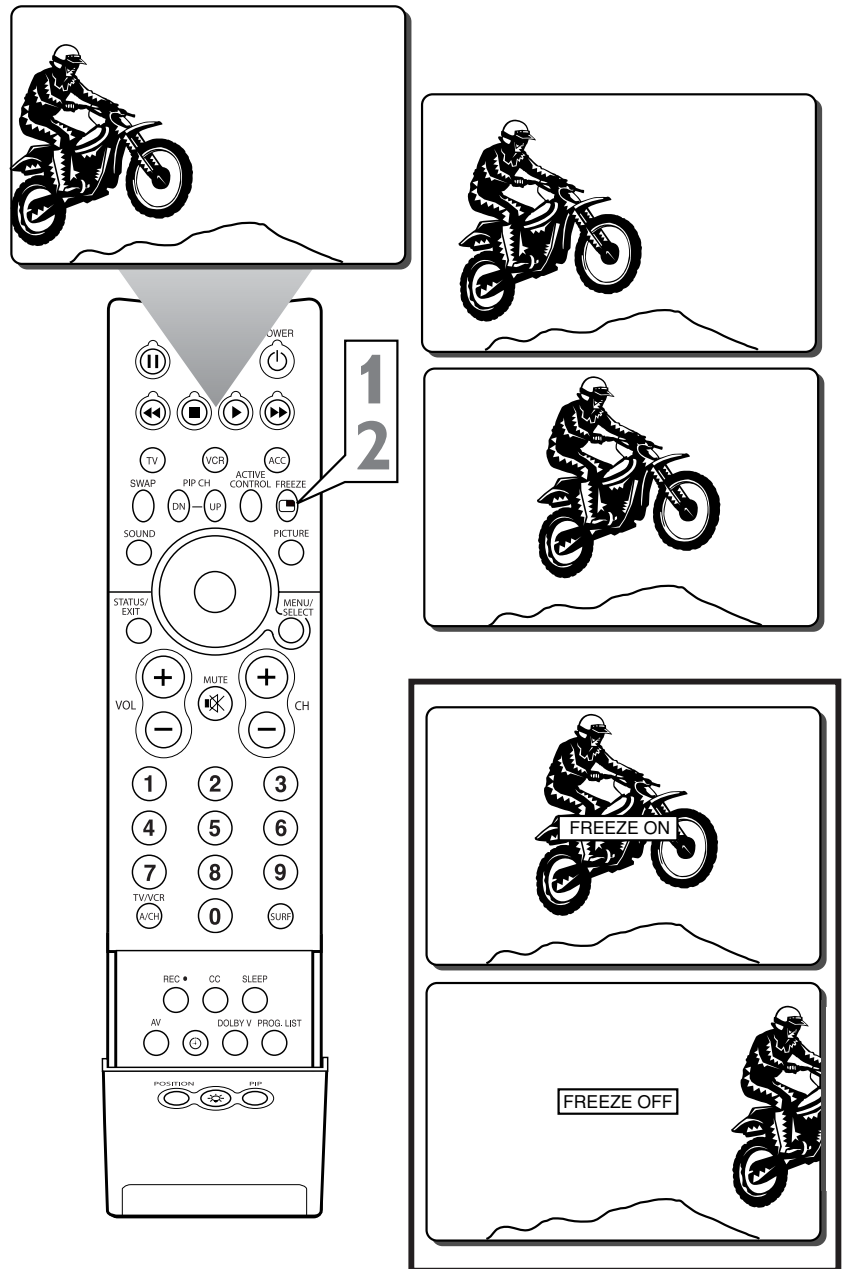




HOW TO USE THE AUTOPICTURE™ CONTROL

Whether you're watching a movie or a video game, your TV has automatic video control settings that will match with your current program source or content. AutoPicture™ quickly resets your TV's video controls for a number of different types of programs and viewing conditions that you may have in your home. The Movies, Sports, Weak Signal, and Multimedia AutoPicture™ controls have been preset at the factory to automatically adjust the TV's brightness, color, picture, sharpness, tint, and color temperature levels. The Personal AutoPicture™ settings are the ones that you made through the PICTURE options within the onscreen menu

1 Press the **PICTURE** button on the remote control. The current AutoPicture™ setting will appear in the middle of the screen.

2 Press the **PICTURE** button repeatedly to select either PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTIMEDIA picture settings.

NOTE: The PERSONAL setting and the PICTURE options within the onscreen menu are the same. This is the only option in AutoPicture™ that can be changed. To adjust these settings, use the PICTURE options within the onscreen menu. All other settings are set up at the factory during production and cannot be adjusted.

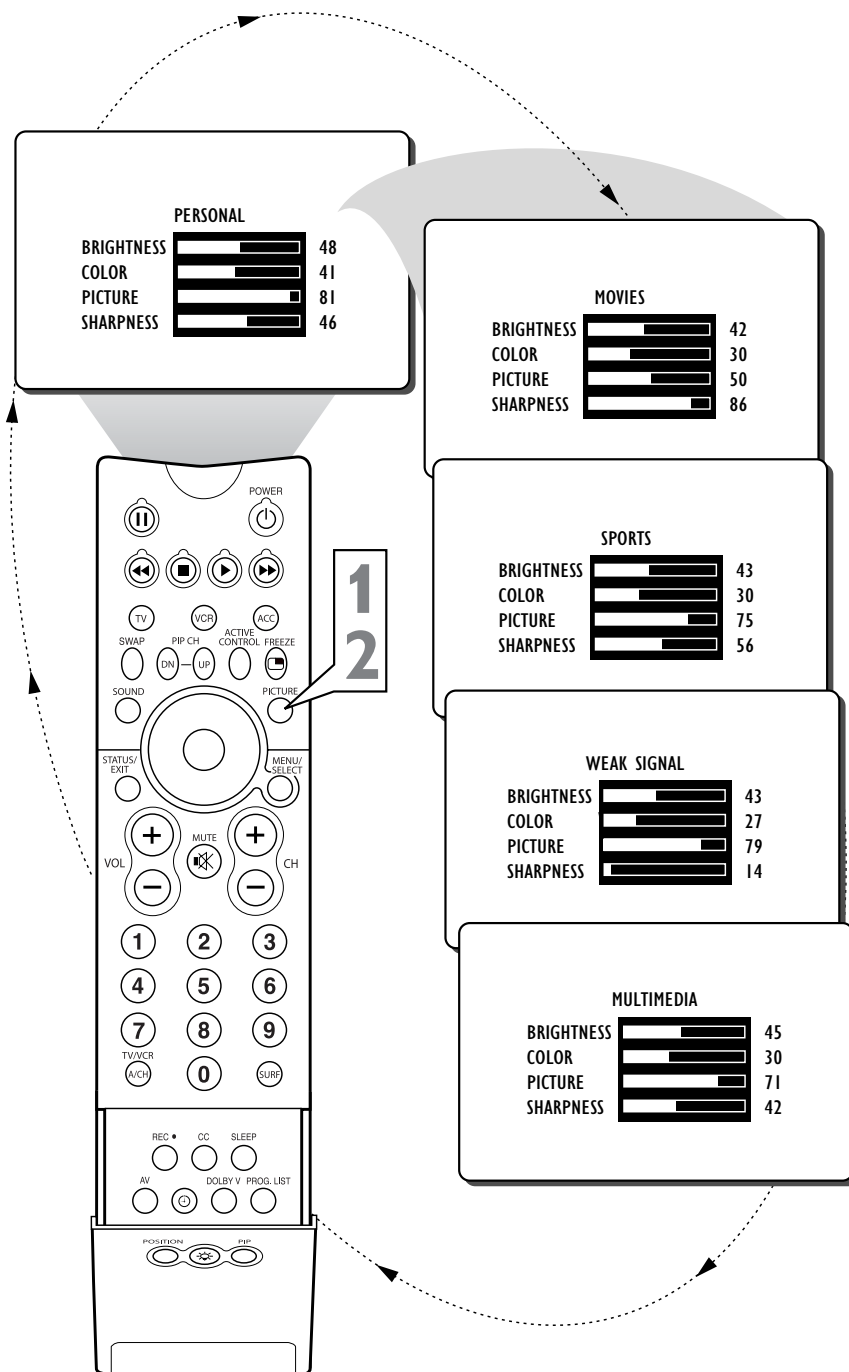

NOTE: The values shown in the diagram above are sample values only. Your television's values may vary and display different numbers.

HOW TO USE THE AUTO SOUND™ CONTROL



AutoSound™ allows you to select from three factory-set controls and a personal control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls (Voice, Music, and Theatre) enable you to tailor the TV sound so as to enhance the particular program you are watching. Follow these steps to select any of the options.

- 1** Press the **SOUND** button on the remote control. The current AutoSound™ setting will appear in the middle of the screen.
- 2** Press the **SOUND** button repeatedly to toggle among the four settings: PERSONAL, VOICE, MUSIC, or THEATRE.

Remember, only the PERSONAL control can be changed by the viewer. This changes the settings in the main onscreen menu's SOUND controls

HELPFUL HINT

AutoSound™ works only with the programs coming through the ANTENNA/CABLE (ANT) input on the rear of the TV (RF audio). It will not control the sound levels for the external connections.


✓ CHECK IT OUT

PERSONAL – presents the TV's sound according to the settings you make within the sound menu.

VOICE – brings voices to the forefront and emphasizes them. Moves music to the background.

MUSIC – emphasizes music over voices.

THEATRE – provides a balance between voices and music.

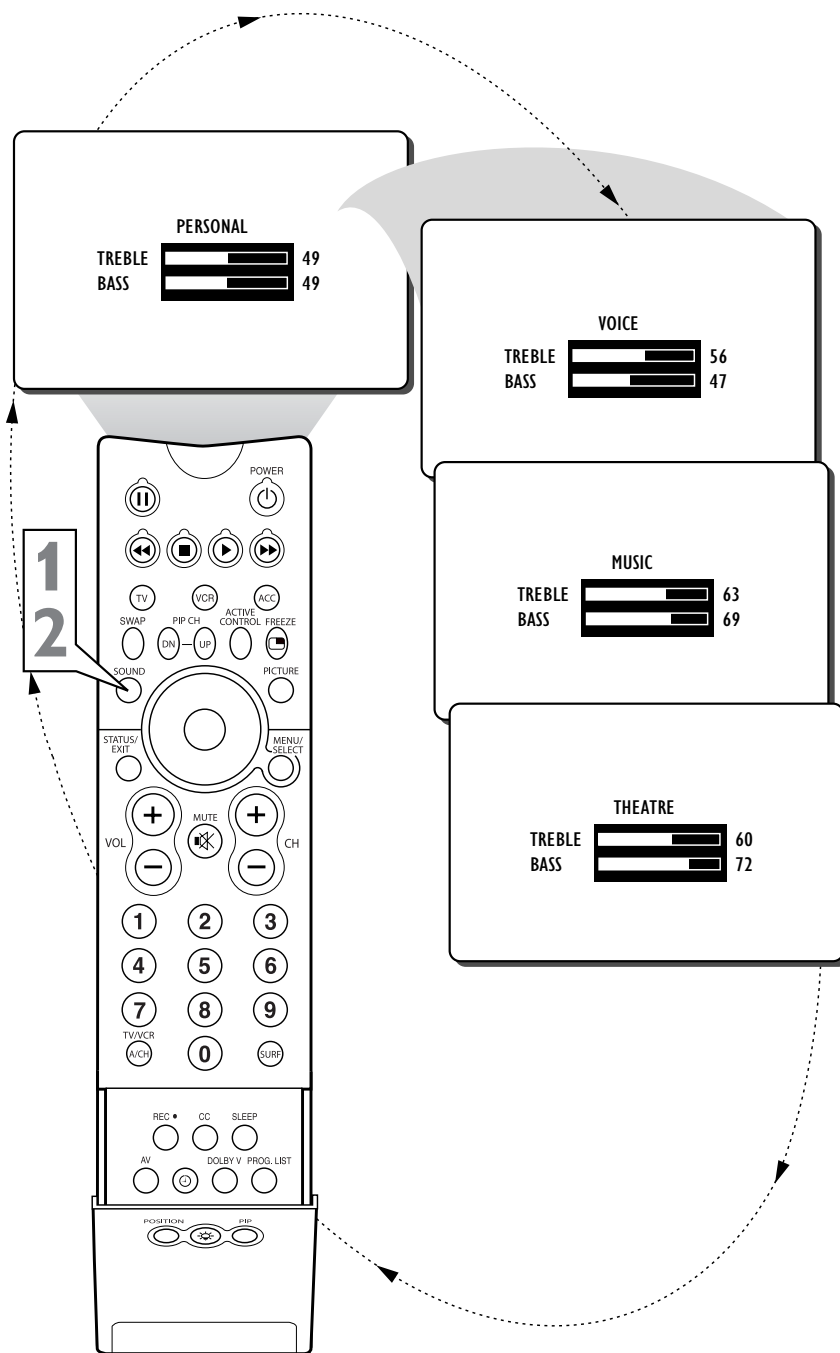

NOTE: The values shown in the diagram above are sample values only. Your television's values may vary and display different numbers.



HOW TO USE SURF CONTROL (AND ALTERNATE CHANNEL)


A list or series of previously viewed channels can be selected with the SURF button on your remote control. With this feature, you can easily switch between different TV channels that currently interest you. The SURF control allows you to set up to ten channels in its quick viewing list.

- 1 Press the **CHANNEL(+)** or **(-)** button (or the numbered buttons) to select a channel to add to the SURF list.
- 2 Press the **SURF** button on the remote control. The onscreen display may read, "SURF LIST EMPTY." The number of the current channel will be shown with "ADD?" to the right.
- 3 While the SURF list message or the SURF channel list appears on the screen, press the **CURSOR RIGHT** button to add the present channel to the SURF list.
- 4 If you want to delete the present channel from the SURF list, press the **CURSOR RIGHT** button again.

Repeat steps 1 through 3 to add more channels (up to 10) to the SURF list.

HELPFUL HINT


Along with regularly programmed channels, the external video source connections can be added to the SURF list. This means that the AV1, CVI, AV2, AV3, and AV4 channels can be added to your SURF list. Just tune to their channel and use the same procedure described on this page.

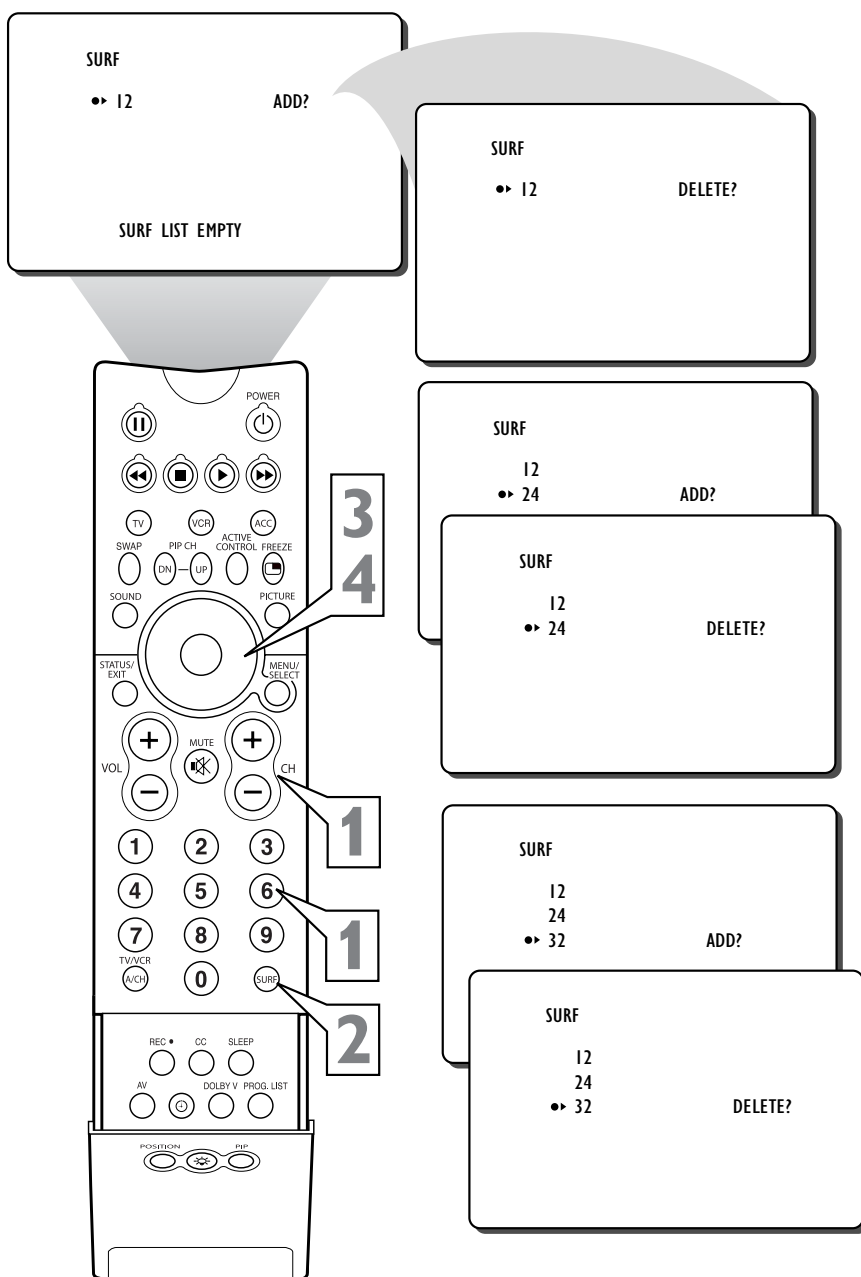

ALTERNATE CHANNEL BUTTON

Your remote also has an A/CH (Alternate Channel) button. Pressing this button will toggle between the current and one previous channel.

- 1 Press the **A/CH** button toggle between the present channel and the last previously viewed channel.

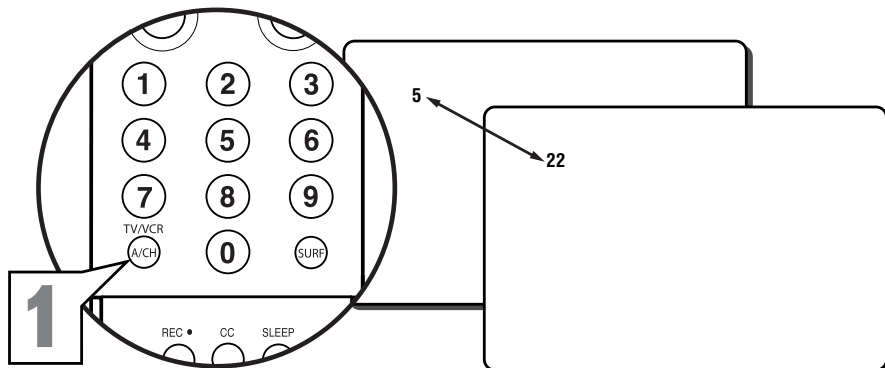



Your TV remote is capable of working not only your TV but also other infrared remote (IR) controlled devices such as VCRs, cable TV converter boxes, satellite receivers, DVD players, and laser-disc players.

If you want to use your TV remote to operate a VCR or other accessory device, you will need to perform this initial check explained in this section. You may also need to go to the sections on the “Code-entry Method” and the “Search Method” in the pages that follow.

Press the VCR or ACC(essory) mode button on the TV remote for the desired accessory device category.

NOTE: Pressing the VCR mode button allows access to product codes for VCRs. Pressing the ACC(essory) mode button allows access to the product codes for cable TV converters, satellite receivers, DVD players, and laser-disc players.


2 Point the TV remote toward the desired accessory device and press the POWER button.

Does the remote turn the accessory device on?

If yes, then try other function buttons on the TV remote. With a VCR, for example, try the Play, Stop, and Rewind buttons, for example. If they also work the accessory device, then the remote is ready and no further steps are needed.

If not, do the following:

Look up a four-digit remote code number on pages 46 and 47 for your brand of accessory device. Then go through the simple steps for entering a four-digit code as explained on the next page.

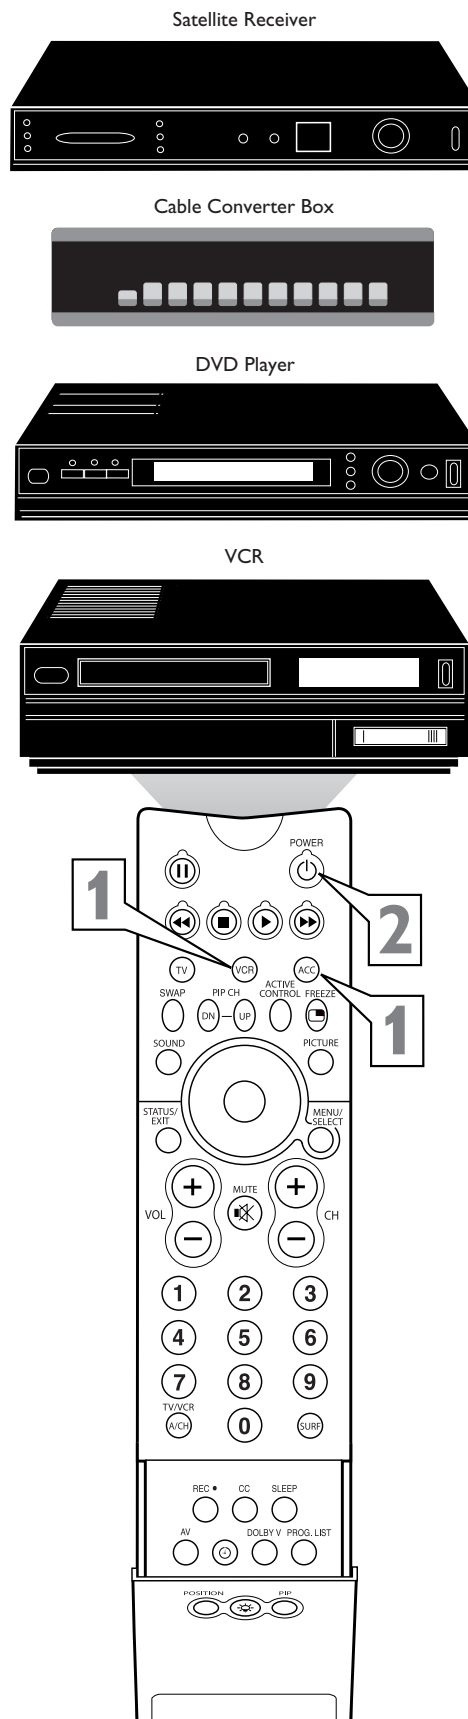

HELPFUL HINT

It is recommended that you use Philips brand external accessory devices with your Philips television to insure proper remote control functions. If you are using Philips brand accessory devices, your remote control should be ready to use with these devices.



USING THE REMOTE WITH ACCESSORY DEVICES - CODE ENTRY

Now that you have looked up the four-digit remote-control Direct-entry Code for your brand of accessory device, you are ready to follow the simple steps shown below to program your TV remote.

Please read through all the steps before beginning.


- 1** First, press and hold down the **VCR** or **ACC** (for an accessory device other than a VCR) mode button on the TV remote. Then press and hold down the **MENU/SELECT** button at the same time for a brief moment. Release the buttons. The TV remote back light will switch on.
- NOTE:** For correct operation, you must first press and hold the mode button and then press and hold the **MENU/SELECT** button simultaneously.
- 2** Within 30 seconds of pressing the **VCR** (or **ACC**) button and **MENU/SELECT** button, enter a four-digit code for the accessory device (see pages 46 and 47).
- If you make a mistake while attempting to enter the four-digit code and want to start again, press any button other than one with a number. Then return to step 1 to begin again.
- 3** Point the remote at the accessory device. Then press the **POWER** button on the remote to turn the device on.

HELPFUL HINT

If you do not enter a complete code within 30 seconds, you will need to perform step 1 of the Code-entry Method again.

If the procedure explained above does not work the first time, repeat the steps using the same remote code number.

If after repeated attempts the Code-entry Method does not allow you to work your accessory device with your TV remote, try the Search Method explained on the next page.

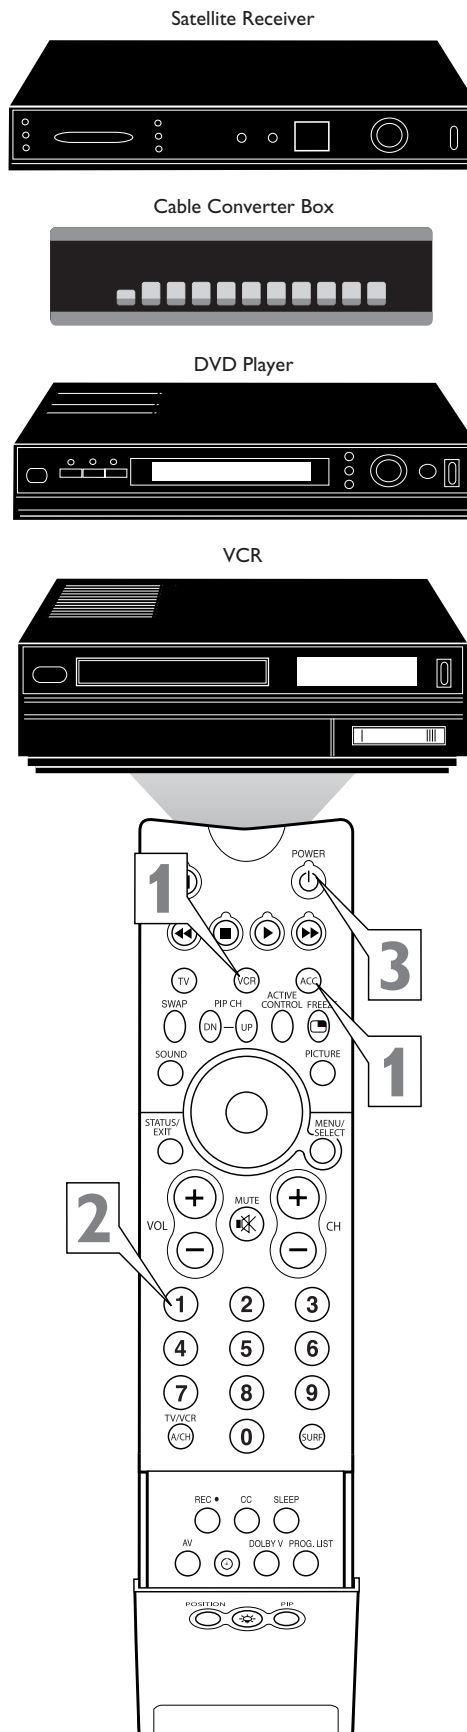



Your TV remote can be set to work various accessory devices (VCRs, cable converters, and satellite receivers, for example) by what is called the Search Method.

NOTE: The Search Method works only with devices equipped with channel-display indicators on the devices themselves or the ability to show channel numbers on the TV screen. If the Code-entry Method (shown in the previous section) did not enable your TV remote to work your accessory device, then follow the easy steps listed below. Please read the steps once before performing them.

1 Turn on the desired device. Press and hold down the VCR or ACC (for an accessory device other than a VCR) mode button on the TV remote. Then press and hold down the SURF button as you hold down the desired mode (VCR or ACC) button.

NOTE: For correct operation, you must press and hold down the desired mode (VCR or ACC) button first and then press and hold down the SURF button second.

While holding down the SURF and the desired mode (VCR or ACC) buttons simultaneously, point the remote toward the accessory device and continue holding the buttons down.

2 Watch the Channel Indicator on your accessory device. Channel numbers will scan up when the TV remote has identified the correct code for your accessory device. This may take several minutes.

3 Release the mode (VCR or ACC) and SURF buttons as soon as channel numbers start to scan up. The scanning means that your TV remote has found the code for your accessory device.


NOTE: If no channel change happens after several minutes, repeat steps 1 and 2. Then if a channel change still does not occur, the remote will not work with the desired accessory device.

HELPFUL HINT

The remote's back light will blink as the remote moves through its product code list. After the remote identifies the product code for your accessory device and you release the remote buttons, the back light will blink twice.

This process can take several minutes.

Don't let the accessory device scan up more than five channels when the correct code is found—the remote may pass up the right code and have to repeat the search cycle.

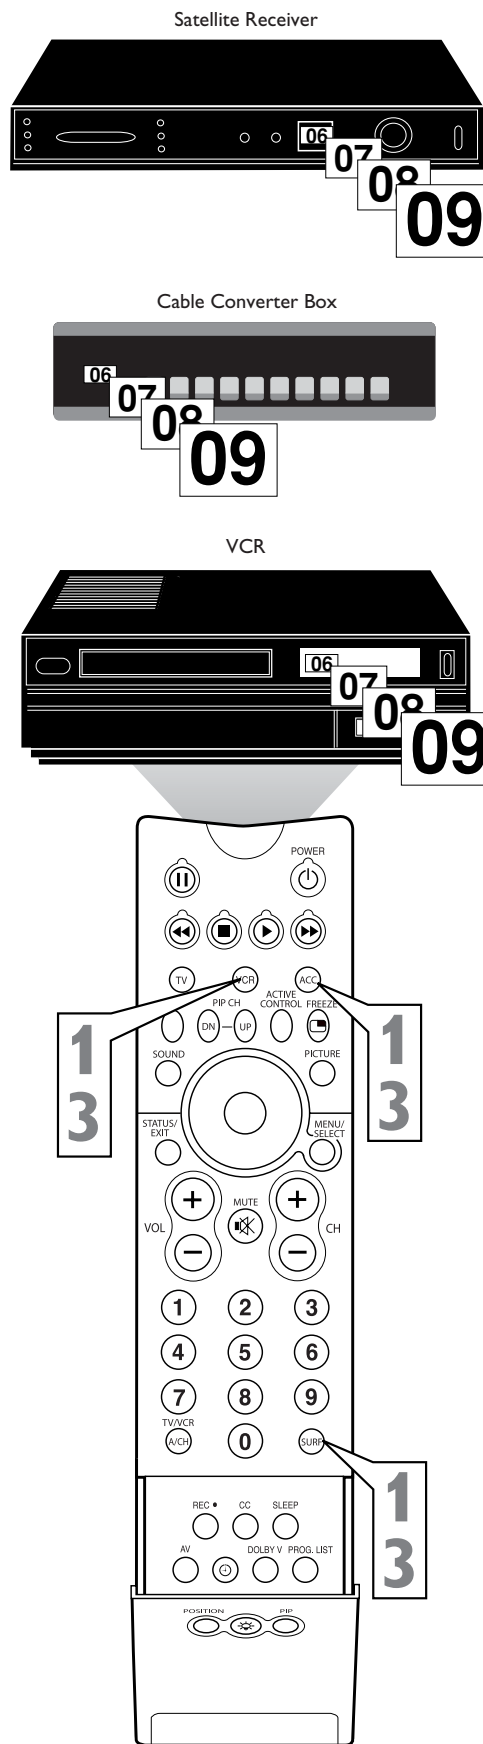



CODE-ENTRY CODE LIST FOR ACCESSORY DEVICES

VCR

| CODE NUMBER | | HUGHES NETWORK SYSTEMS .0069 | | PIONEER .0085, 0195, 0094 | |
|---------------------------|--|------------------------------|--|---------------------------|--|
| ADMIRAL | .0075, 0236 | JVC | .0094, 0035, 0233, 0234, 0068, 0411 | POLK AUDIO | .0108 |
| ADVENTURA | .0027 | JENSEN | .0068 | PORTLAND | .0047 |
| AIKO | .0305 | KEC | .0064, 0305 | PROFITRONIC | .0267 |
| AIWA | .0334, 0495, 0027, 0064 | KLH | .0099 | PROSCAN | .0087, 0229 |
| AKAI | .0133, 0080, 0068, 0076, 0088, 0183, 0269 | KENWOOD | .0068, 0094, 0411, 0065 | PROTEC | .0099 |
| AMERICA ACTION | .0305 | KODAK | .0062, 0064 | PULSAR | .0066, 0078 |
| AMERICAN HIGH | .0062 | LXI | .0064 | QUARTER | .0073 |
| ASHA | .0267 | LLOYD'S | .0027, 0235 | QUARTZ | .0073 |
| AUDIOVOX | .0064 | LOGIK | .0099 | QUASAR | .0062, 0189, 0104, 0481, 0828 |
| BEAUMARK | .0267 | MEI | .0062 | RCA | .0087, 0176, 0229, 0069, 0132, 0085, 0062, 0075, |
| BELL & HOWELL | .0131 | MGA | .0070, 0088, 0267 | | .0092, 0104, 0133, 0267, 0304 |
| BROKSONIC | .0148, 0211, 0029, 0236, 0238, 0322, 0388, | MGN TECHNOLOGY | .0267 | RADIO SHACK | .0027 |
| 0506 | | MTC | .0027, 0267 | RADIX | .0064 |
| CCE | .0099, 0305 | MAGNASONIC | .0305 | RANDEX | .0064 |
| CALIX | .0064 | MAGNAVOX | .0062, 0108, 0137, 0130, 0027, 0066, 0176 | REALISTIC | .0027, 0131, 0074, 0075, 0064, 0062, 0089, 0073, |
| CANON | .0194, 0062, 0129 | MAGNIN | .0267 | | .0093 |
| CAPEHART | .0047 | MARANTZ | .0108, 0062 | RICOH | .0061, 0280 |
| CARVER | .0108 | MARTA | .0064 | RUNCO | .0066 |
| CINERAL | .0305 | MATSUSHITA | .0062, 0189, 0481 | STS | .0069 |
| CITIZEN | .0305, 0064 | MEMOREX | .0131, 0074, 0506, 0027, 0064, 0075, 0062, 0073, | SALORA | .0102 |
| COLT | .0099 | | .0267, 0334, 0066, 0189, 0236, 0481, 0828, 0829 | SAMSUNG | .0072, 0078, 0080, 0267 |
| CRAIG | .0064, 0099, 0074, 0267, 0298 | MINOLTA | .0132, 0069 | SANKY | .0066, 0075 |
| CURTIS MATHES | .0062, 0068, 0087, 0189 | MITSUBISHI | .0200, 0088, 0102, 0241, 0269, 0070, 0075, 0094, | SANSUI | .0068, 0506, 0027, 0094, 0109, 0236, 0298 |
| CYBERNEX | .0078, 0267 | | .0470 | SANYO | .0074, 0073, 0131, 0267 |
| DAEWOO | .0305, 0588, 0047, 0072 | MOTOROLA | .0062, 0075 | SCOTT | .0211, 0238, 0148, 0070, 0072, 0237, 0239 |
| DAYTRON | .0047 | MULTITECH | .0027, 0099 | SEARS | .0081, 0132, 0064, 0069, 0027, 0062, 0073, 0074, |
| DENON | .0069 | NAD | .0085 | | .0093, 0131 |
| DYNATECH | .0027 | NEC | .0065, 0067, 0068, 0077, 0094, 0109, 0131 | SEMP | .0072 |
| ELECTROHOME | .0064 | | .0064 | SHARP | .0075, 0089 |
| ELECTROPHONIC | .0064 | NIKKO | .0061, 0280 | SHINTOM | .0099 |
| EMEREX | .0059 | NOBLEX | .0267 | SHOGUN | .0078, 0267 |
| EMERSON | .0211, 0029, 0236, 0305, 0063, 0148, 0238, 0588, | OLYMPUS | .0062, 0253 | SINGER | .0099 |
| | .0235, 0321, 0506, 0088, 0115, 0239, 0027, 0064, | OPTIMUS | .0189, 0481, 0827, 0828, 0075, 0085, 0829, 0064, | SONY | .0060, 0061, 0059, 0280, 0027, 0038, 0062 |
| | .0070, 0095, 0322, 0388, 0537 | | .0131, 0459 | SUNPAK | .0280 |
| FISHER | .0074, 0131, 0081, 0093 | OPTIONICA | .0089 | SYLVANIA | .0062, 0108, 0027, 0070, 0130, 0137 |
| FUJI | .0060, 0062 | ORION | .0506, 0029, 0211, 0236, 0322 | SYMPHONIC | .0027 |
| FUNAI | .0027 | PANASONIC | .0062, 0189, 0828, 0481, 0253, 0104, 0405, 0829, | TMK | .0063, 0235, 0267 |
| GE | .0062, 0087, 0075, 0092, 0229, 0267 | | .0129, 0252, 0254, 0273, 0827 | TATUNG | .0068 |
| GARRARD | .0027 | PENNEY | .0062, 0267, 0064, 0069, 0065, 0067, 0081 | TEAC | .0027, 0068 |
| GO VIDEO | .0306, 0459, 0553, 0259 | PENTAX | .0069, 0092, 0132 | TECHNICS | .0062, 0189, 0273 |
| GOLDSTAR | .0064, 0045, 0065, 0498, 0507 | PHILCO | .0062, 0236, 0506 | TEKNIKA | .0027, 0062, 0064, 0079 |
| GRADIENTE | .0035, 0027, 0435 | PHILIPS | .0108, 0062, 0089, 0137, 0830, 0831 | THOMAS | .0027 |
| GRUNDIG | .0222 | | .0064 | TOSHIBA | .0072, 0237, 0239, 0070, 0093, 0393 |
| HI-Q | .0074 | PILOT | .0064 | TOTEVISION | .0064, 0267 |
| HARLEY DAVIDSON | .0027 | | | UNITECH | .0267 |
| HARMAN/KARDON | .0065, 0102, 0108 | | | VECTOR | .0072 |
| HARWOOD | .0095, 0099 | | | VECTOR RESEARCH | .0065, 0067 |
| HEADQUARTER | .0073 | | | | |
| HITACHI | .0069, 0193, 0132, 0092, 0027, 0068, 0109 | | | | |

DVD PLAYER

| CODE NUMBER | | | | | |
|---------------|-------|------------|-------------|---------------|-------------|
| DENON | .0859 | MARANTZ | .0866 | RCA | .0862, 0869 |
| GE | .0862 | MITSUBISHI | .0861 | SAMSUNG | .0870 |
| HARMAN/KARDON | .0871 | ONKYO | .0860 | SONY | .0864 |
| HITACHI | .0870 | OPTIMUS | .0869 | TECHNICS | .0859 |
| JVC | .0868 | PANASONIC | .0859 | THETA DIGITAL | .0869 |
| KENWOOD | .0865 | PHILIPS | .0866, 0860 | TOSHIBA | .0860 |
| MAGNAVOX | .0860 | PIONEER | .0869, 0863 | YAMAHA | .0859, 0867 |
| | | PROSCAN | .0862 | ZENITH | .0872, 0860 |

CODE-ENTRY CODE LIST FOR ACCESSORY DEVICES



LASER-DISC PLAYER

| CODE NUMBER | | | | | |
|---------------|-------------------|------------|-------------|---------------|-------------------|
| ADS | .0880 | MARANTZ | .0853, 0850 | RCA | .0881, 0874 |
| AIWA | .0855 | MITSUBISHI | .0849 | REALISTIC | .0855 |
| CARVER | .0853, 0850, 0858 | NAD | .0849 | SAMSUNG | .0858 |
| DENON | .0851, 0849, 0875 | NEC | .0879 | SEGA | .0848 |
| DISCO VISION | .0848 | NIKKODO | .0884 | SHARP | .0873 |
| FUNAI | .0855 | OPTIMUS | .0849 | SONY | .0854, 0852, 0878 |
| HARMAN/KARDON | .0853 | PANASONIC | .0856 | TECHNICS | .0856 |
| HITACHI | .0848 | PHILIPS | .0853, 0850 | THETA DIGITAL | .0853 |
| KENWOOD | .0877 | PIONEER | .0849, 0848 | VICTOR | .0876 |
| MAGNAVOX | .0853, 0857, 0875 | POLK AUDIO | .0853 | YAMAHA | .0857 |
| | | QUASAR | .0856 | | |

CABLE CONVERTER BOX

| CODE NUMBER | | | 0300 | REMBRANDT | 0038, 0097 |
|--------------------|-------------------------|-------------------|-------------------------|--------------------|-------------------------|
| ABC | 0030, 0028, 0034, 0035, | HITACHI | 0038 | RUNCO | 0027 |
| | 0038, 0040, 0041, | HYTEX | 0034 | SL MARX | 0067 |
| 0044, | 0060 | JASCO | 0042, 0180, 0342 | SAMSUNG | 0067, 0171 |
| ALLEGRO | 0180, 0342 | JERROLD | 0030, 0039, 0303, 0041, | SCIENTIFIC ATLANTA | 0035, 0044, 0033, 0504 |
| ANTRONIX | 0049, 0234 | | 0503, 0038, 0051, | SEAM | 0537 |
| APACHE | 0797 | 0042, | | SIGNAL | 0042, 0067 |
| ARCHER | 0049, 0066, 0180, 0234, | | 0837 | SIGNATURE | 0038 |
| | 0824 | LINSAY | 0467 | SPRUCER | 0048 |
| BBT | 0294 | MACOM | 0060 | STARLIGHT | 0569, 0449 |
| BELCOR | 0083 | MAGNAVOX | 0054 | STARCOM | 0030, 0042 |
| BELL & HOWELL | 0041 | MEMOREX | 0027 | STARGATE | 0067, 0042, 0797, 0824 |
| CABLE STAR | 0083 | MOVIE TIME | 0090, 0183 | STARQUEST | 0042 |
| CABLETENNA | 0049 | NSC | 0183, 0090, 0097 | SYLVANIA | 0028 |
| CABLEVIEW | 0049 | NEXUS | 0797 | TFC | 0337 |
| CENTURY | 0180 | NOVAPLEX | 0645 | TV86 | 0090 |
| CITIZEN | 0180, 0342 | OAK | 0046, 0034 | TANDY | 0285 |
| COLOUR VOICE | 0052, 0058 | OPTIMUS | 0048 | TELECATION | 0248 |
| COMBAND | 0259 | PANASONIC | 0048, 0134, 0027 | TELEVIEW | 0067 |
| COMTRONICS | 0067, 0087 | PANTHER | 0664 | TEXSCAN | 0028 |
| CONTEC | 0046 | PARAGON | 0027 | TIMELESS | 0445 |
| DIGI | 0664 | PHILIPS | 0052, 0058, 0269, 0317, | TOCOM | 0039, 0040 |
| EASTERN | 0029 | | 0054, 0180 | TOSHIBA | 0027 |
| EMERSON | 0824 | PIONEER | 0171, 0050, 0560 | TUSA | 0042 |
| EVERQUEST | 0042, 0067 | POPULAR MECHANICS | 0427 | UNIKA | 0180, 0234, 0049 |
| FOCUS | 0427 | PRELUDE | 0797 | UNITED ARTISTS | 0034 |
| GC ELECTRONICS | 0083, 0234 | PULSAR | 0027 | UNIVERSAL | 0234, 0049, 0066, 0083, |
| GE | 0259 | QUASAR | 0027 | | 0180, 0218 |
| GARRARD | 0180 | RCA | 0048 | VIEWMASTER | 0847 |
| GEMINI | 0042, 0097, 0269, 0824 | RADIO SHACK | 0042, 0847, 0342, 0824 | VIEWSTAR | 0285, 0054, 0087, 0090 |
| GENERAL INSTRUMENT | 0303, 0038, 0503, 0837 | REALISTIC | 0234 | ZENITH | 0027, 0552, 0081 |
| GOLDSTAR | 0067, 0171 | RECOTON | 0427 | ZENTEK | 0427 |
| GOODMIND | 0797, 0824 | REGAL | 0300, 0047, 0286 | | |
| HAMLIN | 0047, 0036, 0286, 0061, | REGENCY | 0029 | | |

SATELLITE RECEIVER/DIGITAL SATELLITE SYSTEM

| CODE NUMBER | | | | | |
|-------------------|-------------------------------|------------------------|-------------------------------|----------------|--|
| ALPHASTAR | .0799 | GE | .0593 | NORSAT | .0031 |
| AMPLICA | .0099 | GENERAL INSTRUMENT | .0388, 0896, 0574, 0581, 0654 | PANASONIC | .0179, 0728 |
| AMWAY | .0070, 0102 | | | PHILIPS | .0227, 0749, 0751 |
| ARUNTA | .0548 | GOULD | .0082 | PICO | .0102 |
| ASTRO INDUSTRIES | .0122 | HNS | .0644 | PRIMESTAR | .0654, 0388 |
| BMC | .0114 | HTS | .0802 | RCA | .0593, 0170, 0882 |
| BSR | .0122 | HITACHI | .0846 | RADIO SHACK | .0581, 0896 |
| CABLE INNOVATIONS | .0581 | HomeCABLE | .0265 | RAMSEY | .0102 |
| CAPETRONIC | .0122 | HUGHES NETWORK SYSTEMS | .0776 | REALISTIC | .0079, 0078 |
| CENTURY | .0565 | HYTEK | .0122 | STS | .0237, 0068 |
| CHANNEL MASTER | .0045, 0239 | IQ | .0237 | SONY | .0666 |
| CHAPARRAL | .0080, 0236, 0243 | IQ PRISM | .0237 | STAR CHOICE | .0896 |
| CITOH | .0191 | INTERSAT | .0070 | STAR TRAK | .0207, 0448, 0574 |
| CONIFER | .0031 | JVC | .0802 | STRONG | .0448 |
| CURTIS MATHES | .0088, 0099 | JANEIL | .0179 | TOSHIBA | .0109, 0776, 0817, 0088 |
| DX ANTENNA | .0068 | JERROLD | .0388, 0654 | TOWN & COUNTRY | .0574 |
| DRAKE | .0091, 0272, 0045, 0176 | LEGEND | .0296 | UNIDEN | .0265, 0079, 0101, 0397, 0581, 0751, 0103, 0323, |
| ECHO STAR | .0307, 0802, 0175, 0186, 0296 | MACOM | .0088, 0045 | | |
| | | MAGNAVOX | .0749, 0751 | | |
| EXPRESSVU | .0802 | MEMOREX | .0296, 0751 | | .0749 |
| | | NEXT LEVEL | .0896 | ZENITH | .0091, 0883, 0088 |

TELEVISION

| | |
|----------------|------|
| CODE NUMBER | |
| MAGNAVOX | 0583 |




REMOTE CONTROL WITH ACCESSORY DEVICES

The chart below provides you with common accessory-device functions associated with the buttons on your Philips TV remote control.


NOTES: Functions can vary according to the manufacturer's specifications for each accessory device.

First press the VCR mode button to use the TV remote to operate a VCR.

First press the ACC mode button to use the TV remote to operate a DVD player, laser-disc player, cable converter box, or satellite receiver/digital satellite system.

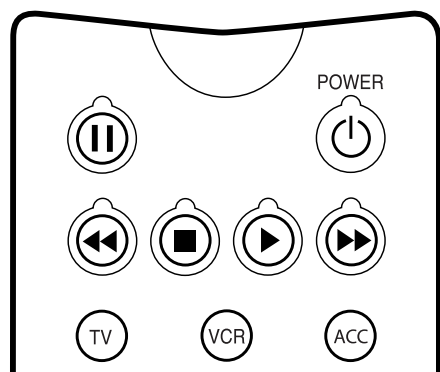

TV Remote VCR and Accessory Mode Buttons

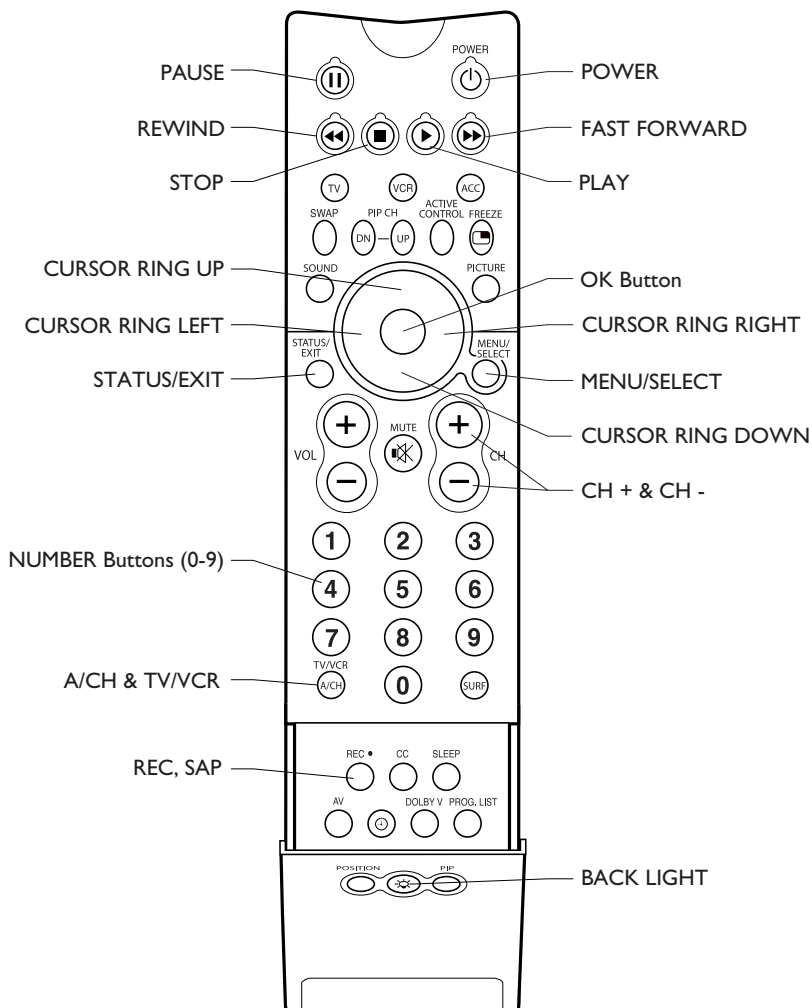

| Button on TV Remote | Common VCR Function | Common DVD/LD Player Function | Common Cable Converter Box or Satellite Receiver/Digital Satellite System (DSS) Function |
|----------------------|---------------------------------|-------------------------------|--|
| POWER | POWER | POWER | POWER |
| PAUSE | PAUSE | PAUSE | — |
| REWIND | REWIND | SEARCH REVERSE | — |
| STOP | STOP | STOP | — |
| PLAY | PLAY | PLAY | — |
| FAST FORWARD | FAST FORWARD | SEARCH FORWARD | — |
| CURSOR RING UP | CURSOR UP | CURSOR UP | CURSOR UP |
| CURSOR RING DOWN | CURSOR DOWN | CURSOR DOWN | CURSOR DOWN |
| CURSOR RING RIGHT | CURSOR RIGHT | CURSOR RIGHT | CURSOR RIGHT |
| CURSOR RING LEFT | CURSOR LEFT | CURSOR LEFT | CURSOR LEFT |
| OK Button | PROGRAM; MENU | MENU | MENU (also, GUIDE for satellite receivers/DSS) |
| STATUS/EXIT | EXIT | EXIT | EXIT |
| MENU/SELECT | SELECT | SELECT | SELECT |
| CH + | CHANNEL UP | NEXT | CHANNEL UP |
| CH - | CHANNEL DOWN | PREVIOUS | CHANNEL DOWN |
| NUMBER Buttons (0-9) | NUMBER SELECTION (0-9) | NUMBER SELECTION (0-9) | NUMBER SELECTION (0-9) |
| A/CH* and TV/VCR | TV/VCR, A/CH* | — | — |
| REC, SAP | RECORD (Press with PLAY Button) | — | — |
| BACK LIGHT** | BACK LIGHT** | BACK LIGHT** | BACK LIGHT** |

*A/CH (Alternate Channel) allows you to switch between the currently viewed channel and the previously viewed channel.

**Press the BACK LIGHT button to light the white buttons on the remote.

PIP – SELECTING THE SIGNAL SOURCE




The picture for the PIP window can come through either the ANT/CABLE or any of the external Audio/Video connections at the rear of the TV. PIP SOURCE simply tells the TV which one of these sources it is to show in the PIP window.

- 1 Turn the TV and VCR (or other device hooked to the external A/V connections) ON.
- 2 Press the PIP ON/OFF button on the remote control. The PIP window should appear in the upper right-hand portion of the screen.
- 3 Press the AV button on the remote control to toggle among the different external connections.

The PIP SOURCE may come from the following:

AV1, AV2, AV3, S-VIDEO, CVI: for picture signal coming from the external audio/video jacks on the TV. (You must have an external device hooked up at these locations.)

ANTENNA/CABLE: for a picture signal coming from the ANT/CABLE input on the back of the TV.

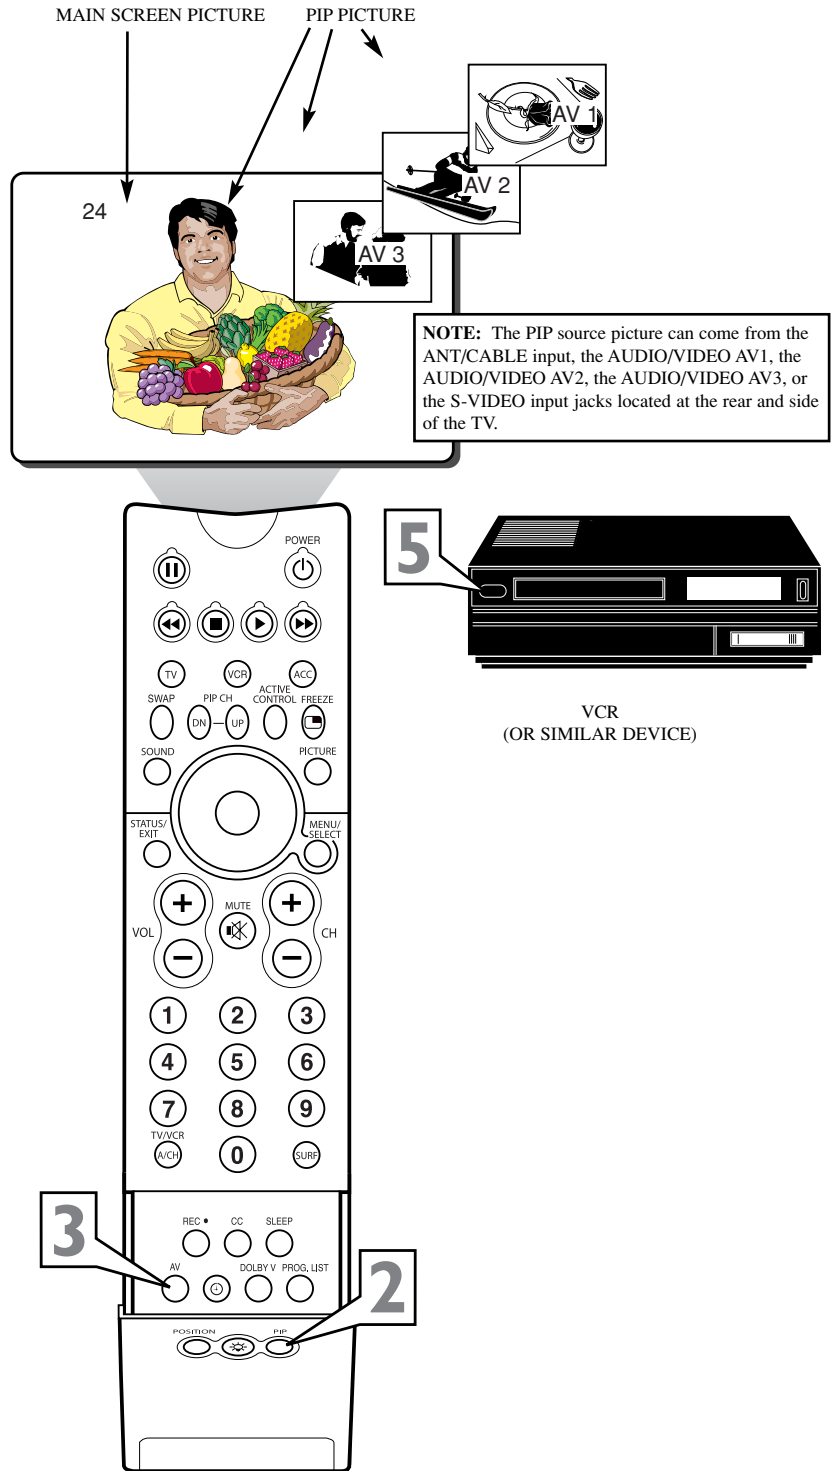



PIP – REMOTE CONTROL BUTTONS

By using the PIP buttons on the remote control, you can change the size of the PIP window and move and swap the PIP picture with the main screen. The PIP picture also can be frozen within the PIP window.

1 Press the PIP button to show the PIP window. PIP appears in one of the four corners of the screen.


The PIP button will also change the PIP Window size and format (refer to the next page, PIP Window Size & Double Window PIP section).

2 Press the POSITION button on the remote control to move the PIP picture to any of the four corners.


3 Press the FREEZE button on the remote control to stop the action within the PIP window. **Press the FREEZE button** again to resume the normal viewing action.

4 Press the PIP CH(annel) UP/DN buttons on the remote control to choose a different channel or a different PIP source.


5 Press the SWAP button to swap the main screen picture with the PIP picture. Pressing the SWAP button again will return the main picture to the screen.

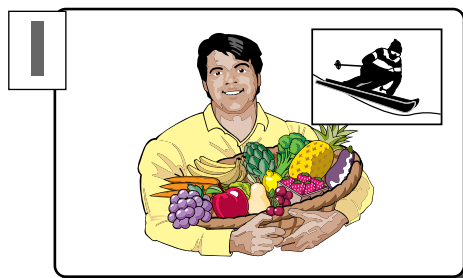


1. PIP ON/OFF

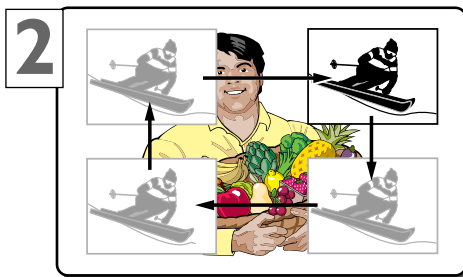



2. PIP POSITION

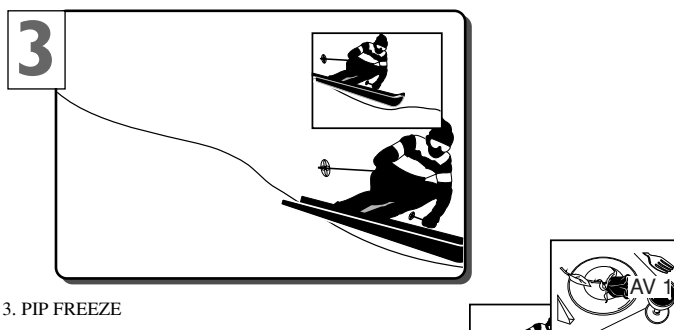

3. PIP FREEZE

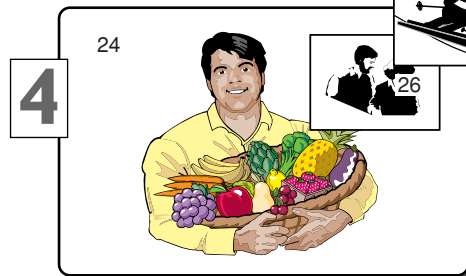

4. PIP CHANNEL UP/DN

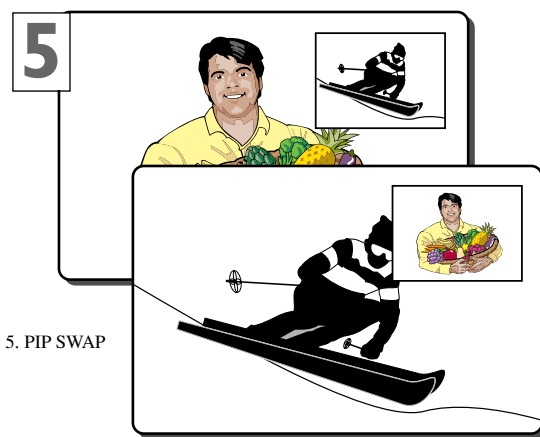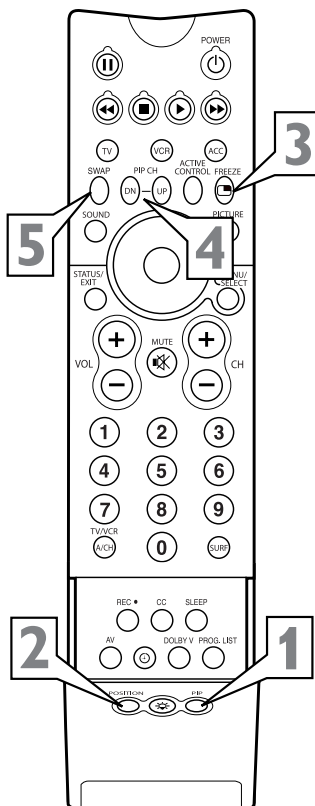


5. PIP SWAP

PIP – ADJUSTING THE PIP WINDOW SIZE AND DOUBLE WINDOW PIP



The PIP Window can be viewed in four different formats. There is a “large” PIP window, a “small” PIP window, a double PIP window, and a double PIP window in the 16:9 aspect ratio. The steps below show how to access the PIP Window and how to size them.


- 1** Press the PIP ON/OFF button on the remote to show the PIP Window. The PIP window will appear in the *LARGE* format.
- 2** Press the PIP ON/OFF button on the remote again and the PIP Window will reduce in size to the *SMALL* format.
- 3** Press the PIP ON/OFF button on the remote a *third* time to display Double Window PIP. Double Window PIP will split the screen with the main picture on one side and the PIP picture on the other.
- 4** Press the PIP ON/OFF button a *forth* time to change the Double Window PIP to a 16:9 aspect ratio.
- 5** Press the PIP ON/OFF button on the remote a *forth* time and the PIP window will be shut OFF, clearing the PIP window from the screen.

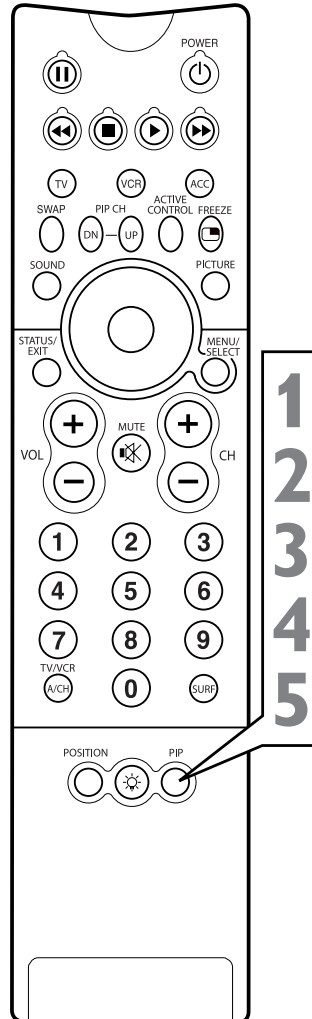


PIP Window - LARGE




PIP Window - SMALL

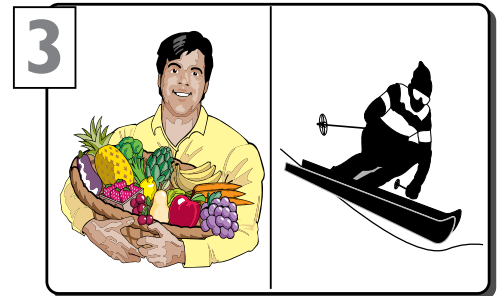

PIP Window - Double Window

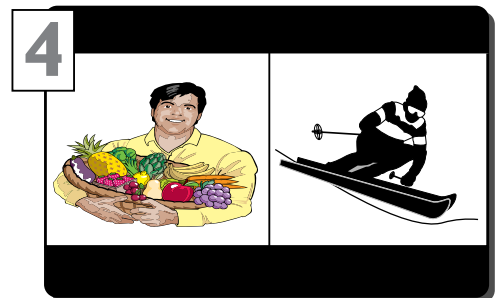

PIP Window - Double Window 16:9

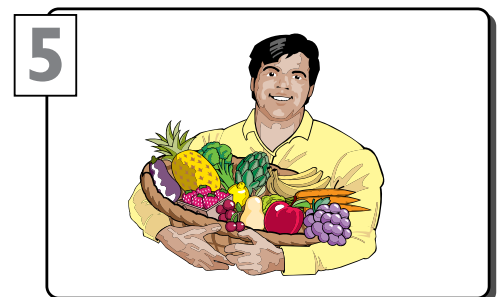


PIP Window - OFF



PIP – ADJUSTING THE COLOR AND TINT

The Picture-in-Picture (PIP) COLOR and TINT controls are used to make fine-tune adjustments to the picture settings for PIP (when shown on the TV screen).

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** twice to highlight PIP.
- 5** Press the **CURSOR RIGHT** again to shift the display to the COLOR adjustment bar.
- 6** Press the **CURSOR RIGHT** or the **CURSOR LEFT** to adjust the COLOR bar to the desired level.
- 7** Press the **CURSOR DOWN** to highlight the TINT adjustment bar.
- 8** Press the **CURSOR RIGHT** or the **CURSOR LEFT** to adjust the TINT bar to the desired level.
- 9** Press the **STATUS/EXIT** button to remove the menu from the screen.

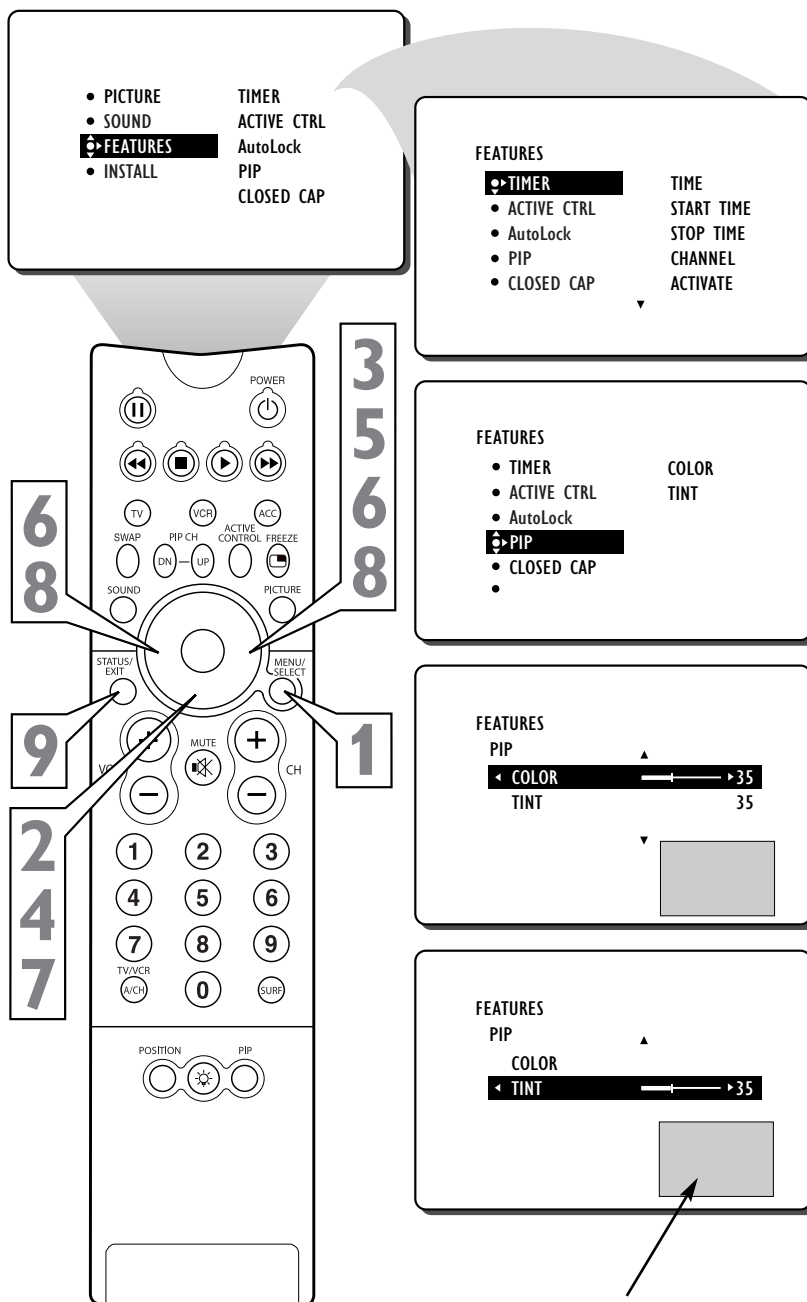

The PIP Window appears when adjustments are being made.



No Power

- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Check that the outlet is not on a wall switch.
- Be sure the fuse is not blown on the AC power strip, if one is being used.

No Picture

- Check antenna connections. Are they properly secured to the TV's ANT 75Ω plug?
- Check the TUNER MODE control for the correct tuner setting.
- Try running the Auto Program feature to find all available channels.
- Press the AV button on the remote to make sure the correct signal source is selected (FRONT or Current Channel).

No Sound

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.
- If you're attempting to hook up auxiliary equipment, check the audio jack connections located on the front of the TV.

Remote Does Not Work

- Check the batteries. If necessary, replace them with AA Heavy Duty (Zinc Chloride) or Alkaline batteries.

Remote Does Not Work Continued

- Clean the remote control and the remote control sensor window on the TV.
- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Be sure the fuse is not blown on the AC power strip, if one is being used.
- Check to be sure the TV outlet is not on a wall switch.

TV Displays Wrong Channel or No Channels Above 13

- Repeat channel selection.
- Add the desired channel numbers (using the CHANNEL EDIT control) into the TV's memory.
- Check to be sure the TUNER MODES are set to the CABLE option and run the Auto Program feature to find all available channels.

TV Displays white lines in letterbox when viewing a DVD disc

- Some DVD Discs are encoded with as much as 30% more video information to give the best possible picture quality. With the DVD Player in the 16:9 picture format, the playback of this type of disc with extra video information, can produce a number of small white lines in the upper portion of the black letterbox area. With some of these discs, this situation is unavoidable and it does not require a service call.



WARNING Concerning Stationary Images on the TV Screen:

Do not leave stationary or letterbox images on screen for extended periods of time. This can cause uneven picture-tube aging.

Normal use of the TV should involve the showing of pictures that contain constantly moving and changing images that fill the screen. Be careful not to leave nonmoving images on screen for extended periods of time, or to display the same images on screen too frequently, because subtle ghost images can be left on the picture tubes. Sources of stationary images may be DVD disks, laser disks, video games, CD-i disks, videotapes, digital television boxes, broadcast channels, cable channels, satellite channels, and others. **Here are some examples of stationary images (this is not an all-inclusive list; you may encounter others in your viewing):**

- **DVD menus**—listings of DVD disk content
- **Letterbox black bars**—shown at the top and bottom of the TV screen when a wide screen (16:9) movie is viewed on a TV with standard (4:3) aspect ratio.
- **Video-game images and scoreboards**
- **Television station logos**—present a problem if they are bright and stationary; moving or low-contrast graphics are less likely to cause uneven aging of the picture tube
- **Stock-market tickers**—presented at the bottom of the TV screen
- **Shopping channel logos and pricing displays**—bright and shown constantly or repeatedly in the same location on the TV screen.

PLACEMENT OF THE TV

- To avoid cabinet warping, cabinet color changes, and increased chance of set failure, do not place the TV where temperatures can become excessively hot; for example, in direct sunlight or near a heating appliance.
- Be sure to allow a free flow of air to and from the perforated back cover of the set.

CLEANING

- To avoid possible shock hazard, be sure the TV is unplugged from the electrical outlet before cleaning.
- Regularly dust the TV with a dry, nonscratching duster to keep the TV clean.
- When cleaning the TV, take care not to scratch or damage the screen surface. Avoid wearing jewelry or using anything abrasive. Do not use household cleaners. Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool, clear water and a mild soap or detergent. Use a clean, dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation holes or slots in the back cover of the set.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.



Active Control • Active Control continuously measures and corrects the incoming signals to provide the best picture possible.

Alternate Channel • Allows you to toggle between the last two channels viewed by pressing the A/CH button on the remote control.

Audio/Video Inputs • These jacks are designed to receive higher picture resolution and offer sound-connection options.

Auto Programming • This feature scans for all available channels from regular antenna or cable signals and stores only active broadcast stations in the TV's memory.

Channel Edit • The feature that allows you to add or delete channels from the list of channels stored in the TV's memory.

Closed Captioning • The broadcast standard feature that allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, Closed Captioning shows dialogue and conversations while a TV program is in progress.

Coaxial Cable • A single solid wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75-ohm input found on the television or VCR.

Component Video Inputs • Inputs that allow the separate reception of blue, red, and luminance signals. These inputs provide the highest possible color and picture resolution in the playback of digital signal-source material, such as the kind available from DVD players.

Composite Video Input • An input in which all the components required for displaying the onscreen image are combined in one signal.

High-definition Television (HDTV) • High-resolution digital television.

Incredible Stereo (or Surround) • Produces a dramatic expansion of the wall of sound that surrounds the listener.

Menu • An onscreen list of feature controls.

Onscreen Displays (OSD) • The wording or messages generated by the television (or VCR) to help you with specific feature controls (color adjustment or programming, for example).

Remote Control Sensor Window • The window found on the television through which infrared command signals are received.

Second Audio Program (SAP) • An additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. A monaural soundtrack included within the recorded or video signal (usually containing a second language translation for the displayed programming).

Status/Exit Button • The remote control function that allows you to confirm the current channel. Status/Exit can also be used to clear the screen of menu displays or information.

S-Video Input • Signal input that allows direct connection of high-resolution video sources, such as a satellite receiver, DVD player, S (Super)-VHS videocassette recorder, or video games. Provides improved picture resolution, sharpness, and clarity.



INDEX

| | | | |
|---|-------|---|-------|
| Active Control™ | 25 | Index | 56 |
| Alternate Channel Control | 42 | Language Control | 6 |
| Audio Out Control | 17 | Name Control (Channel Label) | 10 |
| AutoChron™ Control | 11 | Picture Control | 12 |
| AutoLock™ Controls | | Picture-In-Picture (PIP) Features | 49-52 |
| Access Code | 27 | Registration of TV Information | 2 |
| AutoLock™ Status Screen | 33 | Remote Control Use with Accessory Devices | |
| Blocking Programs based on Movie Ratings | 29 | Accessory Specific Remote Control Buttons | 48 |
| Blocking Programs based on TV Ratings | 30 | Code-Entry Method of Identification | 44 |
| Blocking Channels | 28 | Direct Access Method of Identification | 43 |
| Blocking Control (Activating Blocking Controls) | 31 | Direct-Entry Code List | 46-47 |
| Blocking based on No Ratings | 32 | Search Method of Identification | 45 |
| Understanding the AutoLock™ Features | 26 | Rotation Control | 36 |
| AutoPicture™ Control | 40 | Safety Information | 3 |
| AutoProgram Control | 8 | SAP (Secondary Audio Programs) Control | 16 |
| AutoSound™ Control | 41 | Screen Format Control | 35 |
| AVL (Automatic Volume Leveler) Control | 14 | Sharpness Control | 12 |
| Balance Control | 13 | Sleep Timer Control | 38 |
| Bass Control | 13 | Stereo/Mono Control | 16 |
| Blue Mute Control | 37 | Surf (Channel Surf) Control | 42 |
| Brightness Control | 12 | Timer Controls | |
| Care and Cleaning Information | 54 | Activate Control | 23 |
| Channel Edit (Add/Delete Channels) Control | 9 | Clock, Time Control | 19 |
| Closed Captioning | 34 | Display Control | 24 |
| Color Control | 12 | Start Channel Control | 22 |
| Color Temperature (Color Temp) Control | 12 | Start Time Control | 20 |
| Digital Options (Eye Fidelity™) Control | 12 | Stop Time Control | 21 |
| Dyn(amic) Contrast Control | 12 | Tint Control | 12 |
| Factory Service Locations | 57-58 | Treble Control | 13 |
| Feature Highlights | 5 | Troubleshooting | 53 |
| Freeze Control | 39 | Tuner Mode Control | 7 |
| Glossary of Terms | 55 | TV Speaker Control | 18 |
| Incr.(edible) Surround Control | 15 | Warranty (Limited) | 60 |

FACTORY SERVICE LOCATIONS



NOTE: If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

NOTA: Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

NOTA: Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at

1-800-661-6162 (French speaking)

1-800-531-0039 (English or Spanish speaking)

Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veuillez contacter philips à:

1-800-661-6162 (Francophone)

1-800-531-0039 (Anglais ou Espagnol)

En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio

Favor de comunicarse con Philips al:

1-800-661-6162 (Francés)

1-800-531-0039 (Inglés o Español)



FACTORY SERVICE LOCATIONS

QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND,

KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE.

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

ATLANTA

Philips Factory Service
550 Franklin Road., Suite F
Marietta, GA 30067
800-273-1501

TAMPA

Philips Factory Service
1911 US Highway 301 North, Suite 100
Tampa, FL 33619
800-442-2027

SAN FRANCISCO

Philips Factory Service
681 East Brokaw Rd.
San Jose, CA 95112
800-300-9013

HOUSTON

Philips Factory Service
1110 N. Post Oak Rd., Suite 100
Houston, TX 77055
800-952-3254

CLEVELAND

Philips Factory Service
950 Keynote Circle
Brooklyn Heights, OH 44131
800-331-7037

DETROIT

Philips Factory Service
25173 Dequindre
Madison Heights, MI 48071
800-438-1398

DALLAS

Philips Factory Service
415 N. Main Street, #107
Euless, TX 76040
800-952-3254

LOS ANGELES

Philips Factory Service
20930 Bonita, Ste. V
Carson, CA 90746
800-300-9013

CHICAGO

Philips Factory Service
1279 W. Hamilton Pkwy.
Itasca, IL 60143
800-531-2922

KNOXVILLE

Philips Factory Service
One Philips Drive
Knoxville, TN 37914
800-821-1767

PHILADELPHIA

Philips Factory Service
352 Dunks Ferry Rd.
Bensalem, PA 19020
800-847-9320

[illegible]

LIMITED WARRANTY

COLOR TELEVISION

90 Days Free Labor

One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube)

This product can be repaired in-home.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. *For 90 days thereafter*, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

FOR WARRANTY COVERAGE IN CANADA...

Note: Product Warranty coverage may vary between countries where product is distributed by Philips Consumer Electronics Company. In order to receive full and specific warranty details for products sold and serviced in Canada, please contact Philips at:

1-800-661-6162 (from Canada - French Speaking)

1-800-531-0039 (English and Spanish Speaking)

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 520890, Miami, FL 33152, (402) 536-4171